

ezeio™ Controller and the 2400-A16 input expansion.



Important Supplementary Manual.

ezeio Controller and the 2400-A16 input expansion Manual Index.

Product Liability.	Page 2
Description.	Page 3
Ordering Information.	Page 3
ezeio Controller Compatibility.	Page 3
Section 1 - ezeio Controller.	Page 4
<i>Configuring the ezeio Controller local inputs.</i>	Page 4
<i>Getting started with configuration.</i>	Page 4
<i>Easy steps for Calibration.</i>	Page 5
Section 2 - 2400-A16.	Page 7
<i>Intech Micro 2400-A16 Station</i>	Page 7
<i>Adding a 2400-A16 station to an ezeio Controller.</i>	Page 7
<i>Getting started with configuration.</i>	Page 8
<i>Configuring the ezeio Controller.</i>	Page 9
<i>Example 1: eze temperature input scaling for RTD's and thermocouples.</i>	Page 10
<i>Example 2: For all other analogue values the 2400-A16 outputs to eze...</i>	Page 11
<i>Example 2.1: Analogue Flow meter.</i>	Page 11
<i>Example 2.2: Analogue Pressure sensor.</i>	Page 12
<i>Example 2.3: Digital Flow Meter.</i>	Page 13
<i>Example 2.4: State On/Off.</i>	Page 14
On Site Calibration Trim.	Page 14
Section 3 - Alarms.	Page 15
Using a data GSM/3G SIM in the ezeio-GSM Controller.	Page 16

Note: The eze System uses US English, so some spelling/terminology differs.

ezeio™ is a trademark of **eze System, Inc.**

Product Liability. This information describes our products. It does not constitute guaranteed properties and is not intended to affirm the suitability of a product for a particular application. Due to on-going research and development, designs, specifications, and documentation are subject to change without notification. Regrettably, omissions and exceptions cannot be completely ruled out. No liability will be accepted for errors, omissions or amendments to this specification. Technical data are always specified by their average values and are based on Standard Calibration Units at 25C, unless otherwise specified. Each product is subject to the 'Conditions of Sale'.

Warning: These products are not designed for use in, and should not be used for patient connected applications. In any critical installation an independent fail-safe back-up system must always be implemented.

ezeio™ Controller and the 2400-A16 input expansion.

4 Analogue Inputs.
Interface with 2400-A16 for Input Expansion.
Internet Based Setup and Monitoring.

Description.

The ezeio™ Controller comes ready to start monitoring, logging and controlling over the Internet. As soon as the controller is connected to power and an Internet connection, it will start communicating with the eze System servers. There is no need for special software or network setup. The ezeio connection is encrypted, bi-directional and very efficient.



ezeio™ Controller and the 2400-A16 input expansion.

Ordering Information.

ezeio-STD	ezeio Controller with Ethernet port, 4 analogue inputs and Modbus-RTU RS-485 Comms.
ezeio-GSM	ezeio Controller with GSM/3G transceiver, Ethernet port, 4 analogue inputs and Modbus-RTU RS-485 Comms.

ezeio Controller Compatibility.

The Modbus-RTU RS-485 port on the ezeio controller can be used to connect to **Intech Micro Stations: 2400-A16, 2400-M-R and 2100-A16**. This allows the controller to be expanded to log up to 40 channels max per ezeio controller. If additional relay outputs are required, the **2400-R2** can be connected to the **2400-A16** for relay expansion - refer to the 2400-A16 Installation Guide for more information.


Section 1 covers the ezeio Controller 4 local inputs, and **Section 2** covers adding the power of the 2400-A16, to expand the inputs up to 40, plus adding more outputs.

Section 1 - ezeio Controller.

Configuring the ezeio Controller local inputs.

The ezeio™ controller has four standard inputs. Each input may be configured individually in one of the four ways described here:

Jumper setting	Description
	0~5Vdc. Input impedance is >70kOhm. Raw reading is about 10000 at 5.0V (0.5V per count).
	0~10Vdc. Input impedance is >70kOhm. Raw reading is about 10000 at 10.0V (1mV per count).
	0~30mA (suitable for 4~20mA transducers). An internal 100 Ohm resistor connects the input terminal to Common. Raw reading is about 10000 at 30mA (3uA per count).
	Contact, Pulse or Resistive (0~50Ohm). An Internal 10K resistor will hold the input to 5V. <i>This is the factory default setting.</i>

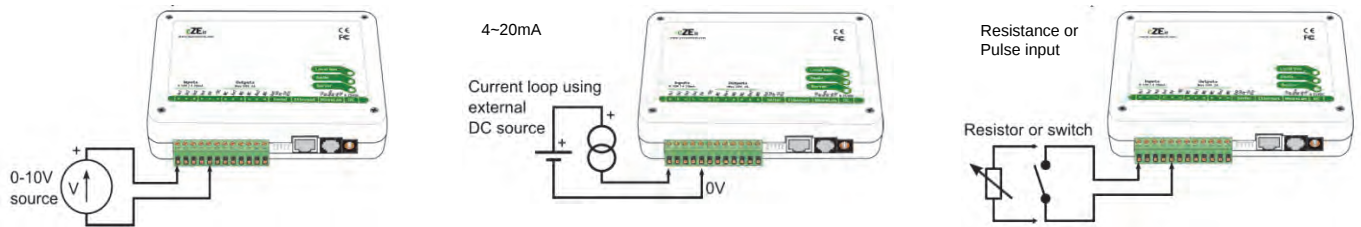


To access the input jumper settings, open the ezeio™ by removing the four black screws.

Read the eze User Manual pages 13 through to and including page 16, covering input connections.


Getting started with configuration.

Go to www.ezecontrol.com

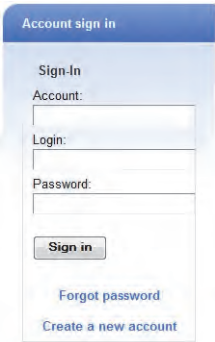

Enter your Account number, Login and Password.

Click on the 'Configure' tab
And then the + by the Inputs:

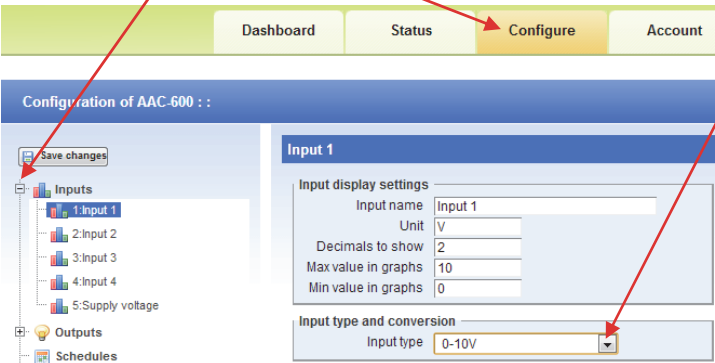

Now select which input you wish to configure. Select the 'Input type' to match the configuration of the 'Jumper' setting in the table above. Always remember to select 'Save Changes' after making a change.

Important Note: The analogue inputs have a nominal calibration only (ex factory), and where accuracy is required, individual calibration of each channel is required. This is done with the use of an accurate signal calibrator.

Easy steps for Calibration.

1. As an example: on the ezeio Controller Input 2, the analogue input is set to 0~10Vdc. Apply an accurate 10Vdc signal to this input and on the eze 'Status Page', note the 'Raw' reading on channel 2. In this example below the Raw reading = 9798.



2. Now go to the eze Configure page and click on 'Input type' and select 'Custom' as shown.

The screenshot shows the 'Configure' tab for Input 2. The 'Input type and conversion' section is expanded, and 'Custom' is selected for the 'Input type'. A red arrow points to the 'Input name' field, which contains 'Input 2'. Another red arrow points to the 'Input type' dropdown menu, which is set to 'Custom'.

Note: Do not use the percentage symbol in the 'Input name' and 'Unit' text boxes, as this will result in an error.

3. Now click on 'Linear analog' and enter the values as shown next:

The screenshot shows the 'Two point calibration for analog input' dialog box. It has fields for 'Point 1' and 'Point 2'. Point 1 has 'Raw value 1' set to 0 and 'Value' set to 0. Point 2 has 'Raw value 2' set to 9798 and 'Value' set to 10. There are 'Use' and 'Cancel' buttons at the bottom.

Point 1 and Point 2 are what we want this input to read, which in this example is '0~10Vdc'.

Point 1 is the zero point, which is 0 for the Raw Value and 0 for the Value.

Point 2 = 9798 which is the Raw Value from step 1 at 10Vdc input, and the 'Value' for this example we want to read 10.


If you wish this to actually read another value, for example 100% then enter 100.

Click on 'Use'.

4. Now click on 'Save changes' and go back to the eze 'Status' tab.

The screenshot shows the 'Configure' tab for Input 2. A red arrow points to the 'Save changes' button in the top left corner of the configuration panel.

5. The Status screen now displays input 2 at exactly 10.00 (or whatever value you have entered).

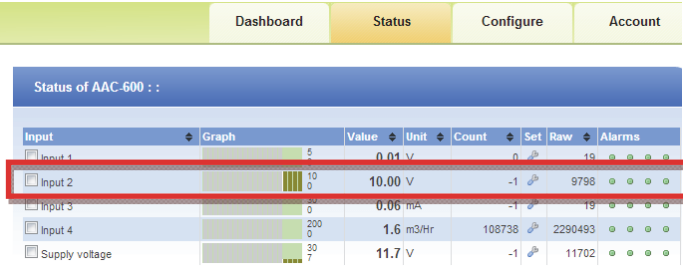

6. If you require good accuracy at a particular point of the span, then calibrate at that point instead of the full span point.
7. For the best average accuracy calibrate the scale between 0~75% of span.
8. Apply this procedure (as applicable) to all other analogue inputs on the ezeio Controller inputs to achieve accurate calibration.

Section 2 - 2400-A16.

Intech Micro 2400-A16 Station.

The **2400-A16** is a high quality, high accuracy I/O station (input/output expansion station), designed for a wide variety of applications.

Up to 16 Isolated Universal Analogue Inputs, with Plug In Terminals.
Each Input is fully Isolated and Individually Selected & Scaled.

RTD, T/C, mA, mV, V & Pulse/Digital as follows:

RTD: Pt100/Pt1000, -200~320°C to -200~800°C.

T/C: B, E, K, J, N, R, S, T, with CJC.

mA: 4~20mA, 0~2.5mA.

mV: -25~25mV to -200~200mV.

V: 0~1V to 0~15V.

Pulse/Digital: Meter pulses, Counting and Frequency.

Max speed 2500Hz.

Four Isolated Digital Inputs.

State or Count.

Max speed 8000Hz.

Two Analogue, Isolated, 4~20mA Outputs.

Two Isolated, Relay Outputs for alarm or control.

Comms Ports (connecting to ezeio):

Port 1: Isolated RS485.

Port 2: Isolated RS485.

USB programming port via XU-USB programming key.



2400-A16 Notes:



1. More than one 2400-A16 can be added to a ezeio controller.
2. The ezeio Controller will accept up to **40 inputs total** per ezeio controller (this also includes the 4 analogue inputs on the ezeio controller if they are used).
3. The 2400-A16 is available with 2 options for the number of analogue inputs: 8 inputs or 16 inputs.

Adding a 2400-A16 station to an ezeio Controller.

Follow these steps to add one or more 2400-A16's:

Disconnect both the ezeio Controller and 2400-A16 from the power supply.

First is to connect the 2400-A16 to the ezeio Controller's 'ModBus 485' port.
The 2400-A16's comms ports 1 & 2 are both Modbus RTU RS485 capable.

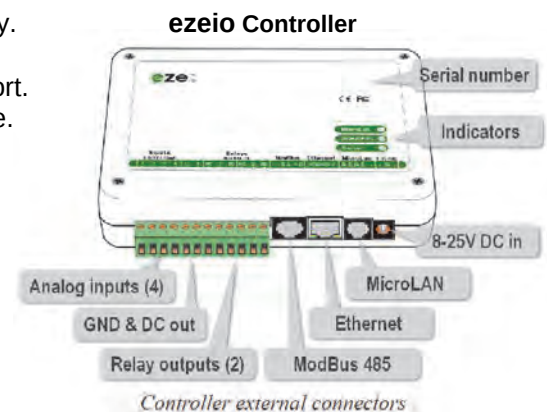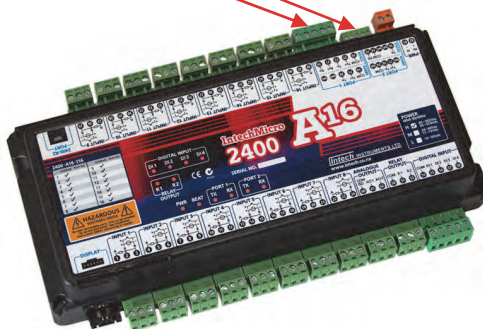


Connection to the ezeio Controller 'ModBus 485' port is by using a standard Ethernet cable plugged into the ezeio Controller and broken out to twisted pairs.

Two of these pairs are used to connect to one of the 2400-A16 RS485 ports, to the 'ModBus 485' port of the ezeio Controller as follows:

Blue pair:	Blue	= 70 on 2400-A16 comms.
	Blue/White	= 71 on 2400-A16 comms.
Brown pair:	Brown	= 74 on 2400-A16.
	Brown/White	= not connected.

Getting started with configuration.


The first task is to configure the 2400-A16.

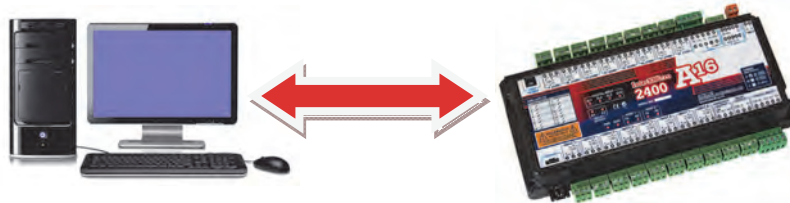


Connect the 2400-A16 to a computer as covered bottom of page 16 in the '2400-A16 Installation Guide'.
If you do not already have a copy of the 'Intech Micro Station Programmer Software', download and install from this link:

www.intech.co.nz/downloads/Install-StationProgrammer.html

Run the 'Intech Micro Station Programmer Software'.

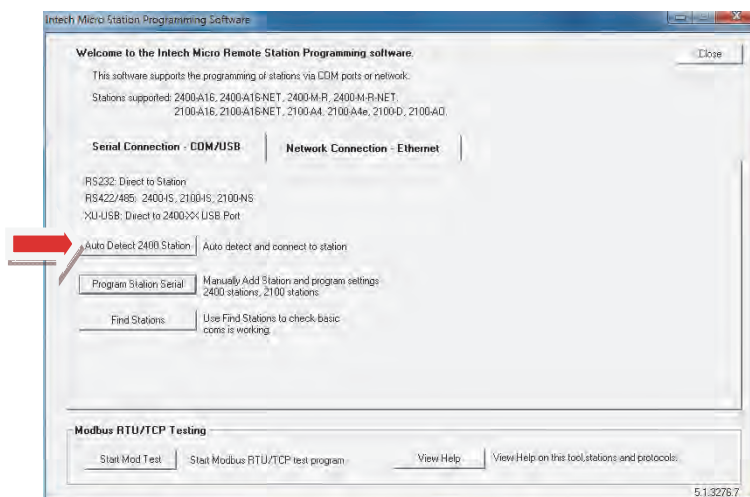


Click on the 'Auto Detect 2400 Station' button.

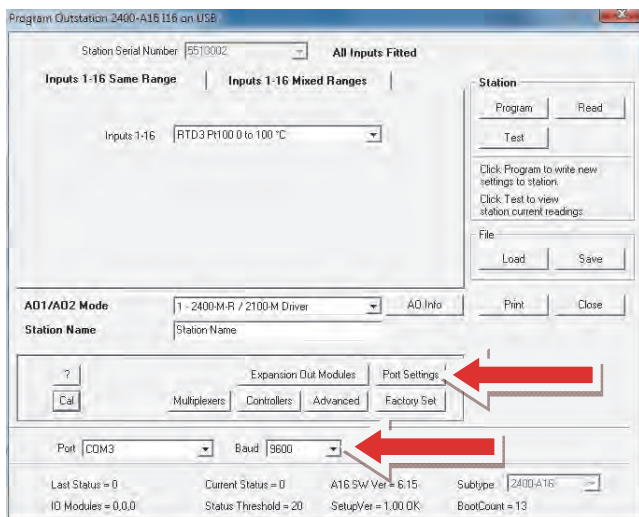

Configure the required input channel settings as shown.

The 2 important areas to make the same as the eze is the **Baud rate** and the **'Port Settings'**.
This 2400-A16 configuration screen (left) displays the parameters the 2400-A16 should be set to, with special attention to the **'Address'** which is referred to on the ezeio Controller as the **'Polling address'**.

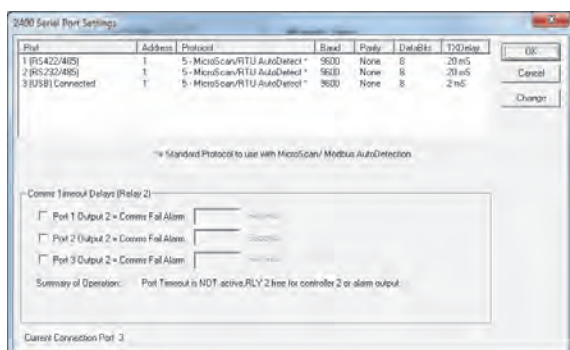

Note that on the 2400-A16, the 'Address' number can be set differently for each (comms) port, so make sure the 2400-A16 port used for the ezeio Controller is the same as that used in the ezeio Controller.

Remember that if two or more 2400-A16's are connected to the ezeio Controller, the 2400-A16 '**Address**' and corresponding eze '**Polling address**' on the additional unit(s) must be set to a different number.
Never use the same number twice.

For example, the 2nd 2400-A16 'Address' and eze corresponding 'Polling address' may be set to **2**.

Configuring the ezeio Controller.

Go to www.ezecontrol.com

Enter your Account number, Login and Password.

The first task is to add the 2400-A16 onto the ezeio Controller. Click on the 'Configure' tab and wait for the Configure screen to appear:

Click on 'Devices' and then click on 'Add device'.

Select '**Intech A16**' in the drop down list.
Next, enter the 'Serial/ModBus address', which must be set the same in the 2400-A16 as well. In this example, **1** has been entered:

Click on 'Add device'.

Configuration of AAC-600 :

Save changes

Inputs
Outputs
Schedules
Timers
Thermostats
Devices
Script
System

Informational settings
Controller name
Controller location
System info email
Time zone: US/Samoa [UTC-11:00]
Note

Access control settings
Read passcode
Control passcode: 538-CSO
Registration code: 1220-NIYM-1660
Allow firmware update: ☒
Allow config update: ☒
Allow dealer access: ☒ (Intech)
Service add: ☐ only by dealer
Delete controller

Device clone
Clone controller: AAC-268
Clone selected controller

Modbus setting
Modbus speed: 9600 bps
Use slow polling: ☒
Custom protocol: ☐ (full control from script)

Next, click on 'System'.

Set the 'Modbus speed' (i.e. Baud rate) to the same as that of the 2400-A16 (as shown). It is recommended to also tick the 'Use slow polling' box.

Note: Not all the options are shown.

Next task is to add the 2400-A16 inputs onto the ezeio Controller:

Configuration of AAC-600 :

Save changes

Inputs
Outputs
Schedules
Timers
Thermostats
Devices
Script
System

Inputs

#	Input name	Unit	Alarms	Log
1	Input 1	V	0	5 min
2	Input 2	V	0	no logging
3	Input 3	mA	0	no logging
4	Input 4	m3Hr	0	no logging
5	Supply voltage	V	0	no logging

Add input

This controller saves 288 samples per day.

Click on 'Inputs' and then click on 'Add input'.

Important! eze System inputs cannot be re-ordered, so the **initial setup is critical!**

Example 1: eze temperature input scaling for RTD's and thermocouples.

board Status Configure Account

Input 6

Input display settings
Input name: Control Rm Ambient temperature
Unit: C
Decimals to show: 1
Max value in graphs: 100
Min value in graphs: 0

Input type and conversion
Input type: Custom
Calculate: Linear analog Pulse
Input Raw to unit: x/1000
Unit to input Raw: x*1000
Verification: OK - equations match
Digital pulse input: ☐ value is time between pulses in ms

Logging
Log interval: 1 min

Hardware/device setting
Input location: new Intech A16 1, Input 1 (x1000) [17]

Alarm setting summary
Add alarm

Select 'Custom' for all 2400-A16 input configurations.

Type in these 2 calibration details for all listed temperature probes, both RTD and Thermocouple.
The 2400-A16 sends the exact temperature to the ezeio Controller.

Chose a 'Logging' time.

Note: Failure to select a Logging time will result in this input not being viewable on eze.

In this case, the Ambient Temperature Probe is wired in the 2400-A16, input 1.

Configuration of AAC-600 :

Save changes 

Inputs

#	Input name	Unit	Alarms	Log
1	Input 1	V	0	5 min
2	Input 2	V	0	no logging
3	Input 3	mA	0	no logging
4	Input 4	m3/Hr	0	no logging
5	Supply voltage	V	0	no logging

Add input

This controller saves 288 samples per day.

Click on 'Save changes'.

Click on the 'Status' tab to see the Temperature.

Example 2: For all other analogue values the 2400-A16 outputs to eze, 0~100% over the range selected on the 2400-A16 as per the table shown, which makes configuration very easy.

DC16 4 to 20 mA

DC16 4 to 20 mA

DC17 0 to 40 mA

DC18 0 to 100 mA

DC19 -25 to 25 mV

DC20 -50 to 50 mV

DC21 -100 to 100 mV

DC22 -250 to 250 mV

DC23 -500 to 500 mV

DC24 -1 to 1 V

DC25 -2.5 to 2.5 V

DC26 -5.0 to 5.0 V

DC27 -10.0 to 10.0 V

DC28 -15.0 to 15.0 V

DC29 -1 to 1 mA

The ezeio controller displays input values from the selected range.

Table of how eze scales this input:	
2400-A16 output value to eze	eze Raw value
0	0
100	100,000

Input 7

Input display settings

Input name: Water Flow Meter

Unit: m3/Hr

Decimals to show: 2

Max value in graphs: 60

Min value in graphs: 0

Input type and conversion

Input type: Custom

Calculate: Linear analog Pulse

Input Raw to unit: x

Unit to Input Raw: x

Verification: OK - equations match

Digital pulse input: ☐ value is time between pulses in ms

Select 'Custom'.

Click on 'Linear analog'.

Two point calibration for analog input

Enter the values from the raw column on the status page for two known measurements.

Point 1

Raw value 1: 0

Value: 0

Point 2

Raw value 2: 100000

Value: 60

Result

Raw to Real:

Real to Raw:

Use **Cancel**

Point 1 is the zero point. As the flow meter range is 0~60m3/Hr, at zero flow, the Raw value and the flow meter value = 0.

Point 2 is Full Scale, which in this case is 60m3/Hr. At full scale input, the Raw value will be 100000, and the flow meter value = 60.

Click on 'Use' to enter this calibration setting.

Configuration of AAC-600 :

[Save changes](#)

Inputs

#	Input name	Unit	Alarms	Log
1	Input 1	V	0	5 min
2	Input 2	V	0	no logging
3	Input 3	mA	0	no logging
4	Input 4	m3/Hr	0	no logging
5	Supply voltage	V	0	no logging

[Add input](#)

This controller saves 288 samples per day.

Click on 'Save changes'.

Click on the 'Status' tab to see the flow meter reading.

Example 2.2: This next example is a compound range such as a pressure transmitter that has a span of -1~9Bar.

Input 8

Input display settings

Input name: Compressor Suction Pressure

Unit: Bar

Decimals to show: 1

Max value in graphs: 9

Min value in graphs: -1

Input type and conversion

Input type: Custom

Calculate: Linear analog Pulse

Input Raw to unit: x

Unit to input Raw: x

Verification: OK - equations match

Digital pulse input: ☐ value is time between pulses in ms

Select 'Custom'.

Click on 'Linear analog'.

Two point calibration for analog input

Enter the values from the raw column on the status page for two known measurements.

Point 1

Raw value 1: 0

Value: -1

Point 2

Raw value 2: 100000

Value: 9

Result

Raw to Real: $x/100000-1$

Real to Raw: $(x+1)*10000$

[Use](#) [Cancel](#)

Point 1 is the zero point. As the pressure transmitter range is -1 at minimum range, the Raw value and the pressure sensor value = 0, but the Value = -1Bar.

Point 2 is Full Scale, which in this case is 9Bar. At full scale input, the Raw value will be 100000, and the Value = 9.

Click on 'Use' to enter this calibration setting.

Configuration of AAC-600 :

[Save changes](#)

Inputs

#	Input name	Unit	Alarms	Log
1	Input 1	V	0	5 min
2	Input 2	V	0	no logging
3	Input 3	mA	0	no logging
4	Input 4	m3/Hr	0	no logging
5	Supply voltage	V	0	no logging

[Add input](#)

This controller saves 288 samples per day.

Click on 'Save changes'.

Click on the 'Status' tab to see the pressure.

In this example, the water flow meter has a range of 0–80Hz = 0–1000 l/sec (litres per second), and this signal is wired into one of the 16 analogue inputs on the 2400-A16.

- The closest range on the 2400-A16 is 0~100Hz.

Therefore 1250 will be value used for full scale reading.

Input type and conversion

Input type: Custom

Calculate

Input Raw to unit: x

Unit to input Raw: x

Verification: OK - equations match

Digital pulse input: ☐ value is time between pulses in ms

- Click on 'Linear analog'.

Point 1 is the zero point. As the flow meter range is 0~1000Hz, at zero flow, the Raw value and the flow meter value = 0.

Click on 'Use' to enter this calibration setting.


Click on 'Save changes'.

Click on the 'Status' tab to see the pressure.

Example 2.4: This example is displaying an on/off state e.g. motor run/stop, valve open/closed, alarm on/off.

Using a spare analogue input.


Using the 'Intech Micro Station Programmer Software', setup a spare analogue channel as a PD1 Pseudo Digital (N/O) or PD2 Pseudo Digital (N/C).

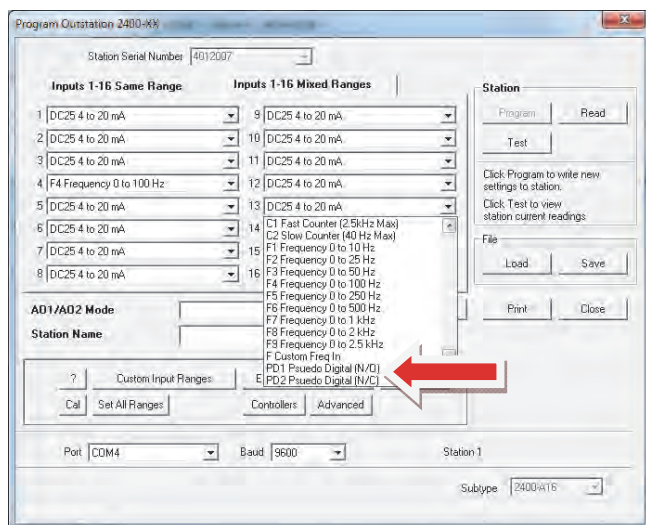

Actual connection onto the spare 2400-A16 channel looks like this using a clean contact:



On eze, setup the input configuration for this 2400-A16 channel as below:

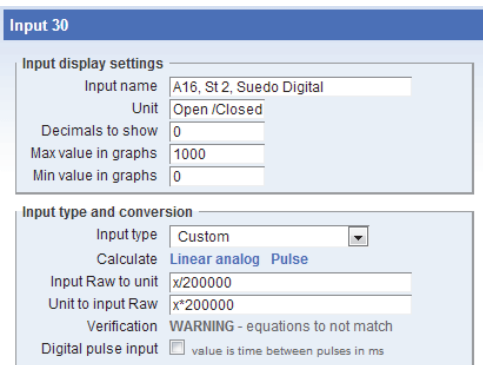

This will display on easy as '0' or '100%'.

In the above example, it is logging a valve which is 0% closed or 100% open.

The four Digital inputs on the 2400-A16 are also available, but need to be initialised by eze.

On Site Calibration Trim.

When an onsite calibration offset or zero adjustment is required to correct the reading on the eze web, follow this procedure:

With a Laptop or Tablet running Windows 7/8/8.1/Vista or XP, connect to the 2400-A16 using the **XU-USB programming key** available from an Intech Instruments Ltd distributor.



You will also need to install the "Station Programmer" software (free to download) from the following link:

www.intech.co.nz/downloads/Install-StationProgrammer.html

Use the "Cal" button on the "Station Programmer" software to individually offset the input channels to the desired reading.

For further information, please refer to the 2400-A16 Installation Guide - pages 8, 16 and 19.

Section 3 - Alarms.

The eze system provides a powerful mix of alarm outputs including: alarm relay actuation on the ezeio controller and 2400-A16 relay outputs, email alarm messages, SMS text messages. All of this is covered in the eze User Manual starting on page 35.

Supplementary notes: Terminology varies a little compared to SCADA but is easy to follow.

1. Alarmaction 1 for Alarm 1 on Input 2

Action display settings	
Action name	Station 1 High Alarm
Action settings	
Action type	Set output
Output	A16-1 RE 1
Cadence	on
Cutoff	0 seconds
Conditions	
First condition	no condition
Second condition	no condition
Do action if	☒ both conditions are true (AND) ☐ either or both are true (OR)

When in this alarm configuration screen, leave the configuration as it is shown here.

2. Two set point settings are required, one for setting the alarm, and the 2nd for unsetting the alarm as per this screen shot:

Alarm 1 on Input 2

Alarm display settings	
Alarm name	Station 1 High alarm
Alarm settings	
Threshold for alarm	25 C
Holdoff	5 seconds (0.1 - 6000)
Restore settings	
Threshold for restore	19 C
Holdoff	5 seconds (0.1 - 6000)

3. Example for configuration of a SMS text alarm message:

Alarmaction 1 for Alarm 2 on Input 2

Action display settings	
Action name	txt alarm
Action settings	
Action type	Send message
Destination	+6421
Message	ALARM on ~ #VAL02# ~ Temp

Important note: The monthly 'Service plan' fee you chose from eze has a monthly limit on SMS text messages. Be careful when configuring and saving configuration changes, as this resets the alarm code and will generate another text message on any text alarms that have been activated.
Move the alarm set point clear of any alarm point to prevent wasting text messages when editing.


The mobile phone number for the text message.

Note: International format of mobile phone number is required.
i.e. New Zealand = +642xxx

Using a data GSM/3G SIM in the ezeio-GSM Controller.

This section is for the **ezeio-GSM** controller model only.

1. Obtain a data GSM/3G SIM with no password. (Note: the ezeio-GSM controller takes a standard size SIM card.)
2. Place SIM in a mobile phone to activate as per the providers instructions, or get the provider to do this at the time of purchase.
3. Place the SIM in the ezeio-GSM Controller with the chisel edge of the SIM at the top left (as shown circled below).
4. Follow the instructions in the ezeio-GSM Controller Instruction Manual starting page 21.

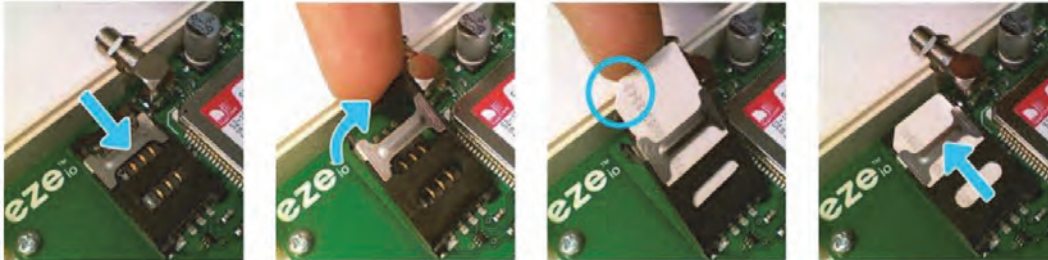

5. Connect via Ethernet and login to www.ezecontrol.com
6. In the eze Configuration area, click on "System":

Setting required for New Zealand - **GPRS APN** (leave all other areas blank) - match to your provider as listed below:

GSM/GPRS radio settings	
Phone module PIN	
SIM card PIN	
GPRS APN	vodafone
GPRS login name	
GPRS password	

Vodafone APN: **vodafone**

Telecom APN: **wap.telecom.co.nz**

2degrees APN: **internet**

7. Click 'Save changes'. Remove the Ethernet connection and turn the Power off/on. Check that a connection via GSM/3G has been established in the eze System.

If you are outside New Zealand please contact your local GSM/3G provider for the data GSM/3G SIM and the APN settings needed.

Note: Initial connection via Ethernet is required for ezeio setup before the GSM/3G connection can be used.

Important: We strongly recommend having the **data GSM/3G SIM on account**.

Using Prepay will result in no connection if the credit runs out (if this happens, then once more credit has been added, the eze system will need to have the power turned off/on in order to re-establish a connection).

This is not an issue with on account data plans.

Intech INSTRUMENTS LTD

www.intech.co.nz

Christchurch Ph: +64 3 343 0646
Auckland Ph: 09 827 1930
Email: sales@intech.co.nz

eze/2400-A16 250314