# tempmate.º-G52

## OPERATION INSTRUCTIONS

#### START LOGGER

Continuously press the green Start button for more than 5 sec.

The screen starts flashing the word "START", indicating the logger start. At this time, the iconer is displayed on the left side of the screen, indicating that the logger has been started successfully.

### STOP LOGGER

Continuously press the red Stop buttor for more than 5 sec.

When the screen starts flashing the symbol **BBBBB** , Please release the button and the logger stops.

Optionally, the logger can be configured for stop from the cloud platform remotely or by connecting to the USB port.

# **DISPLAY INDICATION**

- ✓ The temperature is normal.
- X The threshold has been exceeded.
- **HI** The high threshold has been exceeded.
- LO The low threshold has been exceeded.

