

# LAQUA

## Quick Manual

Portable Turbidity Meter  
LAQUA-TB220



\*Four AA batteries are required for use.

[www.horiba-laqua.com](http://www.horiba-laqua.com)

**HORIBA**

### Components



Turbidity (SDVB) standard solution vials  
0.02, 20, 100, 800 NTU



Sample vial x 4



Silicone oil



Cloth

Use the turbidity (SDVB) standard solutions (0.02, 20, 100, and 800 NTU) to perform a four-point calibration.

1. Wipe the standard solution vial with the supplied cloth. Then, place it into the meter, aligning the arrows on the vial and the holder, and close the cover.



2. Press the on the meter to switch to calibration mode.

Select the calibration point using the keys.

\*Four-point calibration is recommended for accurate measurement of the entire measurement range.

3. Press the ENT key to start calibration. When the symbol stops blinking, press the ENT key again to confirm and save the calibration data. The next calibration point will appear on the screen.




4. Repeat steps 2 and 3 for each standard solution vial. After completing the four calibration points, the screen will switch to measurement mode.




### Measurement

1. Pre-wash inside of the sample vial with a portion of the sample, then fill it up to the mark with the remaining sample and tighten the cap.

2. Wipe the vial with the supplied cloth and place it into the meter. Align the arrows on the vial and the holder, then close the cover.

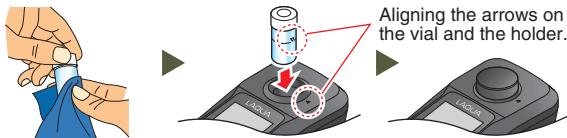

3. Press the MEAS key to start measurement. When the symbol stops blinking, record the reading or press the ENT key to save the data.

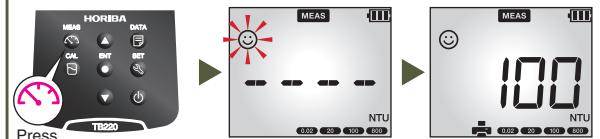

## Operating Precautions

- Place the meter on a flat surface and wait for the sample level to stabilize before performing measurement.
- Before measurement, wipe off any stains or smudges, such as fingerprints, from the vial using the supplied cloth.
- If the vial becomes scratched, it needs to be replaced.
- Use standard solutions for calibration that have not expired.
- If condensation occurs on the vial, wipe it off with the supplied cloth.
- If the operating environment temperature changes suddenly, allow the meter to stand for at least 15 minutes to acclimate to the ambient temperature.



## Videos

### Calibration



### Measurement



## Meter Settings



Press



Press



Press up and down  
keys to scroll through  
the setting items.

#### P4 CLK

- P4.1: Year, month, and day settings
- P4.2: Time settings



#### P3 GEN

- P3.1: Auto power off setting
- P3.2: Factory reset



#### P2 DATA

- P2.1: All data printing settings
- P2.2: Delete all saved data



#### P1 C.CLR

- P1.1: Clear calibration



Press



Press ENT key to  
confirm the settings.

