



Instructions for Installing HOBO® RX3000 Analog Sensor or Relay Module (RXMOD-A1 & RXMOD-R1)

1. Stop the station if currently logging.
2. Press the Connect button and wait for the station to connect to HOBOLink and offload the latest data before a new module is added.
3. Power down the station by unplugging any charging device and then disconnecting the battery.
4. Insert the connector on the back of the module into the receptacle in the left or right module slot. Install the relay module on the right for easier cable routing.
5. Using a Phillips-head screwdriver, tighten the screw at the bottom of the module.
6. Connect any sensors or devices to the module as described in the RX3000 station manual (see code and link below).
7. Plug in the battery and charging device and wait for the device to power up. Verify that the new module is listed on the LCD screen.

For instructions on connecting sensors or configuring the module, refer to the station manual. Scan the code at right or go to www.onsetcomp.com/manual/rx3000.

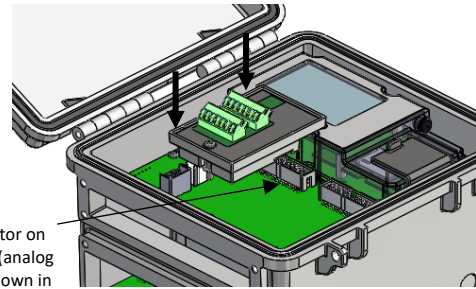

Insert the connector on the module here (analog sensor module shown in this example)

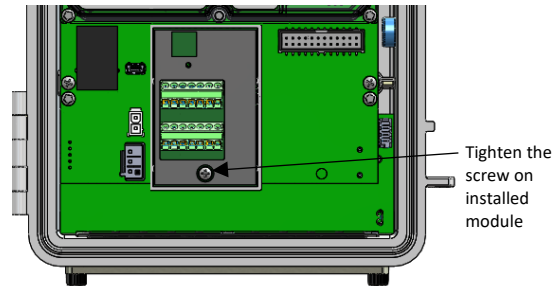

Tighten the screw on installed module

1-800-LOGGERS (564-4377) • 508-759-9500
www.onsetcomp.com/support/contact

© 2015–2020 Onset Computer Corporation. All rights reserved. Onset and HOBO are trademarks or registered trademarks of Onset Computer Corporation. All other trademarks are the property of their respective companies.
18810-D MAN-RXMOD