




Installation and operating instructions intelligent paperless recorder DS400



Including

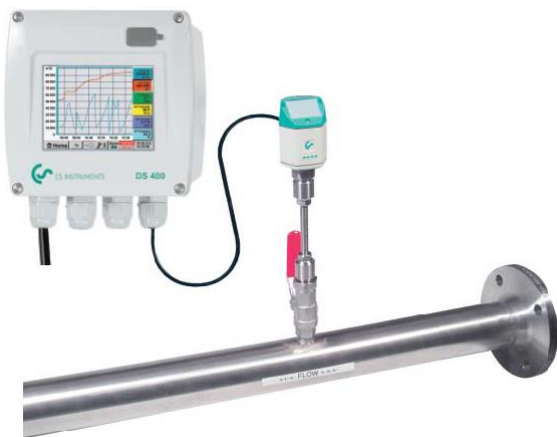

Short-form instruction manual
flow station



Short-form instruction manual
dew point set

I. Foreword

Dear customer,

thank you very much for deciding in favour of the DS 500. Please read this installation and operation manual carefully before mounting and initiating the device and follow our advice. A riskless operation and a correct functioning of the DS 500 are only guaranteed in case of careful observation of the described instructions and notes



Sales Office South / Geschäftsstelle Süd

Zindelsteiner Str. 15

D-78052 VS-Tannheim

Tel.: +49 (0) 7705 978 99 0

Fax: +49 (0) 7705 978 99 20

Mail: info@cs-instruments.com

Web: <http://www.cs-instruments.com>

Sales Office North / Geschäftsstelle Nord

Am Oker 28c

D-24955 Harrislee

Tel.: +49 (0) 461 700 20 25

Fax: +49 (0) 461 700 20 26

Mail: info@cs-instruments.com

Web: <http://www.cs-instruments.com>

Table of Contents

II. Table of Contents

II.	Table of Contents	3
1	Safety instructions.....	6
2	Short-form instruction manual Flow station DS 400 with VA 400 consumption	7
2.1	Connection diagram for variant "Standard"	7
2.2	Connection diagram for variant "Ethernet" (galv. Isolated Impulse output intr. on Ethernet PCB)	7
3	Short-form instruction manual dew point set FA 410 with alarm	8
4	Application area.....	9
5	Technical data DS 400	10
6	Input signal.....	11
7	Cable cross-section.....	11
7.1	Power supply 100 - 240 VAC, 50 - 60 Hz, special version 24 VDC:	11
7.2	Sensor circuit points/Output signal:.....	11
8	Panel / Wall mounting.....	12
9	Connection diagrams DS 400.....	14
9.1	Connections Inputs „A1 – B2“ (Analog- und Digital-Channels)	14
9.2	Connection input „D“ (galv. isolated Impulse output / Impulse signal forwarding support pins).....	15
9.2.1	Basic version (Support pins for impulse forwarding)	15
9.2.2	Option gal. isolated impulse.....	15
9.3	Connection input „E“ (RS485 -- Modbus) (incl. in option Ethernet)	15
9.4	Connection inputs „A - C“ Power supply and 2x Alarmrelais.....	15
10	Connection diagrams of the different sensor types.....	16
10.1	Anschluss CS Taupunktsensoren Serie FA 415/FA 300	16
10.2	Connection for dew point- and consumption sensors, serial FA/VA 400	17
10.3	Connection pulse sensors	18
10.4	Analogue two-, three-, and four-wire current signal	19
10.5	Three- and four-wire power supply 0 - 1/10/30 VDC	22
10.6	Two-, three-, and four-wire connector pin assignments for PT100/PT1000/KTY81	23
10.7	Connection with RS485	23
11	Connect the DS 400 with a PC	24

Table of Contents

12	Operation DS 400	25
12.1	Main menu (Home)	25
12.1.1	Initialization	25
12.1.2	Main menu after initialization	26
12.2	Settings	27
12.2.1	Password-Settings	27
12.2.2	Sensor-Settings	28
12.2.2.1	Choice of the sensor type (For example type CS-Digital sensor)	28
12.2.2.2	Name the measurement data and define the decimal places	31
12.2.2.3	Recording measurement data	31
12.2.2.4	Alarm-Settings	32
12.2.2.5	More Settings (scale analogue output)	34
12.2.2.6	Dew Point Sensor of Type CS-Digital	35
12.2.2.7	Label and setting the description fields	36
12.2.2.8	Configuration of Analog-Sensors	39
12.2.2.8.1	Type 0 - 1/10/30 Volt und 0/4 – 20 mA	39
12.2.2.8.2	Type PT100x and KTY81	41
12.2.2.8.3	Type Pulse (Pulse ration)	42
12.2.2.8.4	Type „No Sensor“	44
12.2.3	Type Modbus	45
12.2.3.1	Selection and activation of Sensor-Type Modbus	45
12.2.3.2	Modbus Settings	45
12.2.4	Device Settings	49
12.2.4.1	Language	49
12.2.4.2	Date & Time	50
12.2.4.3	Network-Settings	51
12.2.4.4	ModBus (Slave)	52
12.2.4.5	Relais Einstellungen	52
12.2.4.6	SD-Card	53
12.2.4.7	System	54
12.2.4.7.1	System update	54
12.2.4.7.2	Save System Settings	54
12.2.4.7.3	Check for new Software updates (USB)	55
12.2.4.7.4	Restore System Settings	56
12.2.4.7.5	Factory Reset	57
12.2.4.8	Calibrate touch-screen	58
12.2.5	Set backlight	58
12.2.6	Cleaning	59
12.2.7	System-Status	59
12.2.8	About DS 400	59
12.2.9	Virtual Channels (optional)	60
12.2.9.1	Option „Virtual Channels“ activation	60
12.2.9.2	Virtual Channels Einstellung	61
12.2.9.3	Selection of Sensor-type	61
12.2.9.4	Configuration of each single virtual value	62
12.2.9.4.1	Activation of a single virtual value	62
12.2.9.4.2	Definition of Operands	62
12.2.9.4.3	Definition of Operations	64
12.2.9.4.4	Definition of Unit	64
12.2.9.5	Value name, resolution of decimal places and recording of values	66
12.2.9.6	Calculation Example „Specific Performance“	67
12.2.10	Analog Total (optional)	69
12.2.10.1	Option „Analog Total“ activation	69
12.2.10.2	Selection of sensor type	70
12.2.11	Webserver (optional)	71
12.2.11.1	Option „Webserver“ activation	71
12.2.12	Data Logger (optional)	73
12.2.12.1	Option „Data Logger“ activation	73
12.2.12.2	Data logger Settings	73

Table of Contents

12.3	Chart	77
12.4	Chart / Real time values	81
12.5	Channels	82
12.6	Real time values	83
12.7	Alarm-Overview	84
12.8	Export Data	85
12.9	Screenshot function	87
12.9.1	Screenshot saving	87
12.9.2	Screenshots export	88

1 Safety instructions



Please check whether this manual corresponds with the device type.

Please attend to all notes indicated in this instruction manual. It contains essential information which has to be followed during installation, operation and maintenance. Therefore this instruction manual has to be read categorically by the technician as well as by the responsible user/qualified personnel before installation, initiation and maintenance.

This instruction manual has to be available at any time at the operation site of the DS 400.

Regional and national regulations respectively, have to be observed in addition to this instruction manual if necessary.

In case of any obscurities or questions with regard to this manual or the instrument please contact CS Instruments GmbH.



Warning!

Supply voltage!

Contact with supply voltage carrying non-insulated parts may cause an electric shock with injury and death.

Measures:

- Note all applicable regulations for electrical installations (e. g. VDE 0100)!
- **Carry out maintenance only in strainless state!**
- All electric works are only allowed to be carried out by authorized qualified personnel.



Warning!

Inadmissible operating parameters!

Undercutting and exceeding respectively of limit values may cause danger to persons and material and may lead to functional and operational disturbances.

Measures:

- Make sure that the DS 500 is only operated within the admissible limit values indicated on the type label.
- Strict observance of the performance data of the DS 400 in connection with the application.
- Do not exceed the admissible storage and transportation temperature.

Further safety instructions:

- Attention should also be paid to the applicable national regulations and safety instructions during installation and operation.
- The DS 400 is not allowed to be used in explosive areas.

Additional remarks:

- Do not overheat the instrument!





Attention!

Malfunctions at the DS 400!


Faulty installation and insufficient maintenance may lead to malfunctions of the DS 400 which may affect the measuring results and which may lead to misinterpretations.

2 Short-form instruction manual Flow station DS 400 with VA 400 consumption


2.1 Connection diagram for variant "Standard"

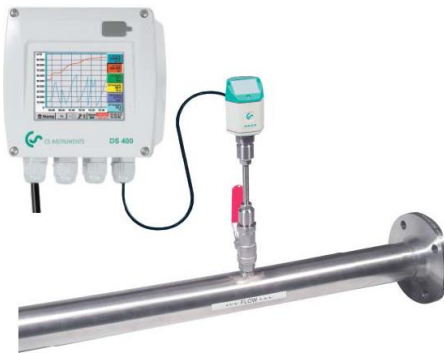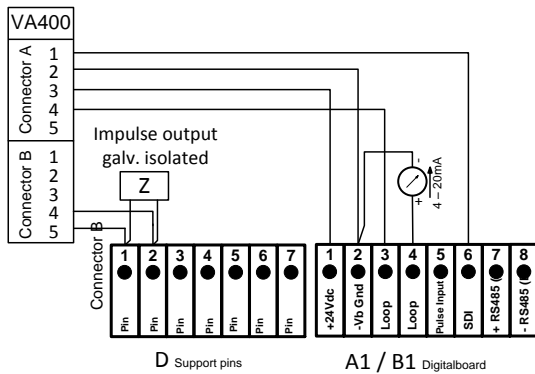

2.2 Connection diagram for variant "Ethernet" (galv. Isolated Impulse output intr. on Ethernet PCB)

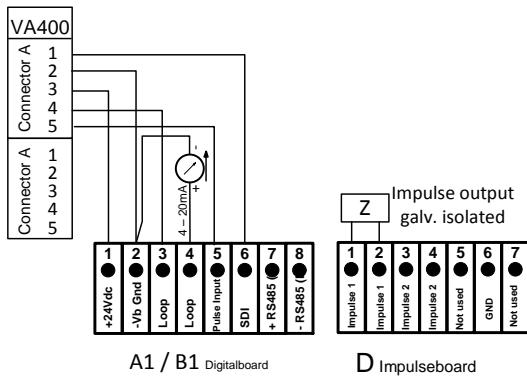

Mounting depth

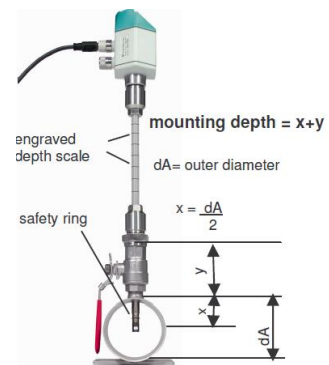


Please read carefully before starting the device!

1. Do not exceed pressure range > 50 bar
 2. Observe flow direction of the sensor
 3. Adapter sleeve must be tightened with a torque of 20-30 Nm
 4. Observe minimum values for the inlet section (15 x inner diameter) and for the outlet section (5 x inner diameter)
- For further information please see instruction manual VA 400.


Necessary adjustments (see chapter [12.2.2 Sensor settings](#))

- Adjust inner diameter of the pipe (menu sensor adjustment/consumption)
DS4300 automatically scales the analogue output 4...20 mA to the respective values for m³/h, m³/min and so on.
- Reference temperature and reference pressure (factory setting 20 °C, 1000 hPa):
All volume flow values (m³/h) and consumption values indicated in the display are related to 20 °C, 1000 hPa (according to ISO 1217 intake condition)
0 °C and 1013 hPa (=standard cubic meter) can also be entered as a reference.
Do not enter the operation pressure or the operation temperature under reference conditions!

3 Short-form instruction manual dew point set FA 410 with alarm

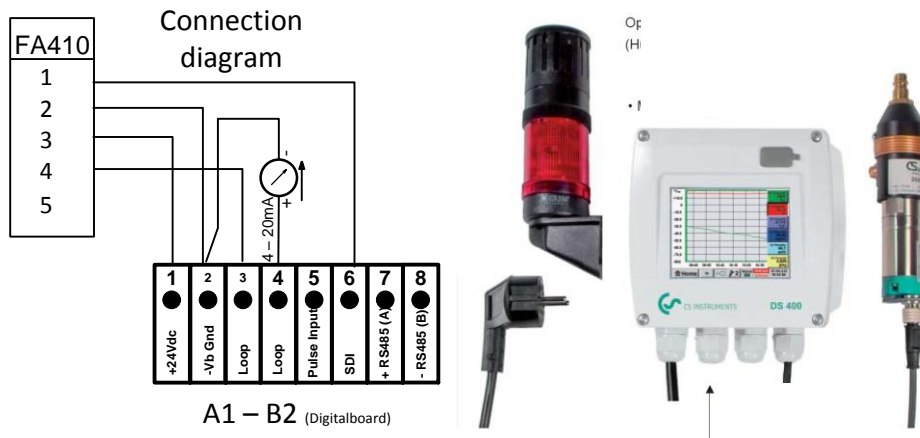

Power supply alarm connection:

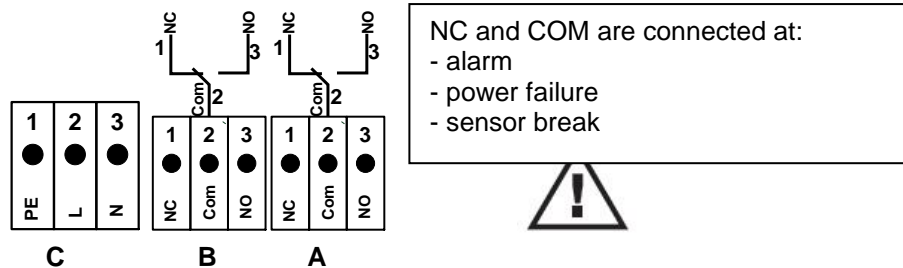

Please read carefully before starting the device!

1. Attention: Do not exceed pressure range of > 50 bar with standard version. (Up to 350 bar in case of special version).
2. Important: Before installation briefly bleed the compressed air in order to remove condensate and particles. This prevents soiling of FA 410. Standing air leads to long measuring times.

Dew point set Ds 400 with FA 410 with alarm unit (option)

- Dew point set ready for plug in and fully configured, no further adjustments necessary .

- Alarm values are programmed on our premises:

- Dew point set -20...+50 °Ctd to alarm 1: 8 °Ctd, alarm 2: 12 °Ctd
- Dew point set -80...+20 °Ctd to alarm 1: -40 °Ctd, alarm 2: -35 °Ctd
- in case of alarm unit option: Alarm 1 continuous red light
Alarm 2 buzzer

The alarm values can easily be changed within the DS 400

(Settings → Sensor settings → A1 → Alarm see also chapter [12.2.2.4 Alarm-Settings](#)).

Application area


4 Application area

Our long-term hands-on experience in measurement and control technology was implemented in the new DS 400.

From recording of the measured data, automatic sensor identification, indication on a big colour screen, alerting, storage up to remote read-out via web server, all that is possible with DS 400. By means of the CS-Soft, software alarms can be sent via SMS or e-mail.

On the big 3.5' colour screen with touch panel all information is available at a glance. The operation is very easy. All measured values, measured curves and threshold exceedings are indicated. The progression of the curve, since the beginning of the measurement, can be viewed by an easy slide of the finger.

The huge difference to ordinary paperless chart recorders reveals in the easy initiation as well as in the evaluation of the measured data. All sensors are identified directly and powered by DS 400. Everything is matched and tuned.

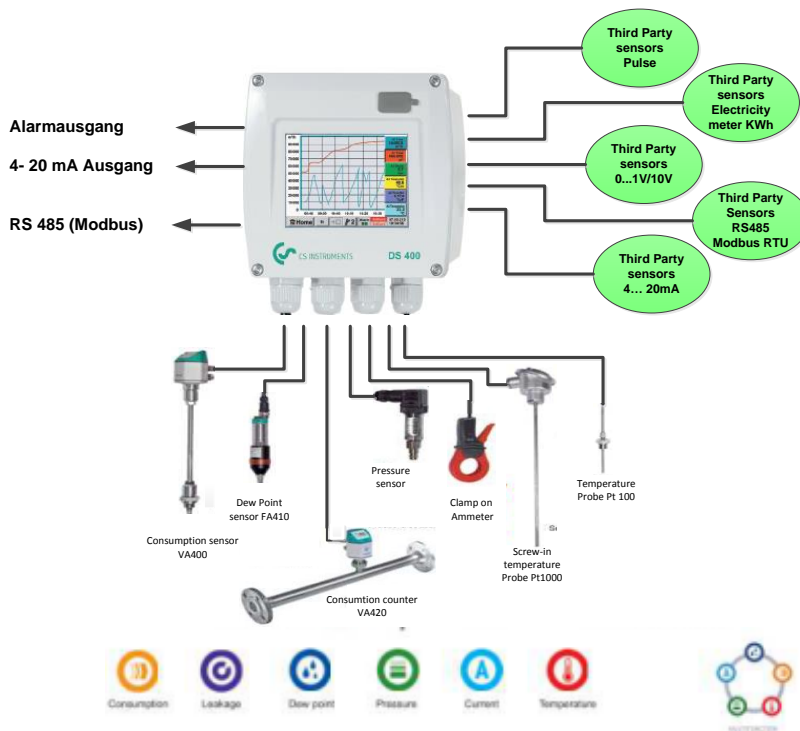

Versatile:

Up to 4 sensors, incl. all CS sensors (consumption, dewpoint, pressure, current, KTY, PT 100, PT 1000) are identified automatically by DS 500. Optional analogue sensors (0/4 - 20 mA, 0 - 1/10/30 V, pulse) can be configured easily and quickly. Digital sensors can be connected via RS 485, Modbus RTU and SDI.

Flexible:

Network-compatible and worldwide remote data transmission via Ethernet, integrated web server.

Alarm relay / fault indication:

Up to 4 threshold values can be configured freely and allocated to 2 different alarm relay. Collective alarms are possible.

5 Technical data DS 400

CE	
Dimensions of housing	118 x 115 x 98 mm, IP 65
Connections	5 x PG12 for sensors and supply, alarm relay 1 x RJ 45 Ethernet connection
Version panel mounting	Cutout panel 92 x 92 x 75 mm
Weight	545 g
Material	Kunststoff , Frontfolie Polyester
Sensor inputs	4 (2x2) sensor inputs for analogue and digital sensors freely allocatable. Digital CS sensors for dew point and consumption with SDI interface FA/VA 400 Series. Digital third-party sensors RS 485/Modbus RTU, other bus systems realizable on request. Analogue CS sensors for pressure, temperature, clamp-on ammeters preconfigured. Analogue third-party sensors 0/4 – 20 mA, 0 - 1/10/30 V, pulse, Pt100/Pt1000, KTY.
Power supply for sensors	Output voltage:: 24 VDC \pm 10% Output current: a.) Digital-Board 120mA continuous operation / channel b.) Analog-Board 120mA continuous operation for both channels Maximum output current over all channels: 280mA Maximum power input: 12VA
Interfaces	USB stick, USB cable, Ethernet/RS 485 Modbus RTU/TCP, SDI other bus systems on request, web server optionally
Outputs	Outputs 2 relay (max. switching voltage: 400 VAC / 300 VDC, Switching current: min. 10mA, max. 6A) alarm management, relay freely programmable, collective alarm. Analogue output, pulse in case of sensors with own signal output looped, like e. g. VA/FA Series.
Power supply	100 – 240 VAC/50 – 60 Hz, , special version 24 VDC
Colour screen	3.5"-Touchpanel TFT transmissive, graphics, curves, statistics
Accuracy	See sensor specifications
Operating temperature	0 – 50 °C
Storage temperature	-20 bis +70°C
Optionally	Data Logger, Memory size 2 GB SD memory card standard, optionally up to 4 GB
Optionally	Ethernet- and RS 485 Interface (Modbus Protokoll)
Optionally	Webserver
Optionally	Galv. Isolated Impulse output (2x)

6 Input signal

Input signal		
Current signal (0 – 20 mA / 4 – 20 mA) internal or external power supply	Measuring range	0 – 20 mA / 4 – 20 mA
	Resolution	0,0001 mA
	Accuracy	$\pm 0,003 \text{ mA} \pm 0,05 \%$
	Input resistance	50 Ω
Voltage signal (0 - 1V)	Measuring range	0 - 1 V
	Resolution	0,05 mV
	Accuracy	$\pm 0,2 \text{ mV} \pm 0,05 \%$
	Input resistance	100 k Ω
Voltage signal (0 - 10 V / 30 V)	Measuring range	0 - 10 V/30 V
	Resolution	0,5 mV
	Accuracy	$\pm 2 \text{ mV} \pm 0,05 \%$
	Input resistance	1 M Ω
RTD Pt100	Measuring range	-200 - 850 °C
	Resolution	0,1 °C
	Accuracy	$\pm 0,2 \text{ °C}$ at -100 - 400 °C $\pm 0,3 \text{ °C}$ (further range)
RTD Pt1000	Measuring range	-200 - 850 °C
	Resolution	0,1 °C
	Accuracy	$\pm 0,2 \text{ °C}$ at -100 - 400 °C $\pm 0,3 \text{ °C}$ (further range)
Pulse	Measuring range	minimal pulse length 100 μs frequency 0 - 1 kHz max. 30 VDC

7 Cable cross-section

7.1 Power supply 100 - 240 VAC, 50 - 60 Hz, special version 24 VDC:

AWG12 – AWG24, cable cross-sections: 0,2 - 2,5 mm²

7.2 Sensor circuit points/Output signal:

AWG16 – AWG28, cable cross-sections: 0,14 - 1,5 mm²

8 Panel / Wall mounting

The instrument can either be mounted into a panel or - if ordered with the optional wall casing - on a wall. Please refer to the drawings below for details.

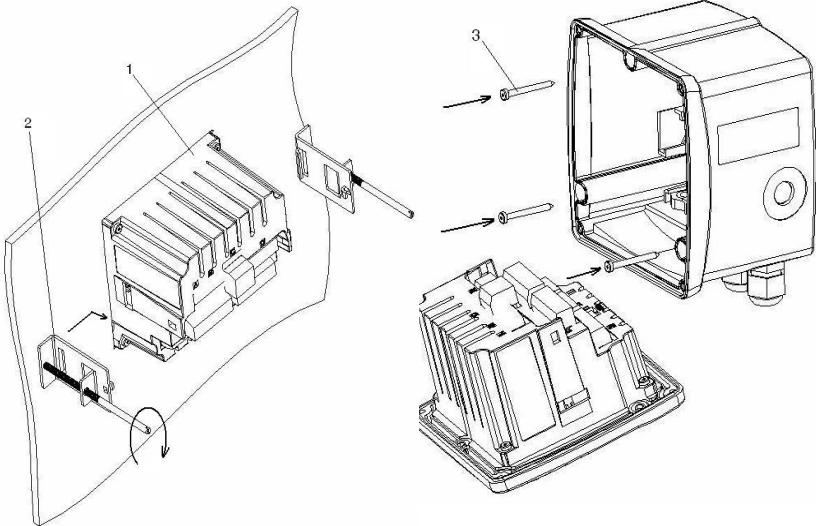


Figure: Panel and wall mountable housing



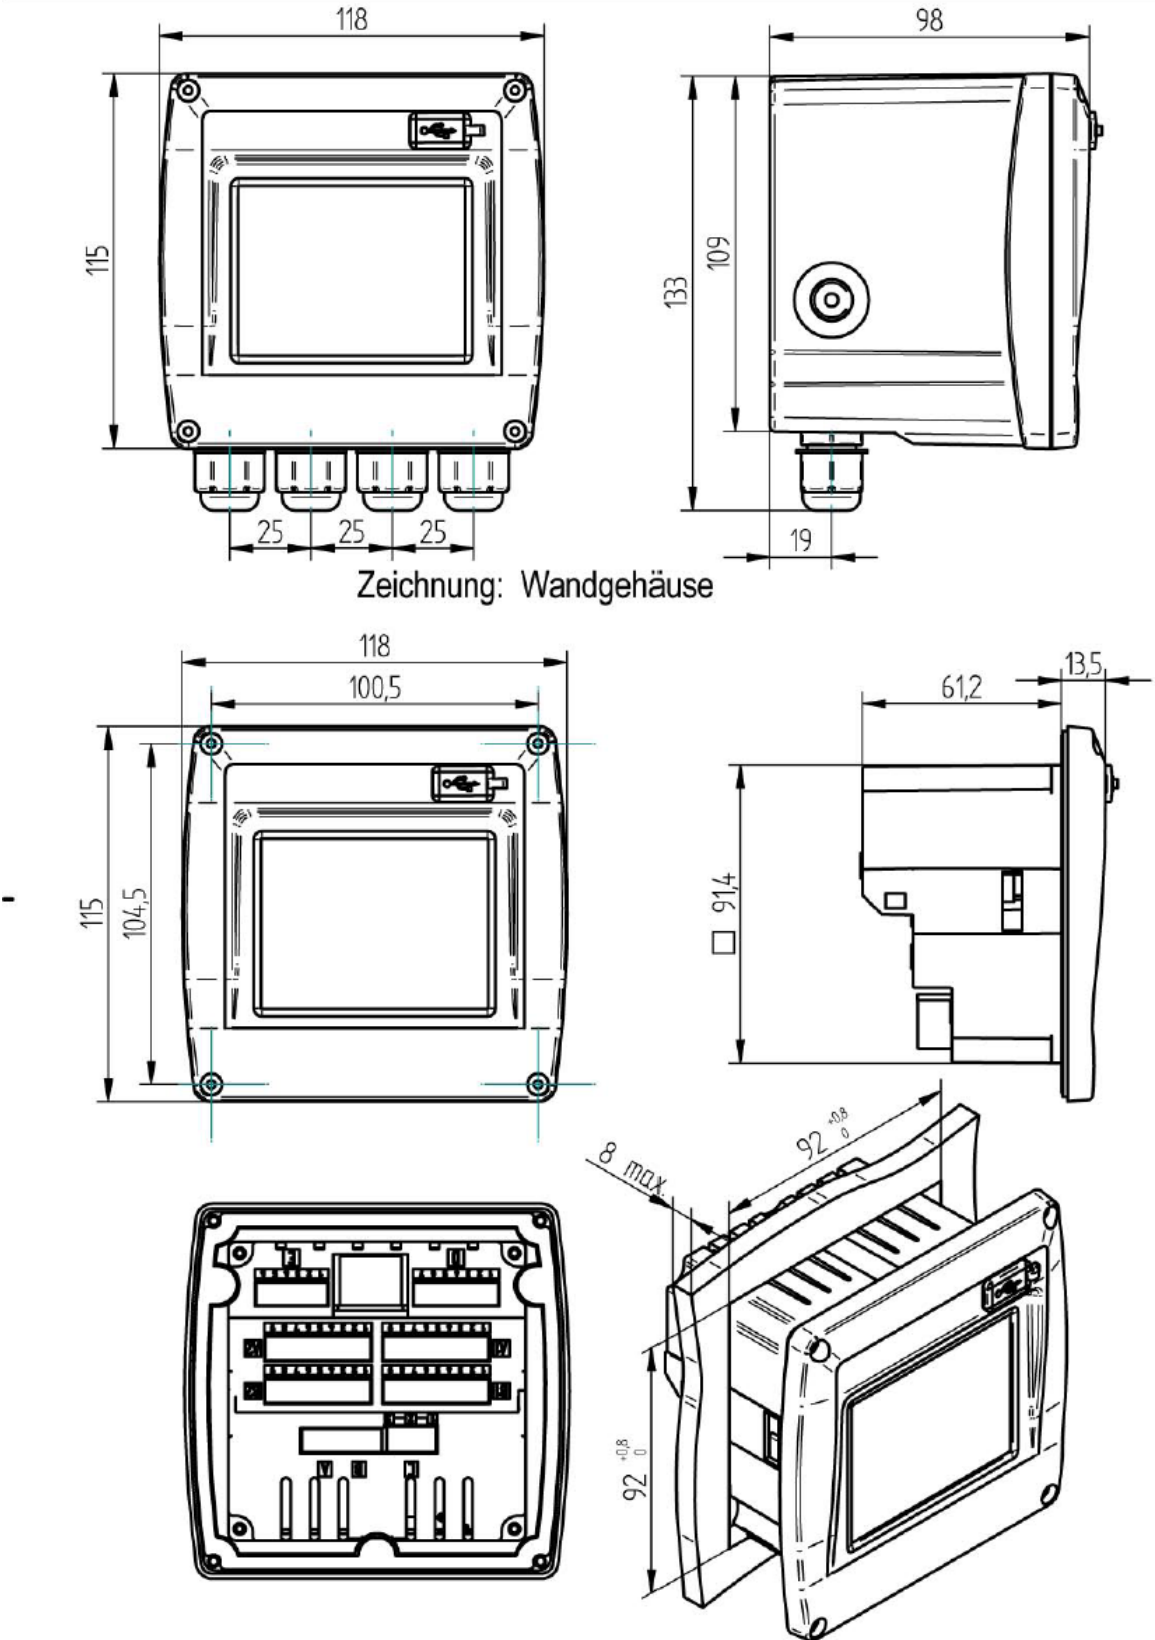


Figure : Housing for panel mounting

9 Connection diagrams DS 400

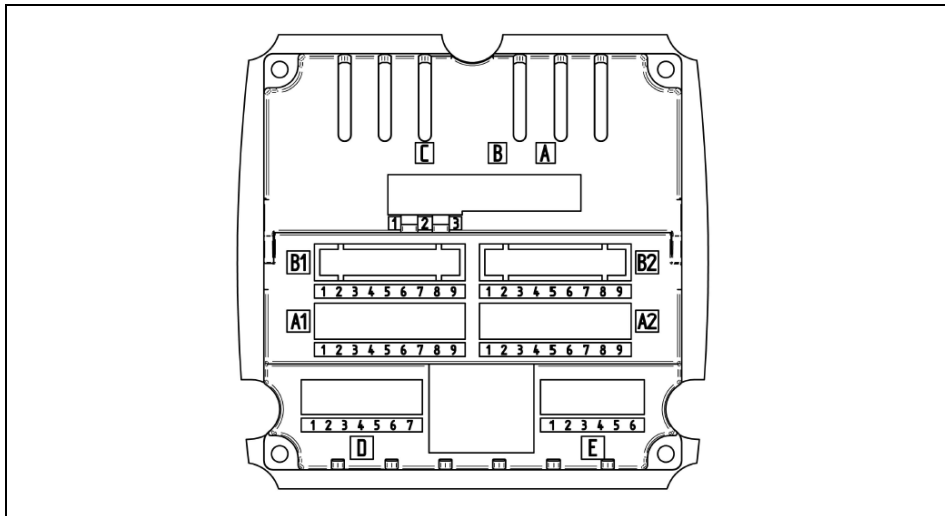

9.1 Connections Inputs „A1 – B2“ (Analog- und Digital-Channels)

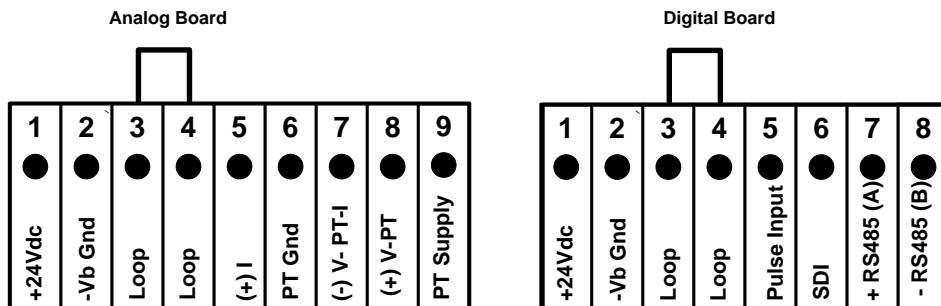

Depending on selected variant following combinations are possible:


combination \ Channel	1	2	3	4	5	6
A1	D	D	D	A	A	A
A2	D	D	D	A	A	A
B1		D	A		A	D
B2		D	A		A	D

D = Digital-Channel A = Analog-Channel


Connection diagrams DS 400

9.2 Connection input „D“ (galv. isolated Impulse output / Impulse signal forwarding support pins)

9.2.1 Basic version (Support pins for impulse forwarding)

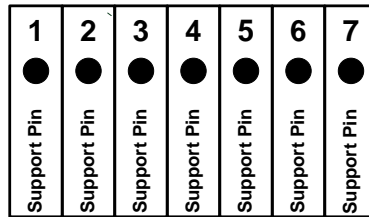


9.2.2 Option gal. isolated impulse

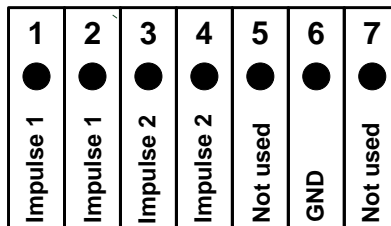

For systems with 2 Digital boards equipped (2x2 Digital-Channels) only one impulse input could be used for one impulse output.

A1 or B1 for Impulse1 respectively A2 or B2 for Impulse 2


9.3 Connection input „E“ (RS485 -- Modbus) (incl. in option Ethernet)

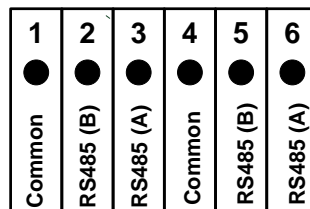

9.4 Connection inputs „A - C“ Power supply and 2x Alarmrelais

Power supply: 100 - 240 VAC 50 – 60 Hz

2 x Alarm relays, max. 230VAC, 6A

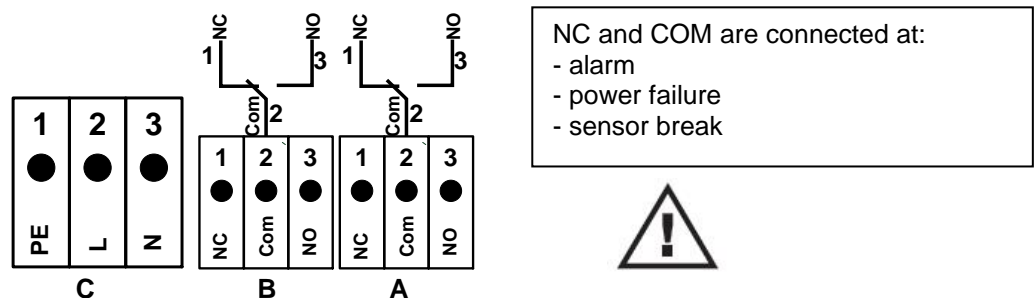

Connection diagrams of the different sensor types

10 Connection diagrams of the different sensor types

By/With consumption sensors and dew point sensors from CS Instruments there is the possibility to provide values as analogue current signal 4 – 20 mA for further working process.

The measurement/reading of the current signal for an external PLC/ZLT or external third-party display is explained in the connection diagrams.

BY using of the CS Instruments connection cables 0553.0104 or 0553.0105 please follow pinning



	Pin 1	Pin 2	Pin 3	Pin 4	Pin 4
Connector	SDI	- VB	+ VB	+I (500 µA)	NC
Connection cable 0553.0104 (5m) 0553.0105 (10m)	brown	white	blue	black	grey

The following connection diagrams in Chapter 10 apply to A1 to B2!

FA serial: dew point sensors from CS Instruments

VA serial: consumption sensors from CS Instruments

10.1 Anschluss CS Taupunktsensoren Serie FA 415/FA 300

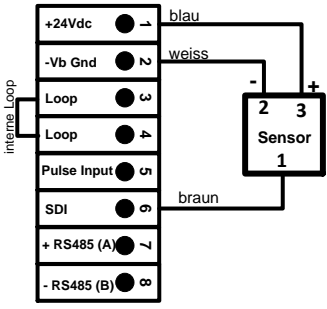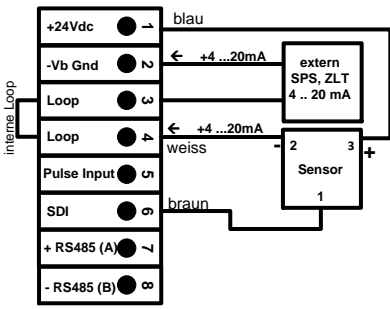 <p>Digitalboard</p>	<p style="text-align: center;">DS 400</p> <p>FA 300 FA 415</p> <p>The digital data transmission between DS 500 and the dewpoint sensors FA 415 and FA 300 occur via the SDI bus line.</p> <p>It's possible to connect the FA 300/FA 425 alternatively as 4 – 20 mA analogue sensor in 2-wire technology</p>
 <p>Digitalboard</p>	<p style="text-align: center;">DS 400 with ext. 4 -20mA</p> <p>Please make sure that the circuit is closed in any case</p>

Connection diagrams of the different sensor types

10.2 Connection for dew point- and consumption sensors, serial FA/VA 400

<p>Digitalboard</p>	<p style="text-align: center;">DS 400</p> <p>FA 410 FA 400 VA 400 VA 420</p> <p>The digital data transmission between DS 400 and the sensors FA 400/410 and VA 400/420 occurs via the SDI bus line.</p>
<p>Digitalboard</p>	<p style="text-align: center;">DS 400 with ext. 4 -20mA</p> <p>Please make sure that the circuit is closed in any case</p>

Connection diagrams of the different sensor types

10.3 Connection pulse sensors



		<p>signal level 0: low = 0 – 0,7 VDC</p> <p>signal level 1: high = 2,5 – 30 VDC</p> <p>t = 400 µs</p> <p>max. frequency (duty cycle 1:1) = 1000 Hz</p> <p>input resistance: min. 100 kilo ohm</p>
		<p>external essential R = 4K7</p> <p>Attention: The DS 400 is counting a consumption unit, by switching „power on“.</p>
		<p>external essential R = 4K7</p>
		<p>It won't work!</p>

Connection diagrams of the different sensor types



10.4 Analogue two-, three-, and four-wire current signal

Sensors with 4 - 20 mA output in 2-wire technology	
<p>Analogboard</p>	<p>DS 400</p>
<p>Analogboard</p>	<p style="text-align: center;">DS 400 with ext. 4 -20mA routing</p> <p>Please make sure that the circuit is closed in any case. (e.g. CS pressure sensors 1,6/16/40/100/250/400 bar or temperature sensors with integrated measuring transformer 4 - 20 mA)</p>

Connection diagrams of the different sensor types

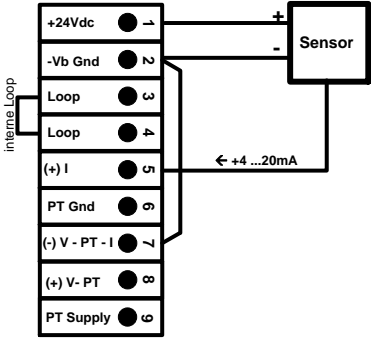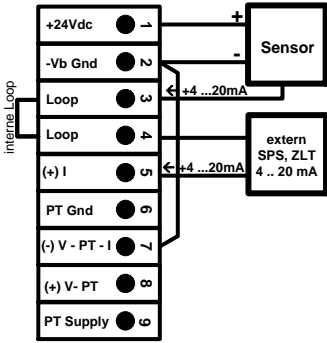
Sensors with 4 - 20 mA output in 3-wire technology	
 <p>The diagram shows an analog board with terminals: +24Vdc, -Vb Gnd, Loop, Loop, (+) I, PT Gnd, (-) V - PT - I, (+) V - PT, and PT Supply. A sensor is connected to +24Vdc and -Vb Gnd. The sensor's output is connected to the (+) I terminal. An arrow labeled '+4 ...20mA' points to the (+) I terminal.</p> <p>Analogboard</p>	<p>DS 400</p>
 <p>The diagram shows the same analog board as above. In addition to the sensor, an external SPS, ZLT (4 .. 20 mA) is connected. The external device is connected to the (+) I terminal and the (-) V - PT - I terminal. An arrow labeled '+4 ...20mA' points to the (+) I terminal.</p> <p>Analogboard</p>	<p>DS 400 with ext. 4 -20mA routing</p> <p>Please make sure that the circuit is closed in any case.</p>

Connection diagrams of the different sensor types

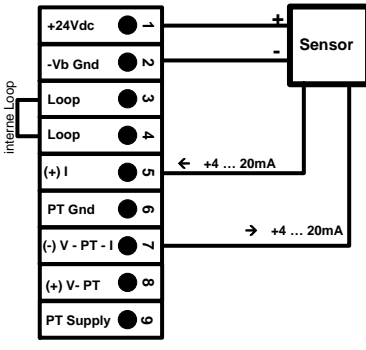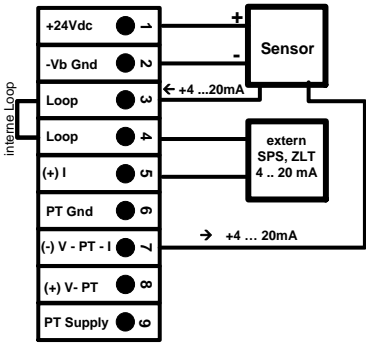Sensors with 4 - 20 mA output in 4-wire technology	
 <p>The diagram shows an analog board with terminals: +24Vdc, -Vb Gnd, Loop, Loop, (+) I, PT Gnd, (-) V - PT - I, (+) V - PT, and PT Supply. A sensor is connected to +24Vdc and -Vb Gnd. The sensor's output is connected to the (+) I terminal, with a current of +4 ... 20mA flowing into the terminal. The sensor's other output is connected to the (-) V - PT - I terminal, with a current of +4 ... 20mA flowing out of the terminal.</p> <p>Analogboard</p>	<p>DS 400</p>
 <p>The diagram shows the same analog board as above. In addition to the sensor, an external SPS, ZLT (4 ... 20 mA) is connected. The sensor's output is connected to the (+) I terminal. The external SPS, ZLT is connected between the (+) I and (-) V - PT - I terminals. The current +4 ... 20mA flows from the external SPS, ZLT into the (+) I terminal.</p> <p>Analogboard</p>	<p>DS 400 with ext. 4 -20mA routing</p> <p>Please make sure that the circuit is closed in any case.</p>

Connection diagrams of the different sensor types

10.5 Three- and four-wire power supply 0 - 1/10/30 VDC

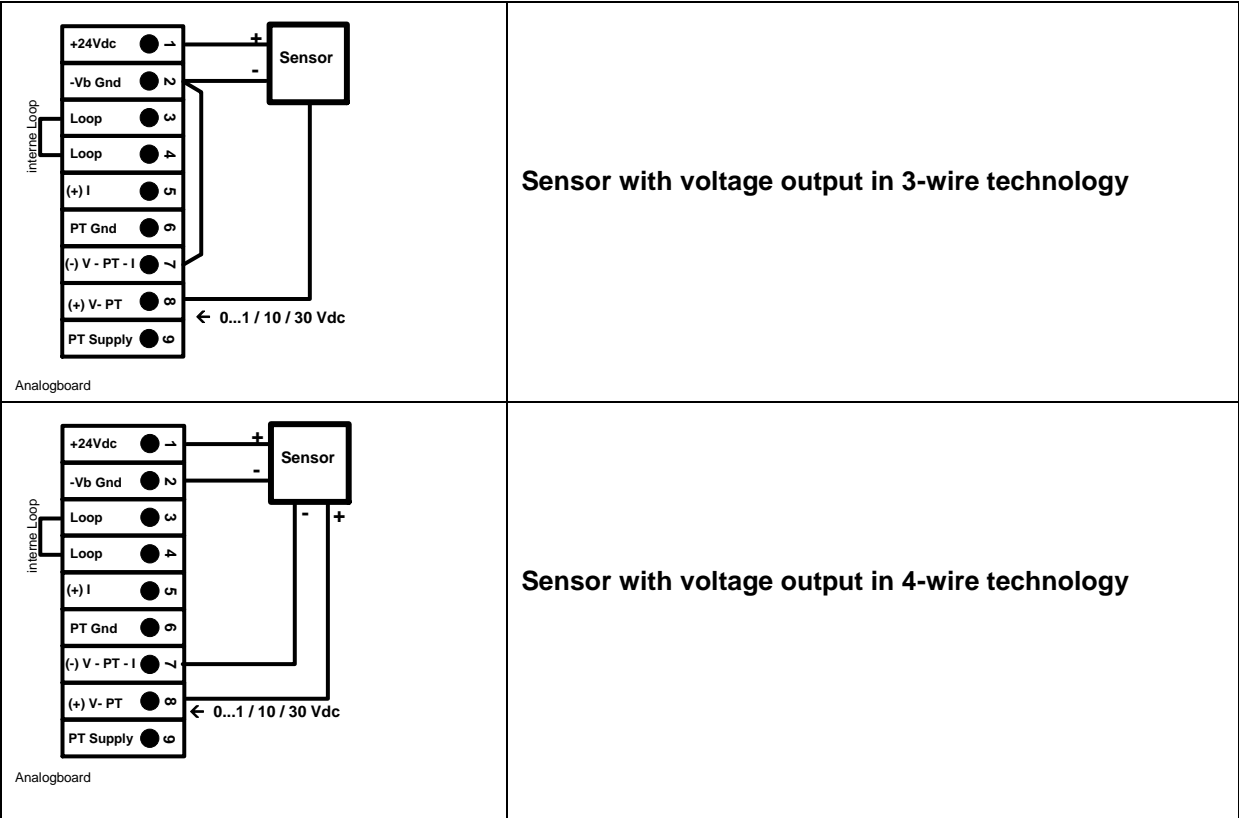

Connection diagrams of the different sensor types

10.6 Two-, three-, and four-wire connector pin assignments for PT100/PT1000/KTY81

<p>Analogboard</p>	<p>2-wire PT100/PT1000/KTY81</p>
<p>Analogboard</p>	<p>3-wire PT100/PT1000/KTY81</p>
<p>Analogboard</p>	<p>4-wire PT100/PT1000/KTY81</p>

10.7 Connection with RS485

<p>Digitalboard</p>	<p>Sensor with RS485 Interface</p>
---------------------	---

Connect the DS 400 with a PC

11 Connect the DS 400 with a PC

Important:

The IP addresses of PC and DS 500 must be statically assigned (DHCP off) and have to be in the same network.


If the IP-address of the DS 500 has changed, you have to reboot!

Remark:

IP-address of the DS 400: See chapter, [12.2.4.3 Network-Settings](#)

Reboot the DS 400: See chapter, [12.2.4.7.5 Factory-Reset](#)

The DS 400 can be connected with the PC by a crossover cable, which has a RJ45 plug on each side, or an Ethernet cable with a crossover adapter.

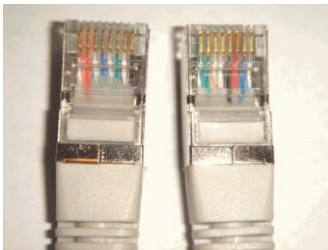

Crossover-Cable with RJ45-plug



Crossover-Adapter

After connecting the DS 400 via a suitable cable to the PC, you can make graphical and tabular data evaluations with the CS Soft Basic software.

Windows PC's, network settings:

Windows 7:

Start → Control Panel → Network and Sharing Center → adapter → Networking → Properties → Internet Protocol Version 4 (TCP/IPv4) → Use the Following IP address → enter IP address and Subnet mask

After this: OK → OK → Close

Windows Vista:

Start → Control Panel → Network and Sharing Center → Network connection → Networking → Properties → Internet Protocol Version 4 (TCP/IPv4) → Use the Following IP address → enter IP address and Subnet mask

After this: OK → OK → Close

Windows XP:

Start → Properties → Control Panel → Network connection → Networking → Properties → Internet Protocol Version 4 (TCP/IPv4) → Use the Following IP address → enter IP address and Subnet mask

After this: OK → OK → Close

12 Operation DS 400

The operation is largely self-explanatory and menu-driven via the touch panel. The selection of the respective menu items occur via short "tapping" with the finger or a soft round pen.

**Attention: Please use no pens or other objects with sharp edges!
The foil can be damaged!**

After sensors are connected, they also have to be configured.

Inputs or changes can be made with all white deposit fields. The measured values can be represented as a curve or values.

Words in **green font** refer mainly to the pictures in the section of the chapter, but also on important menu paths or menu items that are related to are in **green font**.

The menu navigation is generally in a **green font**!

The table of contents and chapter references in **blue font** contain links to the respective chapter title.

12.1 Main menu (Home)

From the main menu, you can reach every available item.

12.1.1 Initialization




After switching on the DS 400 all channels are initialized and the main menu will appear.

Attention:
For the first initiation, there may be no channels preset!

Please see chapter **12.2.2 Sensor Settings** then select appropriate configurations and set!

Main menu

12.1.2 Main menu after initialization

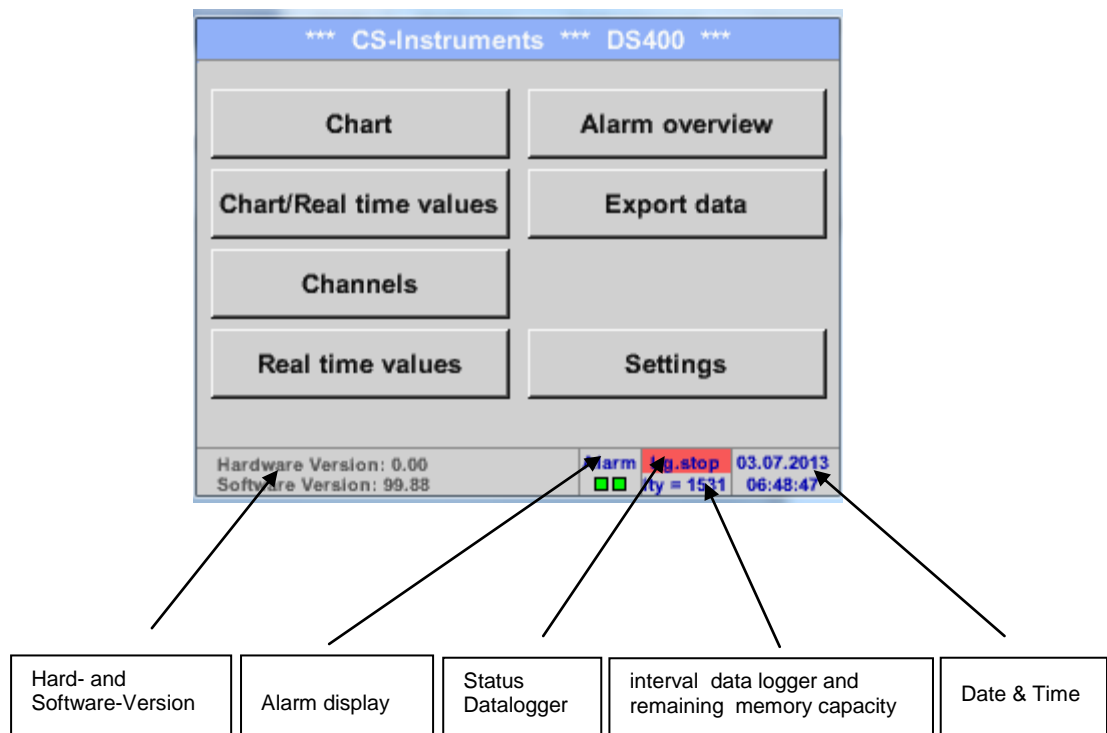

Important:

Before the first sensor setting is made, the language and time should be set!

Remark:

Chapter [12.2.4.1 Language](#)

Main → Settings → Device Settings → Set Language

Chapter [12.2.4.2 Date & Time](#)

Main → Settings → Device Settings → Date & Time

12.2 Settings



The settings are all protected by a password!

Settings or changes are generally confirmed with **OK!**

Remark:

If you go back to main menu and then again one of the setting menus is called, you must enter the password again.

Main menu → Settings

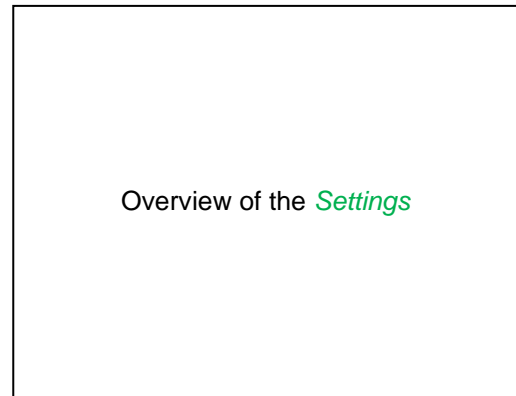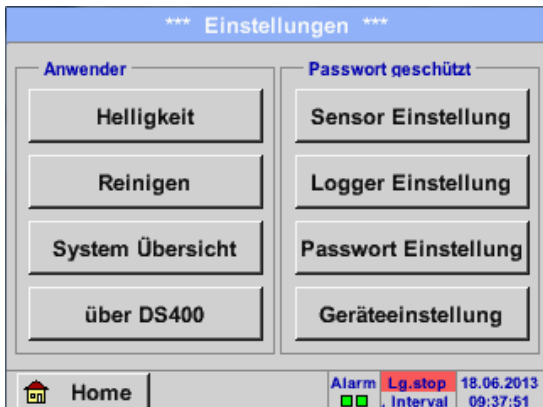

12.2.1 Password-Settings


Main menu → Settings → Password settings



Factory settings for password at the time of delivery: 0000 (4 times zero).

If required, the password can be changed in the *Password settings*.

The new password must be entered two times in a row and in each case confirmed with **OK**

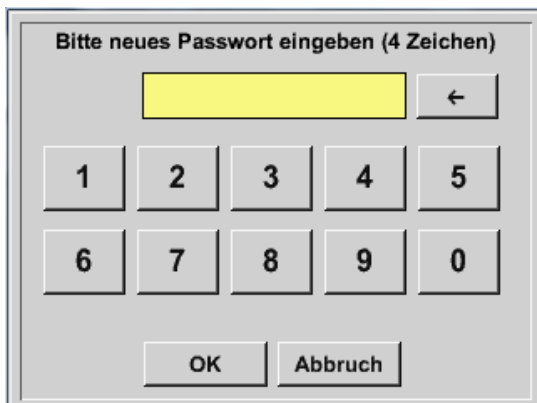

If an incorrect password is entered there appears *Enter password* or *New password repeat* in red font.

If you can't remember the password, please use Master password in order to enter a new password.

Remark:

The master password is supplied together with the instrument's documentation.


Sensor-Settings

12.2.2 Sensor-Settings

Important:

Sensors from CS Instruments are generally pre-configured and can be connected directly to a free sensor channel!

Main menu → Settings → Sensor settings

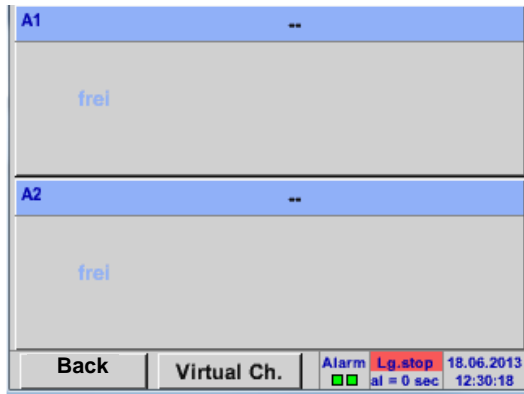

An overview of the available channels appears after entering the password. Depending on the version 2 or 4 channels.

Remark:
Usually no channels preset!

Remark:

Depending on selected variant following combinations are possible:

combination \ Channel	1	2	3	4	5	6
A1	D	D	D	A	A	A
A2	D	D	D	A	A	A
B1		D	A		A	D
B2		D	A		A	D

D = Digital-Channel A = Analog-Channel

12.2.2.1 Choice of the sensor type (For example type CS-Digital sensor)

Main menu → Settings → Sensor settings → A1




If still no sensor has been configured, the *Type No Sensor* appears.

By pushing the description field *Type No Sensor* the list of sensor types appears (see next step).




Sensor-Settings / Label and set the description fields

Main menu → Settings → Sensor settings → A1 → Type description field → CS-Digital

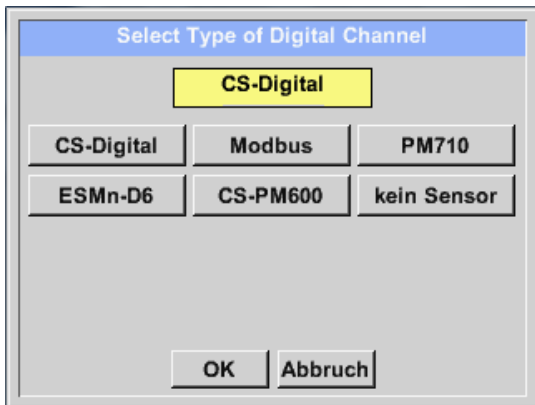

Now the *Type CS-Digital* is selected for the VA/FA 400 series and confirmed by pressing the *OK* button.

Main menu → Settings → Sensor settings → A1 → arrow right (2.page) → diameter description field

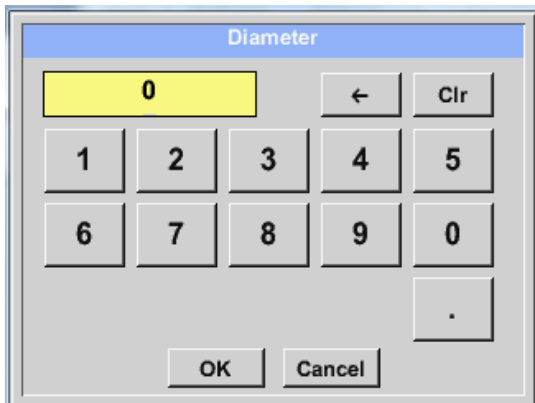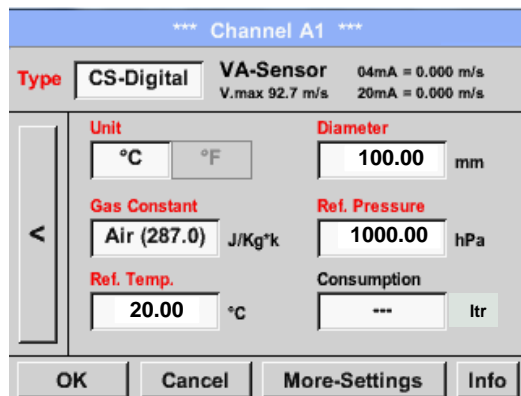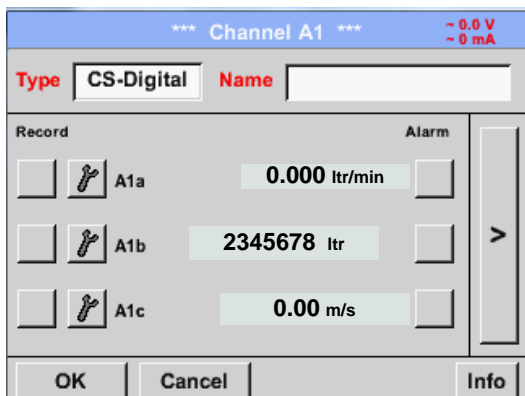

Important:

The *inner diameter* of flow tube can be entered here, if this was not automatically correctly set.

In case of a sensor change the *consumption value* of the old sensor could be transferred.

Please confirm by pressing the *OK* button and go back with *arrow left (1.page)*.


Important:

The *inner diameter* should be entered as precisely as possible, because otherwise the measurement results are not correct!

There is no uniform standard for the tube *inner diameter*!
(Please, inquire at the manufacturer or measure by your own !)


Sensor-Settings / Label and set the description fields

Main menu → Settings → Sensor settings → A1

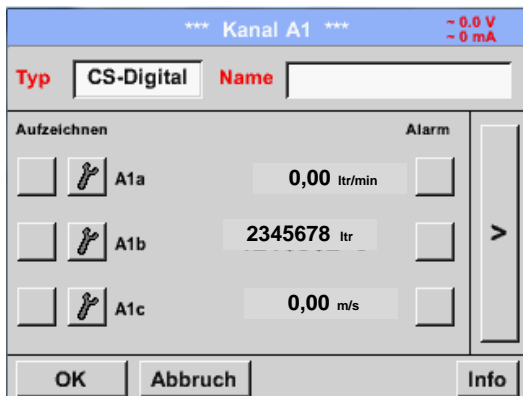

Now you can enter a *Name*.

Main menu → Settings → Sensor settings → A1

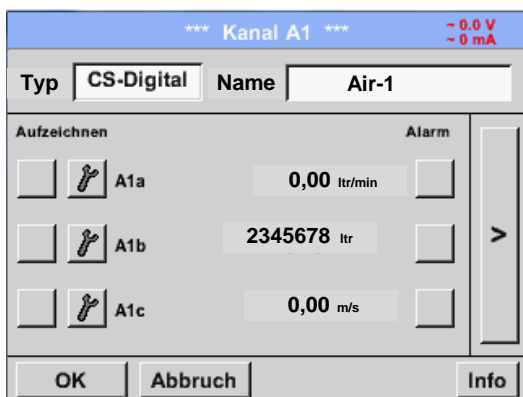

After defining the *name* and confirmation with *OK*, the sensor configuration is completed.

More options of sensor settings, see Chapter 12.2.2.5 bis 12.2.2.8!

See also chapter [12.2.2.7 Label and setting the description fields](#)

Remark:

After confirm with *OK*, the font is black again and the values and settings are accepted.

Attention:

Reference temperature and reference pressure (factory setting 20 °C, 1000 hPa):
All volume flow values (m³/h) and consumption values indicated in the display are related to 20 °C, 1000 hPa (according to ISO 1217 intake condition)
0 °C and 1013 hPa (= standard cubic meter) can also be entered as a reference.
Do not enter the operation pressure or the operation temperature under reference conditions!

Sensor-Settings / name and recording of measurement data

12.2.2.2 Name the measurement data and define the decimal places

Remark:

The *Resolution* of the decimal places, the *Short Name* and *Value Name* are found under the **Tool button!**



Tool Button:

Main menu → Settings → Sensor settings → A1 → Tool Button

For the recorded *Value* there can be entered a *Name* with 10 characters and later in menu item *Graphics/Real time values* it is easier to identify it. Otherwise the *Name* is, for example, *A1a*. The channel name is *A1* and *a* is the first measurement data at the channel, the Second *b* and the Third *c*. The *Resolution* of the decimal places is simply adjustable by pushing right and left (0 to 5 decimal places).

See chapter [12.2.2.7 Label and setting the description fields](#)

12.2.2.3 Recording measurement data

Main menu → Settings → Sensor settings → A1 → Record Button

Use the *Record* buttons to select the measurement data that will be stored by **activated data logger**.

Attention:


Before the selected measurement data are recorded, the data logger must be activated after the settings(See chapter [12.2.1.2 Logger settings \(data logger\)](#)).

Sensor-Settings / Alarm-Settings

12.2.2.4 Alarm-Settings

Main menu → Settings → Sensor settings → A1 → → Alarm-Button


By pushing an alarm button, the following window appears:

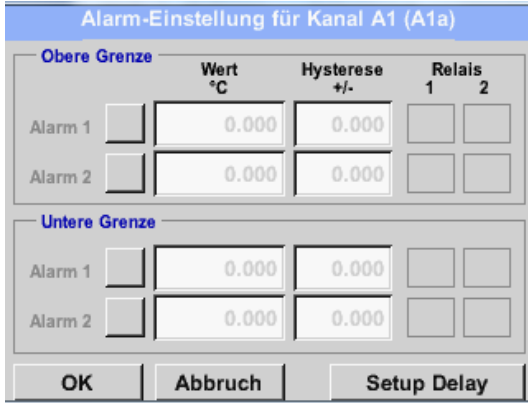

In the alarm settings an *Alarm 1* and *Alarm 2* incl. *Hysteresis* can be entered for each channel.


In the menu *Alarm overview* (can be reached from the main menu), the alarm settings are clearly represented.

Main menu → Settings → Sensor settings → A1 → → Alarm-Button → Alarm-1- und Alarm-2-buttons + Relais-buttons

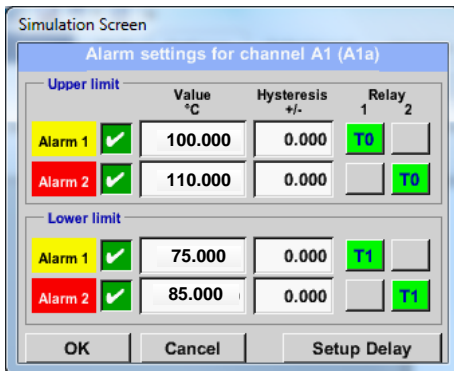

E.g. set the *Alarm 1* to relay 1 and the *Alarm 2* to relay 2.

Main menu → Settings → Sensor settings → A1 → Alarm-Button → Relay-buttons

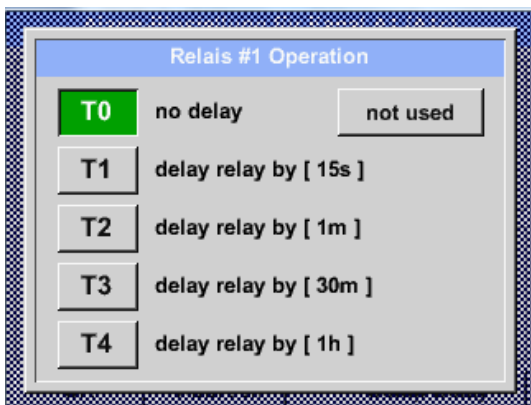

It is possible to select from 5 different delays.

T0 is preset to no delay.

The delays (T1 to T4) are free definable but are common valid for all relays.

Sensor-Settings / Alarm-Settings

Main menu → Settings → Sensor settings → A1 → Alarm-Button → Setup Delay



Global Relay Delay Setup

Attention: common timeout for all alarms

Delay T1 = 15s

Delay T2 = 1m


Delay T3 = 30m

Delay T4 = 1h

OK Abbruch

The delays (T1 to T4) are free definable but are common valid for all relays.

Main menu → Settings → Sensor settings → A1 → Alarm-Button → description field Delay T1

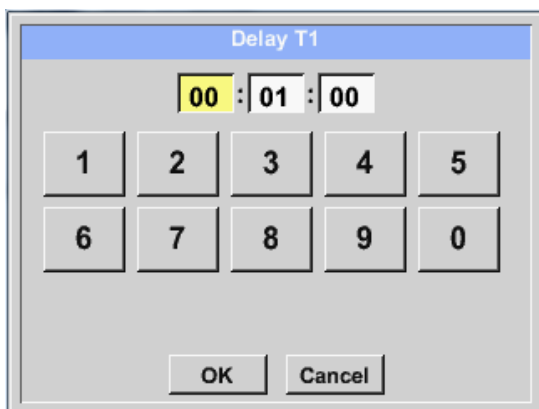

Delay T1

00 : 01 : 00

1 2 3 4 5

6 7 8 9 0

OK Cancel


By changing the text field values the new delay time could be defined. Here for *Delay T1*.

Delay T0 is preset and can't be changed and it is an immediate alarm.

Confirmation by pressing the *OK* button.

Same procedure for the remaining delay times T2-T4 is to apply.

Main menu → Settings → Sensor settings → A1

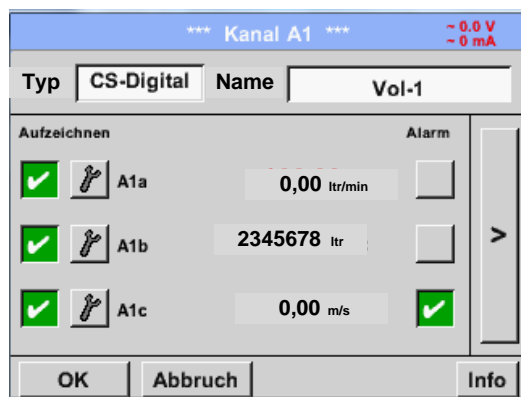

*** Kanal A1 *** -0.0 V
-0 mA

Typ CS-Digital Name Vol-1

Aufzeichnen	Alarm
<input checked="" type="checkbox"/> A1a 0,00 ltr/min	<input type="checkbox"/>
<input checked="" type="checkbox"/> A1b 2345678 ltr	<input type="checkbox"/>
<input checked="" type="checkbox"/> A1c 0,00 m/s	<input checked="" type="checkbox"/>

OK Abbruch Info

After the alarm activation at channel A1.

Remark:

After confirm with *OK*, the font is black again and the values and settings are accepted.

Sensor-Settings / More Settings (scale analogue output)

12.2.2.5 More Settings (scale analogue output)

Main menu → Settings → Sensor settings → A1 → arrow right (2.page) → More settings

More-Settings A1-Luft-1

4...20mA Output of Sensor

Base

m³/h m/s

scale manual

4mA = 0.000 m/s

20mA = -1.#|0 m/s

Max Velocity 92.700 m/s

Calibration Data

Gas Air (287.0)

Temperat 293.0 °K

Pressure 1000.0 hPa

Area 110.0 mm²

Cal. Date 24.07.2013

OK Cancel

In *More-Settings*, you can define whether the 4 - 20 mA analogue output of the sensor based on the flow rate or velocity.

The green highlighted description field is selected!

In addition, you can push the *scale manual* button and set the measuring range.

After confirming with *OK*, the settings are assumed.

Remark:
More-Settings only for type **CS-Digital** available!

More-Settings A1-

4...20mA Output of Sensor

Base

m³/h m/s

scale manual

4mA = 0.000 m/s

20mA = 200.000 m/s

Max Velocity 92.700 m/s

Calibration Data

Gas Air (287.0)

Temperat 293.00 °K

Pressure 1000.00 hPa

Area 110.00 mm²

Cal. Date 03.07.2013

OK Cancel

The settings finished by pushing the *OK* button!

Remark:

After confirming with *OK*, the font is black again and the values and settings are accepted.

Sensor-Settings / Dew point sensor Typ CS-Digital

12.2.2.6 Dew Point Sensor of Type CS-Digital

First step: choose an unused sensor channel

Main menu → Settings → Sensor settings → A1


Second step: choose type CS-Digital

Main menu → Settings → Sensor settings → A1 → Type description field → CS-Digital

Third step: confirm with **OK** two times

Now, a **Name** (See chapter [12.2.2.7 Label and setting the description fields](#)), the **alarm settings** (See chapter [12.2.2.4 Alarm settings](#)) and **recording settings** (See chapter [12.2.2.3 Recording measurement data](#)), and the **Resolution** of the **decimal places** (See chapter [12.2.2.2 Name measurement data and define the decimal places](#)) can be determined.

Main menu → Settings → Sensor settings → A1

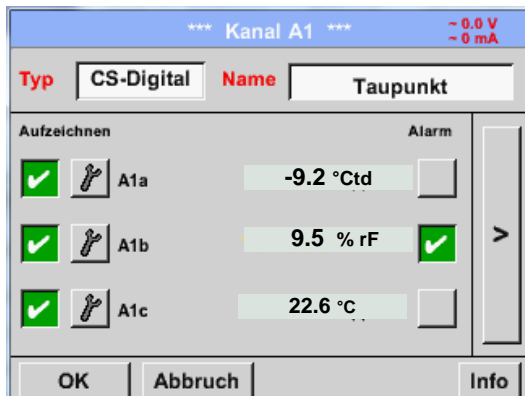


The DS 400 detects, if the connected sensor is a flow or dewpoint sensor of **CS Instruments** and set the **CS-Digital** subtype automatically correct.

Sensor - Settings / Label and set the description fields

12.2.2.7 Label and setting the description fields


Main menu → Settings → Sensor settings → A1

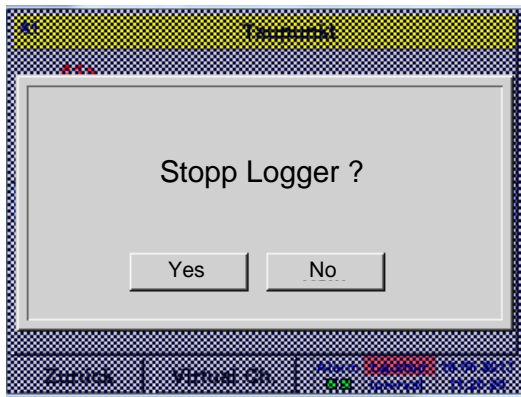

If the data logger is activated, the following window will appear and via pushing **Yes** it can be disabled.
(Only activated, if already settings and recordings are made)

Remark:


If sensor settings are defined or changed, the data logger must be stopped.

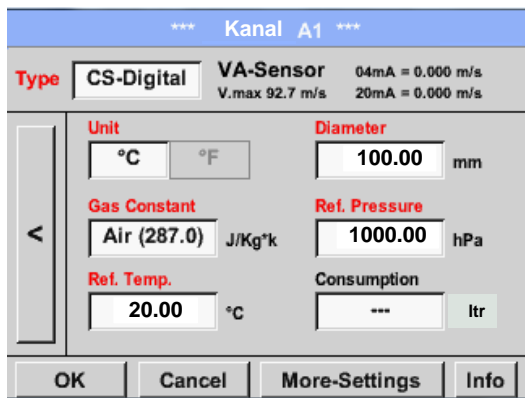

Changes or entries can be made by pressing the highlighted white fields.

The **Alarm** (See chapter [12.2.2.4 Alarm settings](#)) and **Record** buttons (See chapter [12.2.2.3 Recording measurement data](#)), the **Resolution** of the decimal places and **Short Name** or **Value Name** (See chapter [12.2.2.2 Name measurement data and define the decimal places](#)), and the **More-Settings** (See chapter [12.2.2.5 More-Settings \(scale analogue output\)](#)) are all described in chapter [12.2.2 Sensor settings](#).


Main menu → Settings → Sensor settings → A1 → description field Name

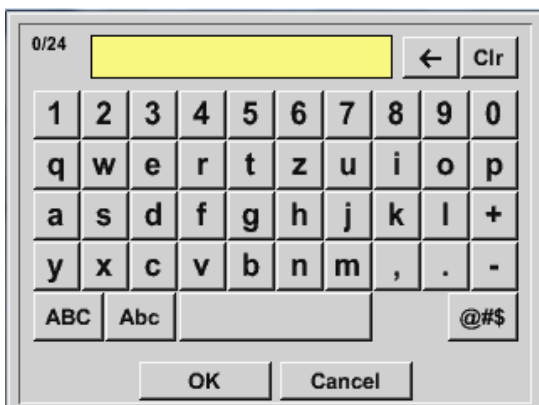

It is possible to enter a name with 24 characters.

Sensor - Settings / Label and set the description fields

Main menu → Settings → Sensor settings → A1 → description field Type

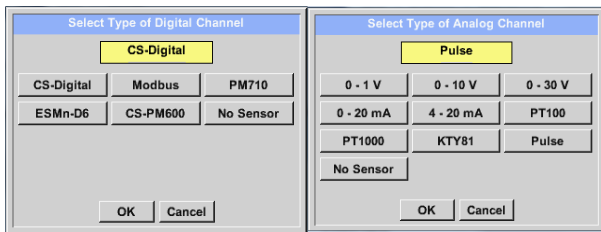


You can choose the following options, after pushing the *Type* description field.

(shown in figure)


See also chapter [12.2.2.8 Configuration of Analogue Sensors](#)

Main menu → Settings → Sensor settings → A1 → description field Unit

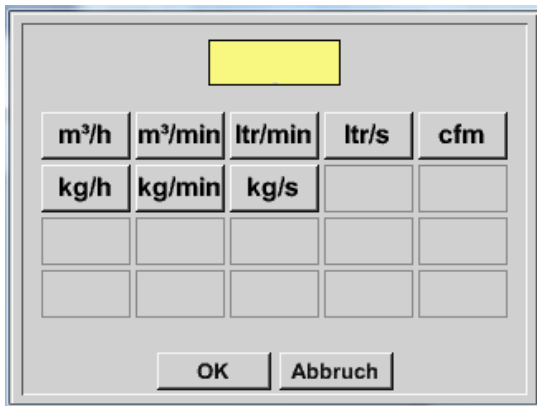

A preset selection of suitable *Units*.

Main menu → Settings → Sensor settings → A1 → arrow right (2.page) → description field of numerical value

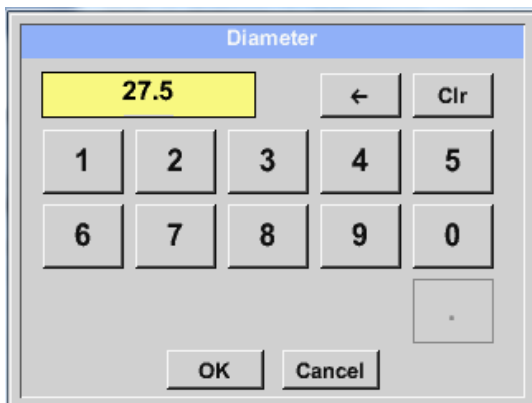

Important:

The *inner diameter* of flow tube can be entered here, if this was not automatically correctly set.

Inner diameter is entered here for example 27.5 mm.


Important:

The *inner diameter* should be entered as precisely as possible, because otherwise the measurement results are not correct!

There is no uniform standard for the tube *inner diameter*!
(Please, inquire at the manufacturer or measure by your own!)

Sensor - Settings / Label and set the description fields


Main menu → Settings → Sensor settings → A1 → arrow right (2.page → Gas Constant description field

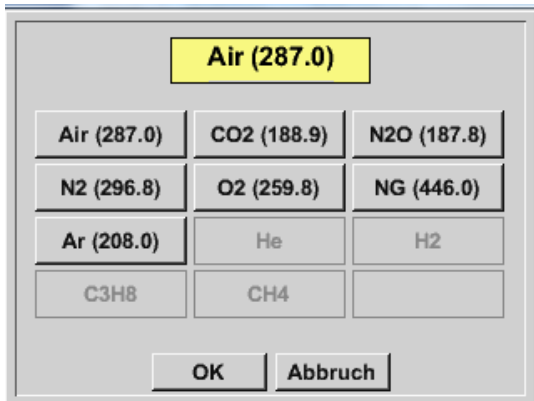

A preset selection of suitable *Gas Constants*.

In the same way as here in chapter [12.2.2.7 Label and set the description fields](#) described, the remaining description fields can be labeled.

Main menu → Settings → Sensor settings → A1 → arrow right (2.page)

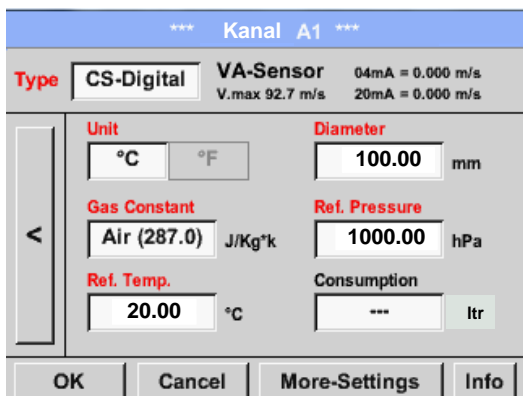

The red labeled description fields indicate, that different values, such as the *Diameter* and the *Type*, have been changed or added.

See also chapter [12.2.2.1 Choice of the sensor types \(For example type CS-Digital sensor\)](#)

Remark:

After confirming with *OK*, the font is black again and the values and settings are accepted.

Attention:

Reference temperature and reference pressure (factory setting 20 °C, 1000 hPa):
All volume flow values (m³/h) and consumption values indicated in the display are related to 20 °C, 1000 hPa (according to ISO 1217 intake condition)
0 °C and 1013 hPa (= standard cubic meter) can also be entered as a reference.
Do not enter the operation pressure or the operation temperature under reference conditions!

Sensor-settings / Configuration of Analogue-Sensors

12.2.2.8 Configuration of Analog-Sensors

Applicable only at DS 400 variants with an analog board equipped.

A brief overview of the possible *Type* of settings with examples.


Except *CS-Digital*, see chapter [12.2.2.1 Choice of the sensor types \(For example type CS-Digital sensor\)](#) and [12.2.2.6 Dewpoint sensor with type CS-Digital](#).

The **Alarm** (See chapter [12.2.2.4 Alarm settings](#)) and **Record** buttons (See chapter [12.2.2.3 Recording measurement data](#)), the **Resolution of the decimal places** and **Short Name or Value Name** (See chapter [12.2.2.2 Name measurement data and define the decimal places](#)), and the **More-Settings** (See chapter [12.2.2.5 More-Settings \(scale analogue output\)](#)) are all described in chapter [12.2.2 Sensor settings](#).

The caption of description fields, see chapter [12.2.2.7 Label and setting the description fields](#).

12.2.2.8.1 Type 0 - 1/10/30 Volt und 0/4 – 20 mA


Main menu → Settings → Sensor settings → B1 → Type description field → 0 - 1/10/30 V

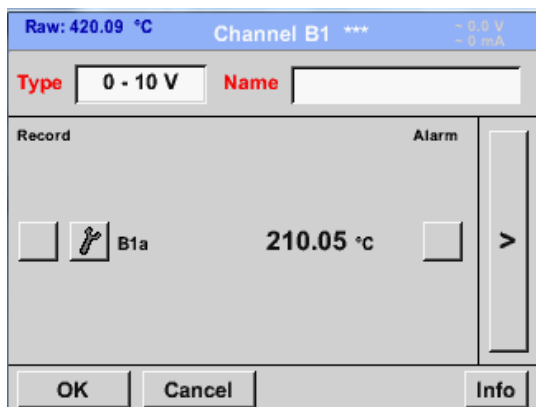

Please see the scale of the sensor (here for example **Type 0 - 10V** corresponds to 0 - 250 ° C) from the data sheet of the connected sensor.

By *Scale 0V* enter the lower and by *Scale10V* the upper scale value.

Main menu → Settings → Sensor settings → B1 → arrow right (2.page)

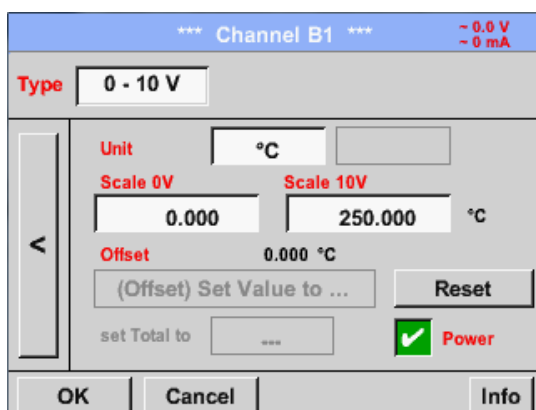

By *Scale 0V* enter the lower and by *Scale10V* the upper scale value

The *Sensor Supply Voltage* is switched **On**, if it's required by the sensor type, otherwise off (no green hook).

Please confirm by pressing the **OK** button.

Sensor-settings / Configuration of Analogue-Sensors

It is possible to define a Offset-Value. With the *Set Value to*-button (*Offset*) you enter it. The positive or negative difference of the *Offset* will be displayed.

By pressing the *Reset*-button the *Offset* will be deleted.

Main menu → Settings → Sensor settings → B1 → arrow right (2.page) → description field Unit

A preset selection of suitable units by *Type* 0 - 1/10/30 V and 0/4...20 mA.

The different pages could be displayed by pressing the *Page*-button.

In addition *User* specific units could be defined

Here with the *Edit* button could analog to *description field* a User unit be defined.

Main menu → Settings → Sensor settings → A1 → Type description field → 0/4 - 20 mA

Here for example *Type* 4 - 20 mA.

Sensor-settings / Configuration of Analogue-Sensors

12.2.2.8.2 Type PT100x and KTY81

Main menu → Settings → Sensor settings → B1 → Type description field → PT100x

*** Channel B1 *** - 0.0 V
- 0 mA

Type **PT100** Name **Measure 2**

Record	Alarm
<input checked="" type="checkbox"/> B1a 123.54 °C	<input type="checkbox"/>
<input type="checkbox"/> R 0.000	<input type="checkbox"/>
<input type="checkbox"/> U 0.000	<input type="checkbox"/>

OK Cancel Info

*** Channel B1 *** - 0.0 V
- 0 mA

Type **PT100**

Unit **°C**

Sensortype: **PT100** PT1000 KTY81

Offset **0.00 °C**

(Offset) Set Temp. to ... Reset

OK Cancel Info

Here the sensor type *PT100* and the *Unit* in °C are chosen, alternatively the sensor types *PT1000* and *KTY81*, as well as the *Unit* °F can be selected.

More setting options, see chapter [12.2.2.8.1 Type 0 - 1/10/30 Volt and 0/4 - 20 mA](#)

Sensor-settings / Configuration of Analogue-Sensors

12.2.2.8.3 Type Pulse (Pulse ration)

Main menu → Settings → Sensor settings → B1 → Type description field → Type description field → Pulse

*** Channel B1 ***
- 0.0 V
- 0 mA

Type **Pulse** Name **Measure 3**

Record	Unit	Alarm
<input checked="" type="checkbox"/> B1a	9000 m ³ /h	<input type="checkbox"/>
<input checked="" type="checkbox"/> B1b	367001 m ³	<input type="checkbox"/>
<input type="checkbox"/> B1c	50 Hz	<input type="checkbox"/>

OK Cancel Info

Typically the value with unit of **1 Pulse** is standing on the sensor and can directly entered to the **1 Pulse =** description field.

Remark:

Here, all description fields are already labeled or occupied.

*** Channel B1 ***
- 0.0 V
- 0 mA

Type **Pulse**

1 Pulse = m³

Unit	Pulse	Consumption	Counter
<input type="text" value="m<sup>3</sup>"/>	<input type="text" value="m<sup>3</sup>/h"/>	<input type="text" value="m<sup>3</sup>"/>	<input type="text" value="m<sup>3</sup>"/>

Counter m³ Power

OK Cancel Info

Main menu → Settings → Sensor settings → B1 → arrow right (2.page) → Unit Pulses

<input type="text" value=""/>	<input type="text" value="ltr"/>	<input type="text" value="m<sup>3</sup>"/>	<input type="text" value="Nltr"/>	<input type="text" value="Nm<sup>3</sup>"/>
<input type="text" value="cf"/>	<input type="text" value="Ncf"/>	<input type="text" value="kg"/>	<input type="text" value="kWh"/>	<input type="text" value="PCS"/>
<input type="text" value=""/>	<input type="text" value=""/>	<input type="text" value=""/>	<input type="text" value=""/>	<input type="text" value=""/>
<input type="text" value=""/>	<input type="text" value=""/>	<input type="text" value=""/>	<input type="text" value=""/>	<input type="text" value=""/>

OK Abbruch

By **Unit Pulse** you can choose between a flow volume or a power consumption unit.

Sensor-settings / Configuration of Analogue-Sensors

Main menu → Settings → Sensor settings → B1 → arrow right (2.page) → Unit Consumption




Unit of current *Consumption* by *Type Pulse*

Remark:

Example with the unit cubic meters / hour.

Main menu → Settings → Sensor settings → B1 → arrow right (2.page) → Unit Counter

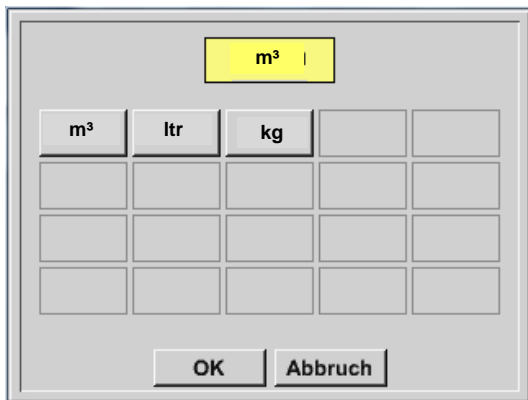

The available Units for the *Unit of Counter* by *Type Pulse*


The **counter** can be set any time to any value you need.

More setting options, see chapter [12.2.2.8.1 Type 0 - 1/10/30 Volt and 0/4 - 20 mA!](#)


Sensor-settings / Type „No Sensor“

12.2.2.8.4 Type „No Sensor“

Main menu → Settings → Sensor settings → A2 → Type description field → No Sensor

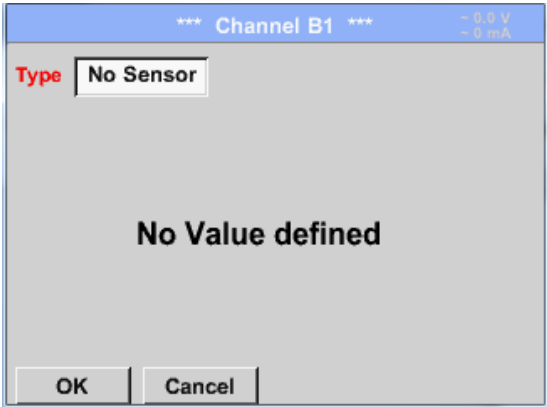

Is used to declare a not currently needed channel as *No Sensor defined*.

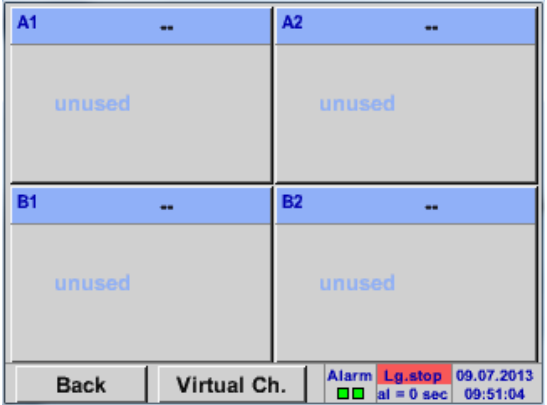

If you go to *Type No Sensor Back*, channels will appear as *unused*.

Sensor-settings / Type „Modbus“

12.2.3 Type Modbus

12.2.3.1 Selection and activation of Sensor-Type Modbus

First Step: First step: choose an unused sensor channel

Main menu → Settings → Sensor settings → A1


Second step: choose type Modbus

Main menu → Settings → Sensor settings → A1 → Type description field → Modbus

Third step: confirm with *OK*.

Now, a *Name* (See chapter [12.2.2.7 Label and setting the description fields](#)), can be determined.

Main menu → Settings → Sensor settings → A1 → arrow right (2.page) → Va → use

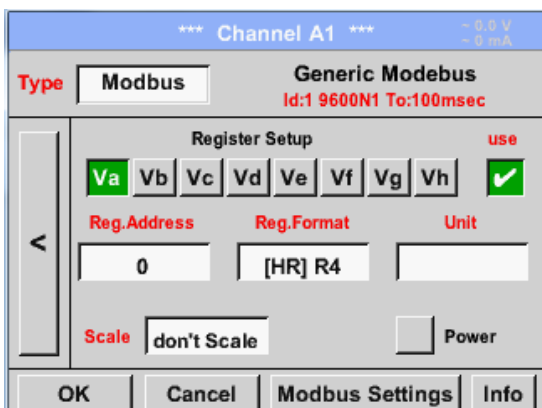


Via Modbus it is possible to read out up to 8 Register-Values (from Input or Holding Register) of the sensor.

Selection by the Register Tabs *Va – Vh* and activation by pressing of the corresponding *Use* button.

12.2.3.2 Modbus Settings

Main menu → Settings → Sensor settings → A1 → arrow right (2.page) → Modbus Settings → ID - Textfield

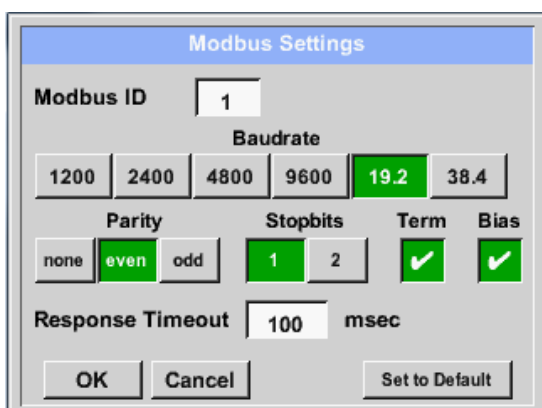

Please insert here the specified *Modbus ID* of the sensor, allowed values are 1 -247, (e.g.. here *Modbus ID = 22*)

For setting the Modbus ID on the sensor please see sensor-datasheet.

In addition in the menu are the serial transmission settings *Baudrate*, *Stopbits*, *Paritybit* and *Timeout* time to define.

In case that the DS400 is the end of the RS485 bussystem with activating *Term*- & *Bias*- button the required termination and biasing could be activated.

Confirmation by pressing *OK* button.

For resetting to the default values please press *Set to Default*.

Sensor-settings / Type “Modbus”

Main menu → Settings → Sensor settings → A1 → Reg. Address description field

The measurement values are kept in the registers of the sensor and can be addressed via Modbus and read by the DS400.

This requires to set the desired register addresses in the DS400.

Entering the register / data address is here in decimal with 0-65535.

Important:

Required is the correct *register-address*.

It should be noted that the register-number could be different to the register-address (Offset). For this please consult the sensor data sheet.

Main menu → Settings → Sensor settings → A1 → Reg. Format description field

With the buttons *Input Register* and *Holding Register* the corresponding Modbus-register type will be selected.

The number format and transmission order of each value needs to be defined by *Data Type* and *Byte Order*. Both have to be applied in correct combination.

Supported Data types:

Data Type:	UI1 (8b) = unsigned Integer	=>	0	-	255
	I1 (8b) = signed integer	=>	-128	-	127
	UI2 (16b) = unsigned Integer	=>	0	-	65535
	I2 (16b) = signed integer	=>	-32768	-	32767
	UI4 (32b) = unsigned Integer	=>	0	-	4294967295
	I4 (32b) = signed integer	=>	-2147483648	-	2147483647
	R4 (32b) = floating point number				

Byte Order:

The size of each Modbus-register is 2 Byte. For a 32 bit value two Modbusregister will be read out by the DS500. Accordingly for a 16bit Value only one register is read.

In the Modbus Specification the sequence of the transmitted bytes is not defined clearly. To cover all possible cases, the byte sequence in the DS500 is adjustable and must adapted to the respective sensor. Please consult here for the sensor datasheet.

e.g.: High byte before Low Byte, High Word before Low Word etc

Therefore the settings have to be made in accordance to the sensor data sheet.

Sensor-settings / Type "Modbus"

Beispiele :

Holding Register - UI1(8b) - Zahlenwert: 18

Selection Register Type *Holding Register*,
Data Type *UI1(8b)* und Byte Order *A / B*

	HByte	LByte
18 =>	00	12
Data Order	1. Byte	2. Byte
A	00	12
B	12	00

Holding Register – UI4(32) - Value: 29235175522 → AE41 5652

Selection Register Type *Holding Register*,
Data Type *UI1(32b)* und Byte Order *A-B-C-D*

	HWord		LWord	
	HByte	LByte	HByte	LByte
29235175522 =>	AE	41	56	52
Data Order	1.Byte	2.Byte	3.byte	4.Byte
A-B-C-D	AE	41	56	52
D-C-B-A	52	56	41	AE
B-A-D-C	41	AE	52	56
C-D-A-B	56	52	AE	41


Main menu → Settings → Sensor settings → A1 → Unit- description field

By pressing the description field *Unit*
the list with the available units appear

Please select the unit by pressing the
respective button e.g. *m³/h*.
For validation of the unit please push the
button *OK*
To move through the list please press the
button *Page*.
In case the unit is **not** available it is possible
to create a user defined unit.
Therefore please select one of the *User_X*
buttons..

Sensor-settings / Type "Modbus"


Main menu → Settings → Sensor settings → A1 → Scale- description field

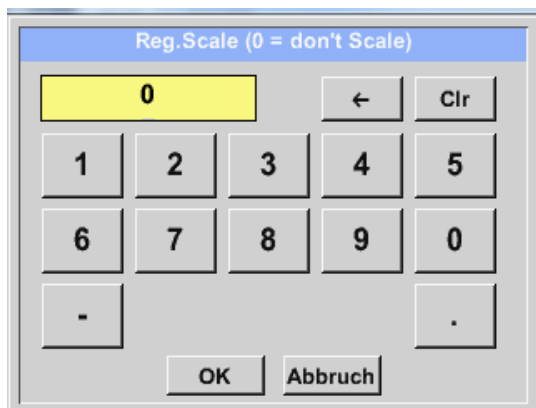

The use of this factor allows to adapt the output value by the same.

By default or value = 0 no scaling is applied and displayed in the field is *don't scale*


Main menu → Settings → Sensor settings → A1 → OK

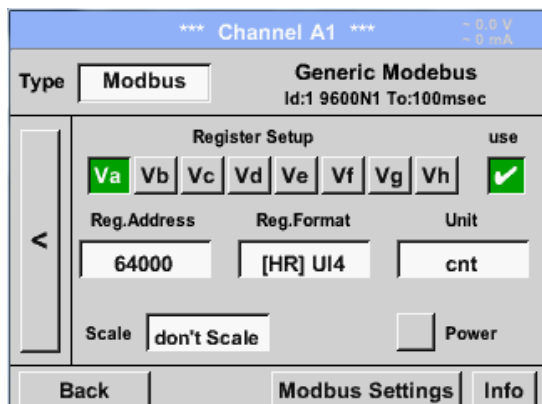

By pressing the *OK* button the inputs are confirmed and stored.

12.2.4 Device Settings


Main menu → Settings → Device settings

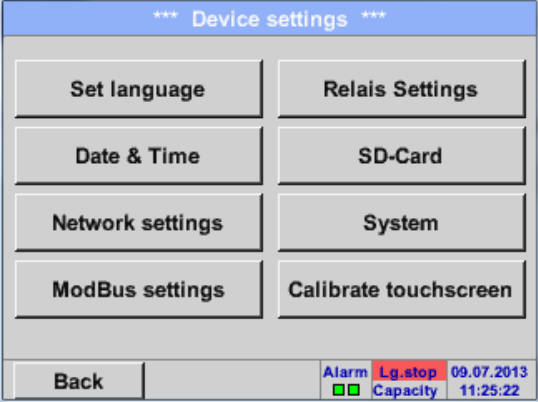

Overview of *Device settings*

12.2.4.1 Language

Main menu → Settings → Device settings → Set language

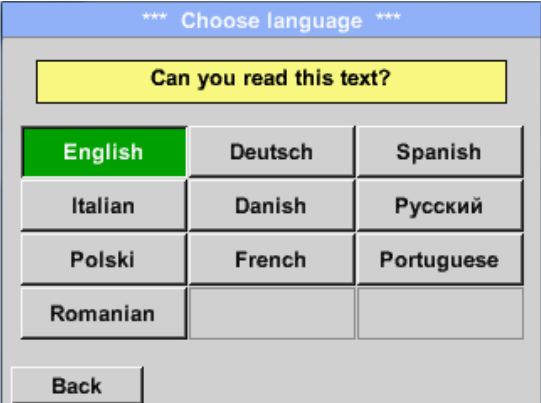


Here you can select one of 10 languages for the DS 400.

Device-Settings / Date & Time

12.2.4.2 Date & Time

Main menu → Settings → Device settings → Date & Time

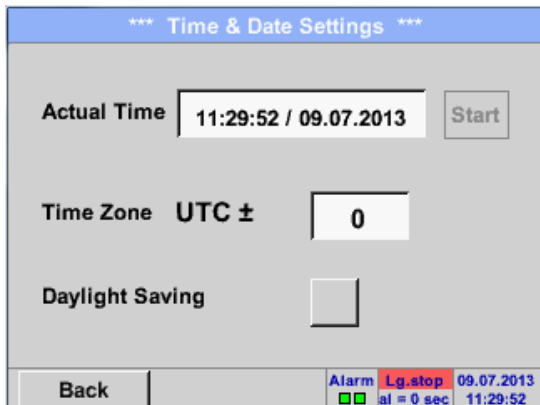

*** Time & Date Settings ***


Actual Time

Time Zone UTC ±

Daylight Saving

Back Alarm Lg.stop 09.07.2013
 al = 0 sec 11:29:52

By pushing the *Time Zone* description field and enter the correct *UTC*, you can set the correct time all over the world.

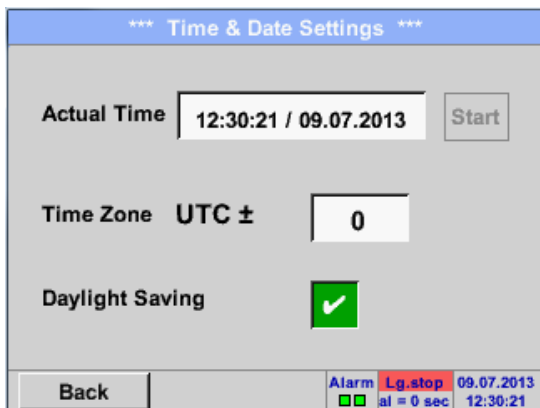

*** Time & Date Settings ***

Actual Time

Time Zone UTC ±

Daylight Saving


Back Alarm Lg.stop 09.07.2013
 al = 0 sec 12:30:21

The summer and winter time switchover is realized by pushing the *Daylight Saving* button.

Device-Settings / Network-Settings

12.2.4.3 Network-Settings

Main menu → Settings → Device settings → Network-Settings

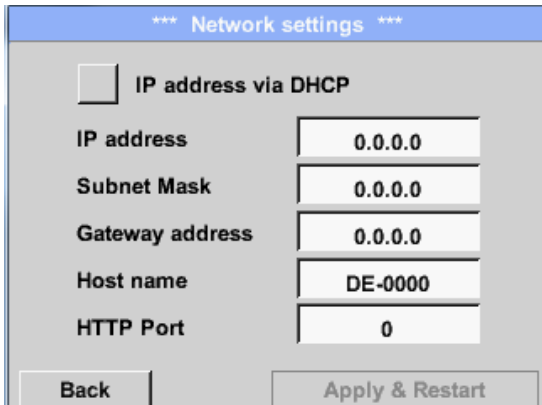

*** Network settings ***

IP address via DHCP


IP address	0.0.0.0
Subnet Mask	0.0.0.0
Gateway address	0.0.0.0
Host name	DE-0000
HTTP Port	0

Back Apply & Restart

Here you can set up and made a connection, with or without *DHCP*, to a computer.

Remark:

With activated *DHCP* (green hook), the automatic integration of the DS 500 in an existing network is possible, without a manual configuration.

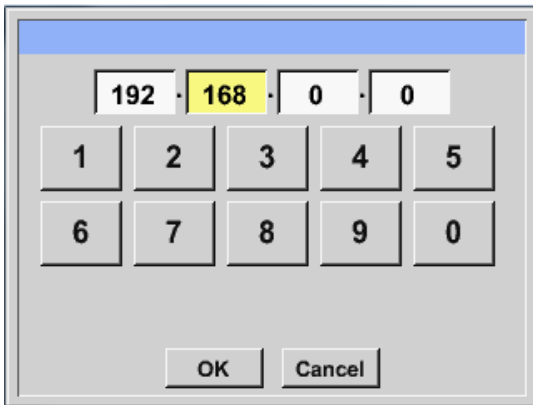

192 . 168 . 0 . 0

1	2	3	4	5
6	7	8	9	0


OK Cancel

After pushing, for example the *IP address* description field, the command window appears, where in the selected yellow area a partial *IP address* can be entered manually.

The *Host name* can be entered or changed by pushing the description field.

Subnet Mask and Gateway address are entered in the same way!

Label *Host name*, see chapter [12.2.2.7 Label and setting the description fields!](#)

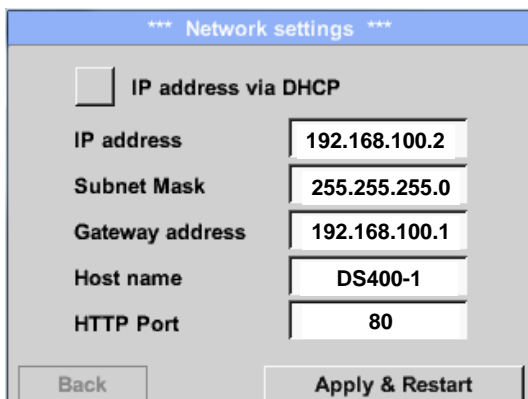

*** Network settings ***

IP address via DHCP

IP address	192.168.100.2
Subnet Mask	255.255.255.0
Gateway address	192.168.100.1
Host name	DS400-1
HTTP Port	80

Back Apply & Restart

For example a *IP-Address* out of address range of the class C-Net

Remark:

Private Address range Class A-Net
10.0.0.0 to 10.255.255.255

Private Address range Class B-Net
72.16.0.0 to 172.31.255.255

Private Address range Class C-Net
192.168.0.0 to 192.168.255.255

Subnet Mask: e. g. 255.255.255.0

Device-Settings / Modbus (Slave)

12.2.4.4 ModBus (Slave)

With the *RS485 ModBus* interface customer specific systems (GLT, SPS, Scada) could be connected to the DS 400.

Main menu → Settings → Device settings → ModBus settings

*** ModBus Einstellung ***

Enable MB-RTU Modbus ID 1

Baudrate

1200 2400 4800 9600 19.2 38.4 57.6 115.2

Parität even odd Stoppbit 1 2 Term Bias

Standardwerte

anwend Rx: 0 Tx: 0 Crc-Err: 0 Par-Err: 0 Res.Diag

In this menu the transmission parameter *Modbus ID, Baudrate, Stoppbit und Parity* will be set. With activation of *Enable Modbus RTU(RS485)* the Modbus is enabled.

By pressing *Set to Default* the default values will be set.

Default values: Baudrate: 19200
Stoppbit: 1
Parity: even

12.2.4.5 Relais Einstellungen

Main menu → Settings → Device settings → Relais-Settings

*** Relais Settings ***

Relais 1 allow Reset on Alarm

Relais 2 allow Reset on Alarm

Setup Relais Delay Time

Zurück

By activated *relais* button it is allowed / possible to turn off the corresponding alarm relays in the popup appearing in alarm case.

Setting is only possible in the password protected *Device Settings* menu.

Default values at delivery are **not allowed**.

Alarm Warning

Channel (A1) "Luft-1"
Value "Flow"

Reset Active Relais

Relay 1 Relay 2

OK

In an alarm case e.g. here alarm 1(Yellow) for channel A1 a popup will be displayed.


If in the Relay Settings the turning off of Relay 1 was allowed by pressing Relay 1 button switches this off.

By confirming with OK the popup will be closed.

12.2.4.6 SD-Card

Main menu → Settings → Device settings → SD-Card → Reset Logger Database

Main menu → Settings → Device settings → SD-Card → Erase SdCard


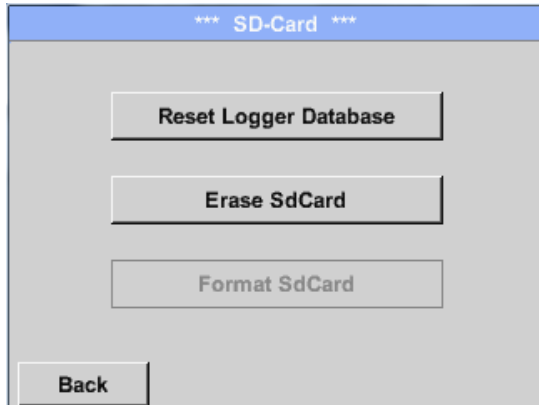


By pressing *Reset Logger Database* all actual stored data on SD-Card will be blocked for use in DS 400. Nevertheless all data are still stored and available for external use only.

By pressing *Erase SdCard* all Data on the SD-Card will be deleted.

System

12.2.4.7 System

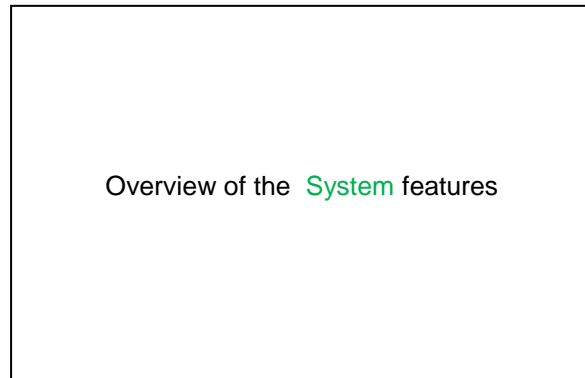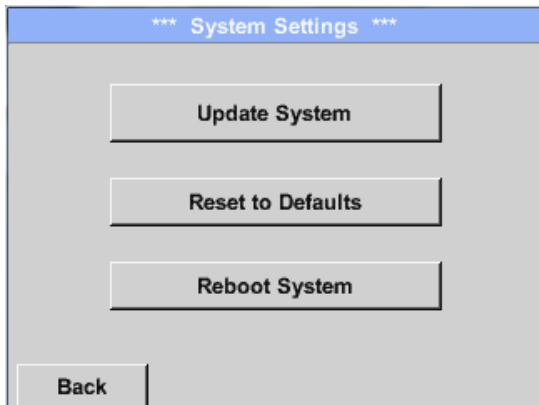

Important:



Before the update, save the **System setting** on a USB stick!

Remark:

The highlighted yellow fields shows, which kind of update is available!



12.2.4.7.1 System update

Main menu → Settings → Device settings → System → System-Update

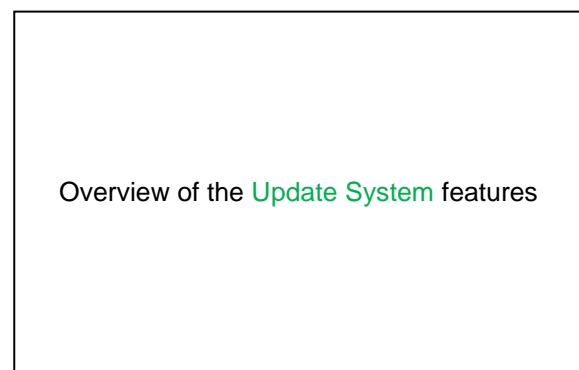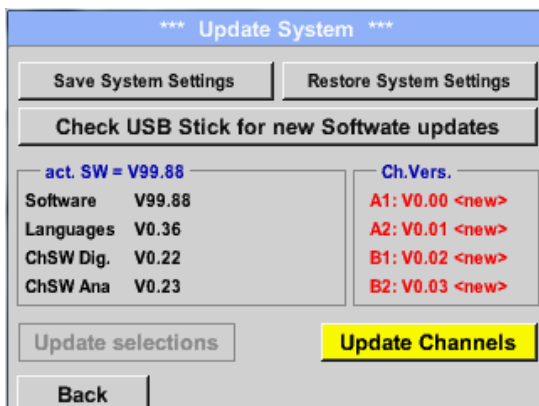

12.2.4.7.2 Save System Settings


Main menu → Settings → Device settings → System → System-Update → Save System Settings

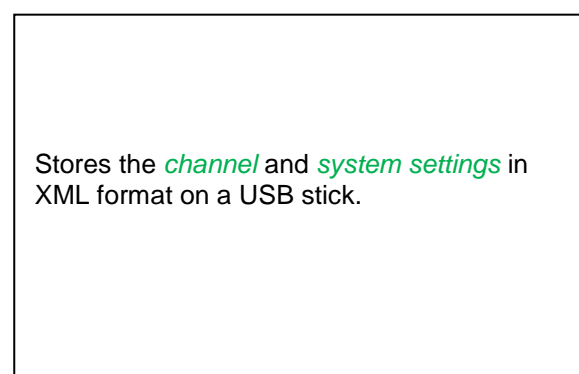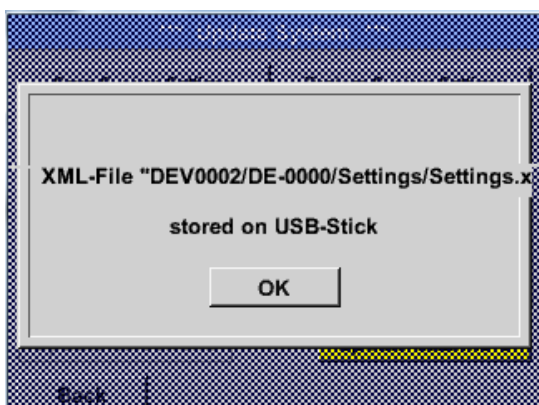


System / System update

12.2.4.7.3 Check for new Software updates (USB)

Main menu → Settings → Device settings → System → Update System → Check USB Stick for new Software updates

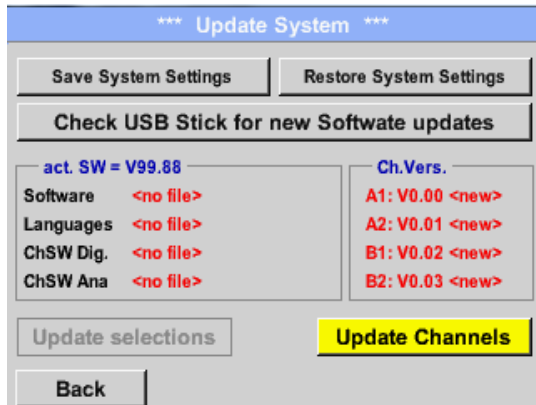

If after pushing the *Check USB Stick for new Software updates* button the following messages in the window appears, the DS 400 is not connected properly with the USB stick or no files are available.

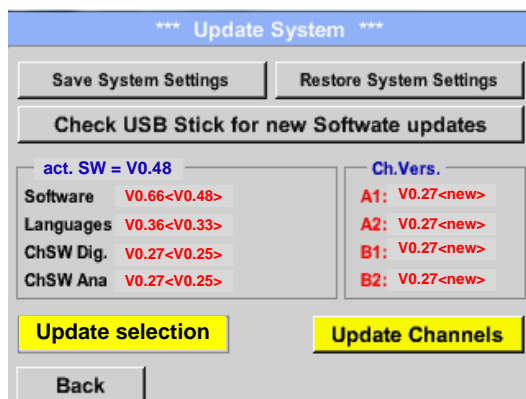

If the DS 400 is correctly connected to USB, the font will be black and left the different update options (with a green hook) are showed.

And right aside it shows the current (old) and another (new) available versions

Main menu → Settings → Device settings → System Update → System → Update selections


DS 400 update for all selected options (software, fonts, etc.).

Important:

If the *Reboot system* button after the update appears, he must be pushed to restart the DS 400!

System / System update

Main menu → Settings → Device settings → System → Update System → Update Channels

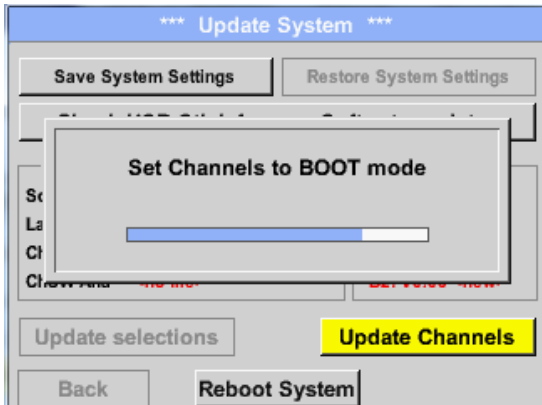


Update for the available *channels* of the DS 400.

Important:


If after the channel update the *Reboot system* button appears, it has to be pushed to restart the DS 400!

12.2.4.7.4 Restore System Settings

Main menu → Settings → Device settings → System → Update System → Restore System Settings

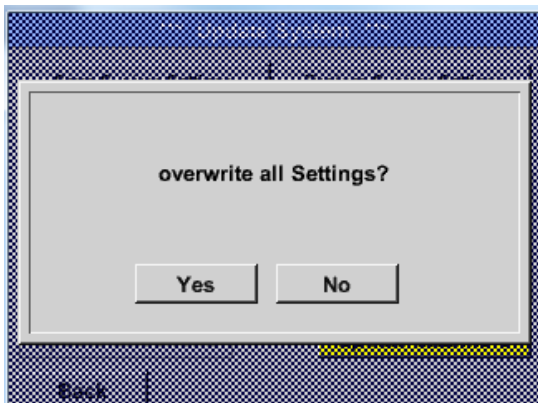

With the help of the *Restore System Settings* button the channel and system settings can be reset to the last saved version.

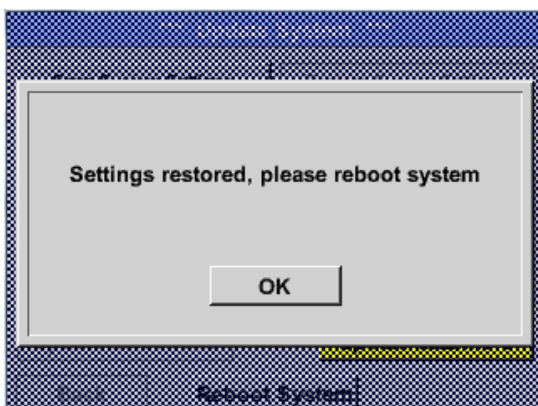



Important:

If the channel and system settings have been reset you have to push *OK* and then the *Reboot system* button.

System / Factory reset

12.2.4.7.5 Factory Reset


Main menu → Settings → Device settings → System → Reset to Defaults

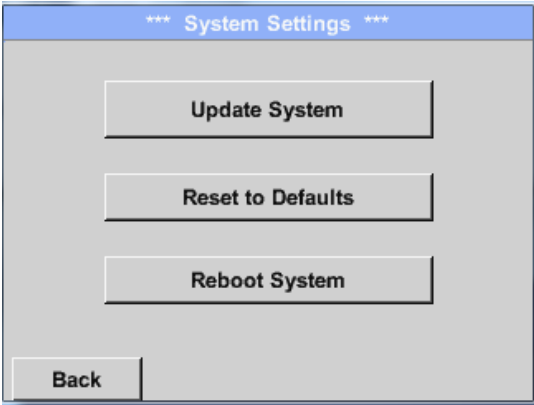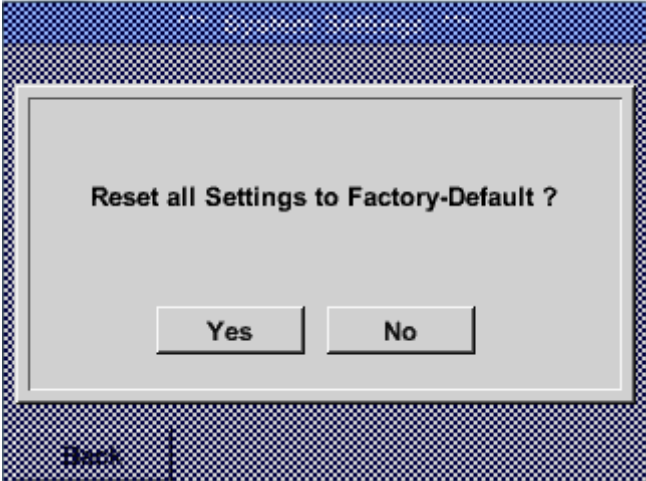

Reboot the *System* here, if you need it!

12.2.4.8 Calibrate touch-screen

Main menu → Settings → Device settings → calibrate touchscreen

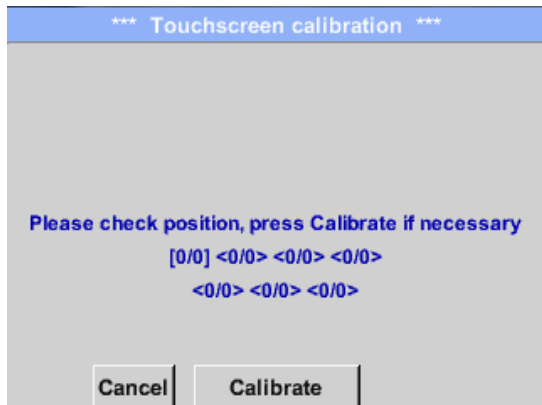

If necessary, the touch-screen calibration can be changed here.


Push *Calibrate* and it appears, 1. left above, 2. bottom right and 3. in the middle, a calibration cross that must be pushed consecutively.

If the calibration finished and the touch-screen display averaged, you can confirm with *OK*.

If this is not the case, so you can repeat the calibration with the help of the *Cancel* and *Calibrate* buttons.


12.2.5 Set backlight

Main menu → Settings → Helligkeit

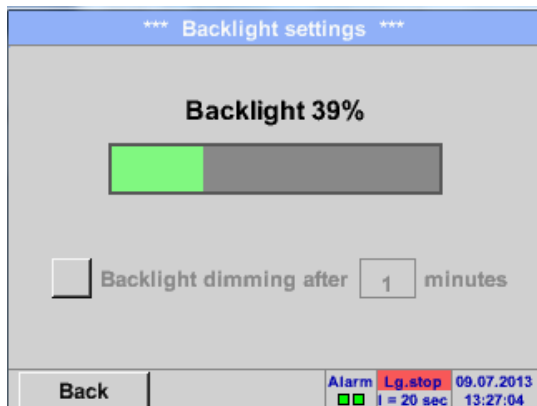

Here you adjust the desired *Backlight* (15-100%) of the display directly.

e.g. *Backlight* to 39 %

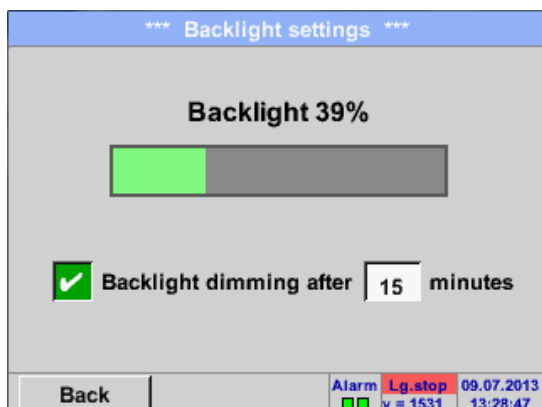

With the help of the *Backlight dimming after* button, after a definable time interval (here after 15 minutes), the *Backlight* can be reduced to the minimum.

As soon as the dimmed screen is operated again, the *Backlight* is committed automatically on the last set value before dimming.

Remark:

At the first touch, the *Backlight* in our example is reset to 39%, after that a "normal" function operation is possible.

Important:

If the *Backlight dimming after* button is not activated, then the *Backlight* stays permanently on, in the currently set brightness.

12.2.6 Cleaning

Main menu → Settings → Cleaning




This function can be used for cleaning the touch panel during running measurements.

If one minute is not enough time to clean, the process can be repeated at any time.

Is the cleaning faster finished, then you can push the *to abort press long* button (for one or two seconds) to cancel.

12.2.7 System-Status

Main menu → Settings → System-Status

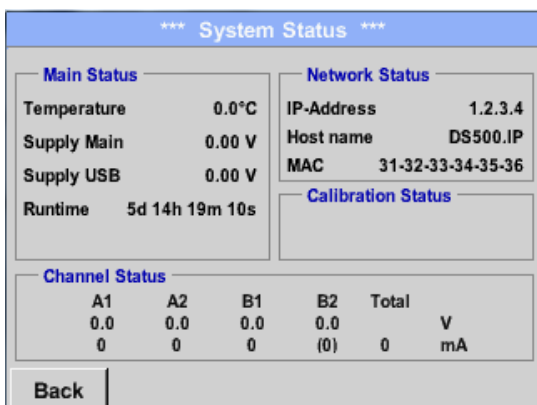


The function **System Status** offers an overview, fitting voltages and currents on the individual and the entire channels, as well as the power supply of the power supply units.

In addition, it offers the most important network information, such as *IP*, *host name* and *MAC*.

By the *Runtime*, you always know how long the DS 400 was in total in operation.

12.2.8 About DS 400

Main menu → Settings → About DS 400

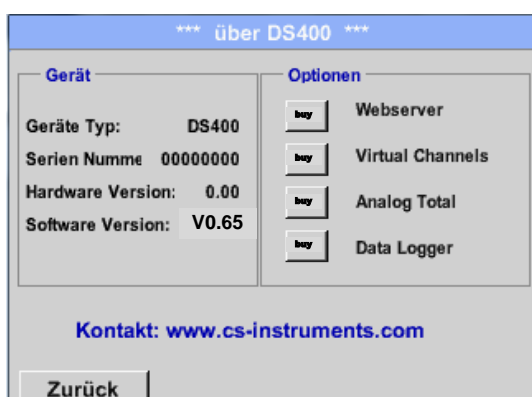

Brief description of the **Hardware** and **Software Version**, as well as the **Serial Number** of the DS 400.

Under options, you can buy four additional, different functions, if you haven't done this by ordering.

12.2.9 Virtual Channels (optional)

The option „Virtual Channels“ offers 4 additional channels (no HW Channels) where it is possible to display calculations of each single HW-Channel, virtual channels and free defined constants as well. For each „Virtual Channel“ are 8 calculations each with of 3 operands and 2 operations possible.

Possible cases are calculation of:


- Specific performance of a compressor(s)
- Complete consumption of a compressor(or the sum of several compressors)
- Energycost etc.

An example for a specific performance calculation see chapter [12.2.6.6](#)


12.2.9.1 Option „Virtual Channels“ activation

After purchasing of the option „Virtual Channels“ the functionality have to be activated first.

Main menu → Settings → About DS 400

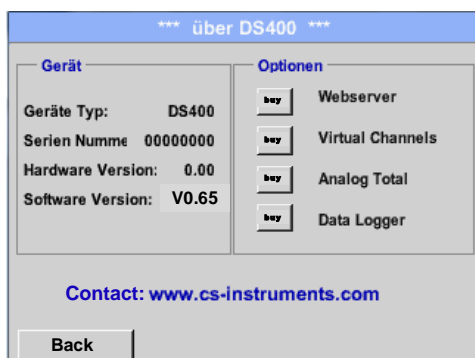

Contact:

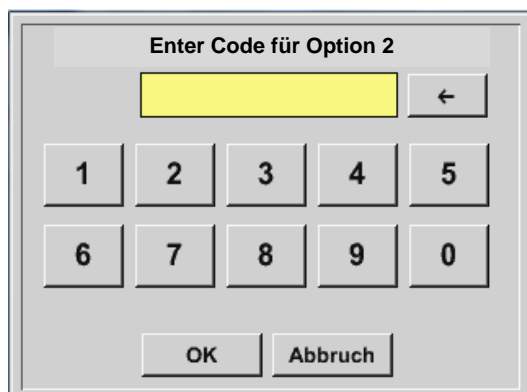


Please push the button Buy for „Virtual Channels“ and you will requested to insert the key-code received

Please enter the Key-Code in the text-field and activate the option by pushing the button **OK**

Virtual Channels

12.2.9.2 Virtual Channels Einstellung

Main menu → Settings → Sensor Settings → Virtual Channels

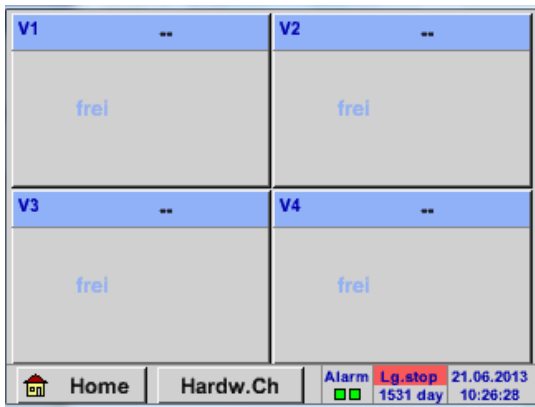


After pushing the button „*Virtual Channels*“ in the Sensor Settings menu an overview with the 4 available “*Virtual Channels*” is displayed.

Remark:
By default all channels are without settings.


12.2.9.3 Selection of Sensor-type

Main menu → Settings → Sensor Settings → Virtual Channels → V1

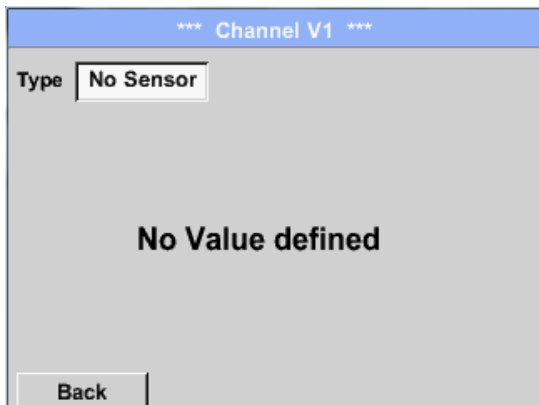

By pushing the description field *Type No Sensor* the list of sensor types appears (see next step).

Main menu → Settings → Sensor Settings → Virtual Channels → V1 → Type description field

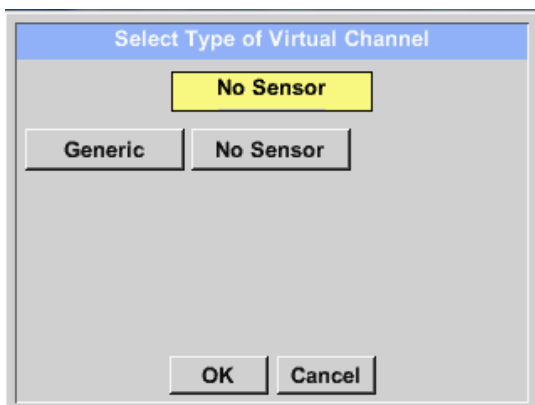

If still no sensor has been configured, the *Type No Sensor* appears.

By pushing the button **Generic** the virtual channel is selected. Pushing the button **No Sensor** will reset the virtual channel.

Confirmation of selection is done by pressing the button **OK**.

Virtual Channels

Main menu → Settings → Sensor Settings → Virtual Channels → V1 → Name description field

By pushing the Text field *Name* a Sensor name could be inserted.

12.2.9.4 Configuration of each single virtual value

Each virtual channel includes 8 individual calculated values where every value has to be activated separately.

12.2.9.4.1 Activation of a single virtual value

Main menu → Settings → Sensor Settings → Virtual Channels → V1 → arrow right(2.page) → V1a → Use

Every virtual value has to be activated by selecting the respective *Value-Button* e.g. *V1a* and pushing of the *Use Button*.


12.2.9.4.2 Definition of Operands

Main menu → Settings → Sensor Settings → Virtual Channels → V1 → arrow right(2.page) → 1stOperand


By accessing the text field *1st Operand* The list with all channels (HW and virtual channels) and const. Value appears.

Virtual Channels


Main menu → Settings → Sensor Settings → Virtual Channels → V1 → arrow right(2.page) → 1stOperand → A1

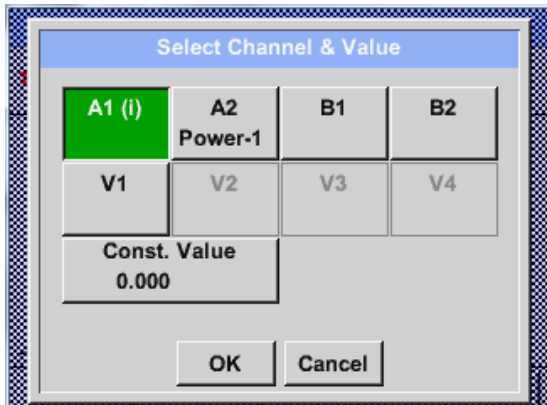

By pressing a button either for HW-, virtual channel or const. Value e.g. *A1* a list of all available measurement channels or measurement values will appear.

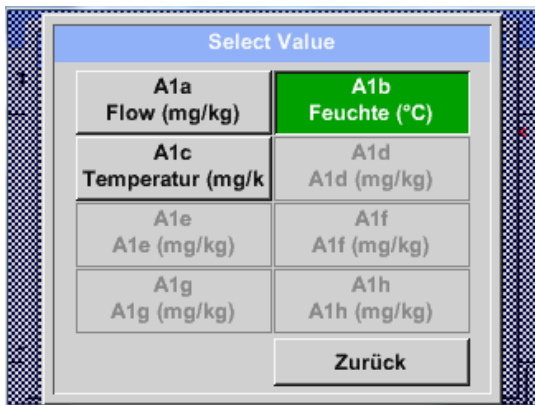

Pressing the respective channel button e.g. *A1b* will select the measurement channel

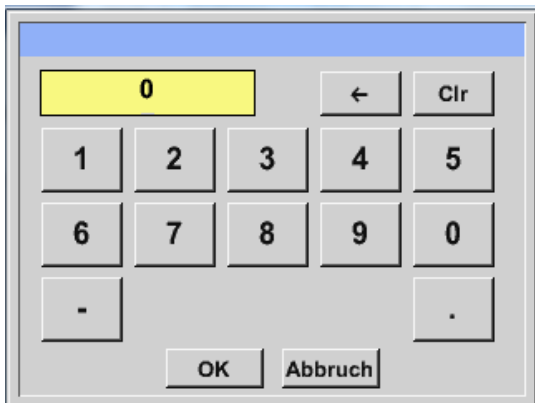

Pressing the button *const. Value* requests the input of the *const. Value* into the text field.

With button *OK* the value will be validated

With the buttons *←* and *Clr* it is possible to correct the input.

Button *←* deletes the last figure


Button *Clr* clears the whole field

This approach is analogous to the other operands. (1st Operand, 2nd Operand and 3rd Operand) .

Virtual Channels

12.2.9.4.3 Definition of Operations

Main menu → Settings → Sensor Settings → Virtual Channels → V1 → arrow right (2.page) → 1st Operation

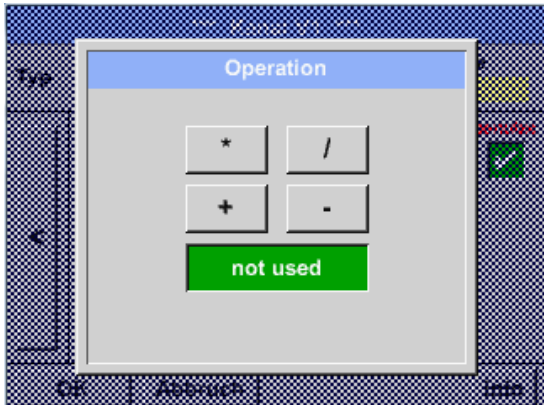

By accessing the text field *1st Operation* the list with all available operands appears.


Selecting and validation of the operand by pressing the respective operand.

Pressing of the button *not used* deactivates the operation of the dedicated operand.

This approach is analogous for both operations (1st Operation and 2nd Operation)

12.2.9.4.4 Definition of Unit

Main menu → Settings → Sensor Settings → Virtual Channels → V1 → arrow right (2.page) → Unit

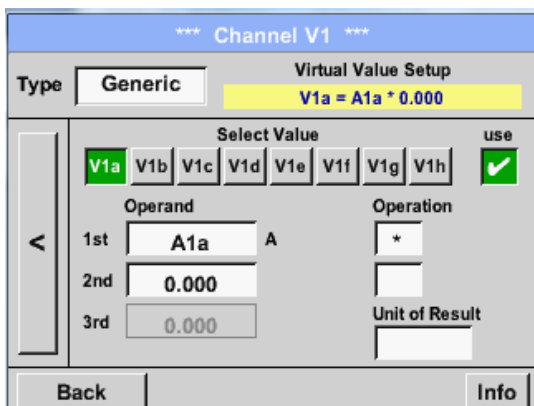


By accessing the text field *Unit of Result* the list with all available units appears




Please select the unit by pressing the respective button e.g. *m³/h*.
For validation of the unit please push the button *OK*
To move through the list please press the button *Page*.
In case the unit is **not** available it is possible to create a user defined unit.
Therefore please select one of the *User_X* buttons.

Virtual Channels

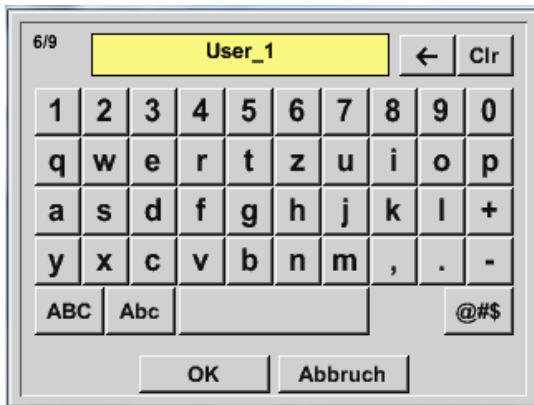

By pressing the button *Edit* you enter the menu for inserting the new Unit.

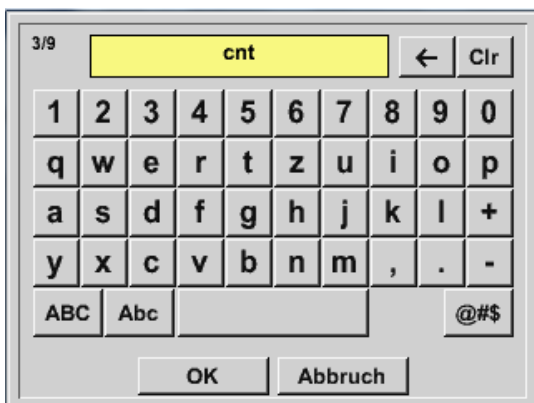

Then define the unit and confirm it with the button *OK*.

With the buttons *←* and *Clr* it is possible to correct the input.

Button *←* deletes the last figure
Button *Clr* clears the whole field

Important

Each calculation allows you the use of maximum 3 operands and 2 operations.

The calculation is then based on following formula:


Example: $V1a = (1st\ Operand\ 1st\ operation\ 2nd\ Operand)\ 2nd\ operation\ 3rd\ Operand$

$$V1a = (A1c - A2a) * 4.6$$


Virtual Channels

12.2.9.5 Value name, resolution of decimal places and recording of values

Main menu → Settings → Sensor Settings → Virtual Channels → V1 → Tool-Button

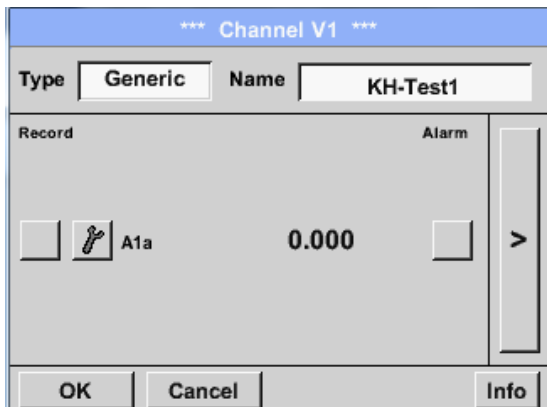

The *Resolution* of the decimal places, the *Short Name* and *Value Name* are found under the **Tool button**

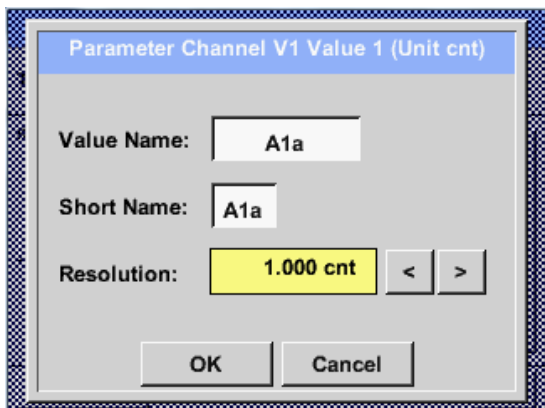


For the recorded *Value* there can be entered a *Name* with 10 characters and later in menu item *Graphics/Real time values* it is easier to identify it.

Default names are e.g. *V1a*.
V1 is the Channelme, *a* is the first measuring value of channel V1, *b* is the second measuring value and *c* the third etc.

The *Resolution* of the decimal places is simply adjustable by pushing right and left

Main menu → Settings → Sensor Settings → Virtual Channels → V1 → Record Button

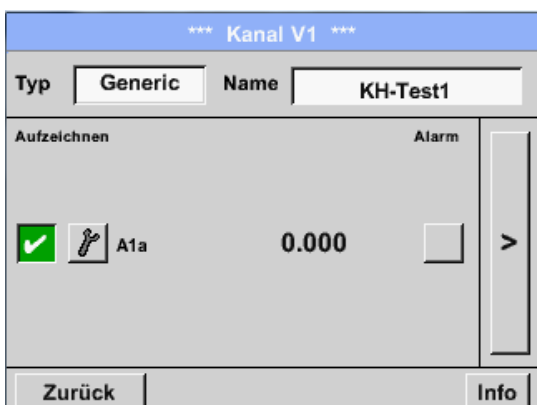

Use the *Record* buttons to select the measurement data that will be stored by **activated data logger**.

Attention:

Before the selected measurement data are recorded, the data logger must be activated after the settings (See chapter 12.2.12 [Logger settings \(data logger\)](#)).


See also chapter 12.2.2.2 [Name the measurement](#) and 12.2.2.3 [Recording measurement data](#)

Virtual Channels

12.2.9.6 Calculation Example „Specific Performance“

As an example we assume a compressor system with 3 single compressors.

The consumption measurements are done with consumption sensors VA400 at the inputs A1 – B1 & and an electric meter at input B2.

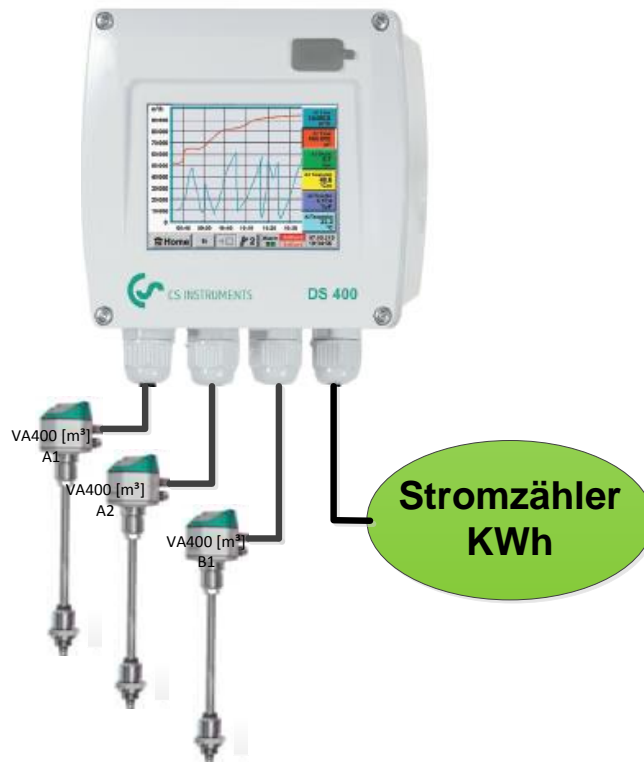

Calculated are the complete consumption of air and energy as well as the "specific performance" of the entire system .

Main menu → Settings → Sensor Settings → Virtual Channels → V1 → arrow right (2.page) → V1a → Use

Typ		Einstellung Virtuelle Werte	
Generic		V1a = (A1b + A2a) + B1a	
Select Value			
V1a			benutze <input checked="" type="checkbox"/>
Operand		Operation	
1.	A1b °C	+	
2.	A2a V	+	
Einheit		m³	
3.		B1a V	
Zurück		Info	

Selection and Input of the operands and operations see chapter [12.2.5.4.2](#) and chapter [12.2.5.4.3](#).

Result in V1a is the sum of consumption sensor A1 + A2 + B1 see range "result". For this example it is 66090,2 m³

Virtual Channels

*** Kanal V1 ***

Typ **Generic** Name **Anlage Halle3**

Aufzeichnen	Alarm
<input type="checkbox"/> V1a 66090.2 m ³	<input type="checkbox"/>
<input type="checkbox"/> V1b 4720.75 KWh	<input type="checkbox"/>

OK Abbruch Info

Result in **V1b** is the energy consumption read out from the energy counter.

V1a → complete Air consumption
V1b → energy consumption

*** Kanal V1 ***

Typ **Generic** Name **Anlage Halle3**

Aufzeichnen	Alarm
<input type="checkbox"/> V1a 66090.2 m ³	<input type="checkbox"/>
<input type="checkbox"/> V1b 4720.75 KWh	<input type="checkbox"/>
<input type="checkbox"/> sp. Leist. 0.0714 KWh/m ³	<input type="checkbox"/>
<input type="checkbox"/> Kosten 991.36 €	<input type="checkbox"/>

OK Abbruch **1** 1..4 Info

Calculation of the *specific. Perfor.* Is done in **V1c** with $V1c = V1b / V1a$
For this example it is 0,072 KWh/m³

Calculation of energy cost complete in **V1d** with $V1d = B2 * 0.21$. For this example it is 991,36 €

Energy cost per m³ produced air is done in **V1e** with $V1e = V1c * 0.21$

Due to more as 4 values used in virtual channel V1 the result range is splitted into 2 pages. To move between the pages please press the *page button*

*** Kanal V1 ***

Typ **Generic** Name **Anlage Halle3**

Aufzeichnen	Alarm
<input type="checkbox"/> V1a 66090.2 m ³	<input type="checkbox"/>
<input type="checkbox"/> V1b 4720.75 KWh	<input type="checkbox"/>
<input type="checkbox"/> sp. Leist. 0.0714 KWh/m ³	<input type="checkbox"/>
<input type="checkbox"/> Kosten 991.36 €	<input type="checkbox"/>

OK Abbruch Info

*** Kanal V1 ***

Typ **Generic** Name **Anlage Halle3**

Aufzeichnen	Alarm
<input type="checkbox"/> Kosten/m ³ 0,015 €/m ³	<input type="checkbox"/>

OK Abbruch **2** 5..8 Info


12.2.10 Analog Total (optional)

The Option „**Analog Total**“ offers the possibility of a consumption measurement also for sensors with analogen outputs e.g.: 0-1/10/30V and 0/4 – 20mA.


12.2.10.1 Option „Analog Total“ activation

After purchasing of the option „Analog Total“ the functionality has to be activated first.

Main menu → Settings → about DS 400

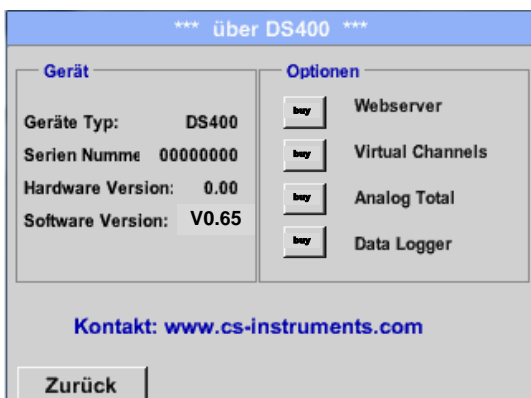

Please push the button *Buy* for „Analog Total“ and you will be requested to insert the key-code received

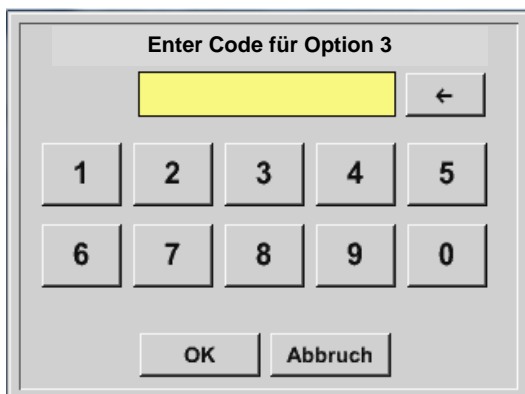


Please enter the Key-Code in the text-field and activate the option by pushing the button *OK*.

Analog Total

12.2.10.2 Selection of sensor type

See also chapter [12.2.2.8 Configuration of analog sensors](#)


Main menu → Settings → Sensor Settings → B1

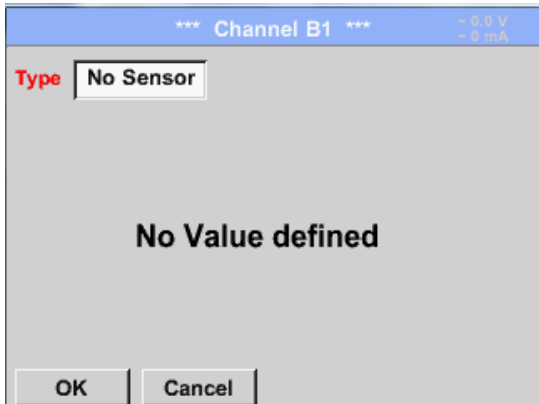

If still no sensor has been configured, the *Type No Sensor* appears.

By pushing the description field *Type No Sensor* the list of sensor types appears (see next step).


Main menu → Settings → Sensor Settings → B1 → Type description field

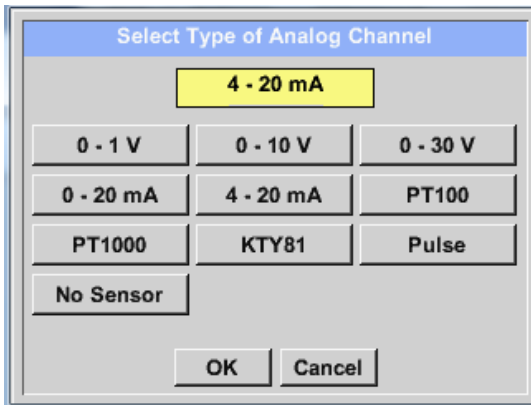

By pushing the button of the required sensor button e.g. 4 -20mA the sensor is selected. Pushing the button *No Sensor* will reset the selection.

Confirmation of selection is done by pressing the button **OK**.

Main menu → Settings → Sensor Settings → B1 → arrow right (2.page)

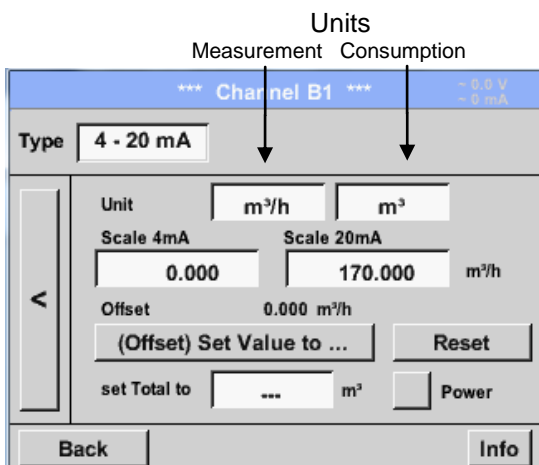

Selection of the units by pushing the text fields for the corresponding measurement and consumption units.

In addition, you can push the *scale buttons* for the min. and max. scaling values and set the measuring range.

Here we have *0 m³/h* for 4 mA and *170m³/h* for 20mA

In addition it is possible to enter a starting value for consumption entering *set Total to* field e.g. to take over value from an old counter.

Confirmation of the inputs by pushing button **OK**

Remark:

The textfield „Unit-Consumption“ is only editable in case of measurement values(Units) with volume per time unit and thus also the consumption calculation.


For labeling and setting of the description fields see also chapter [12.2.2.7 Label and set the description fields](#)

12.2.11 Webserver (optional)


After purchasing of the option „Webserver“ the functionality have to be activated first.

12.2.11.1 Option „Webserver“ activation

Main menu → Settings → about DS 400

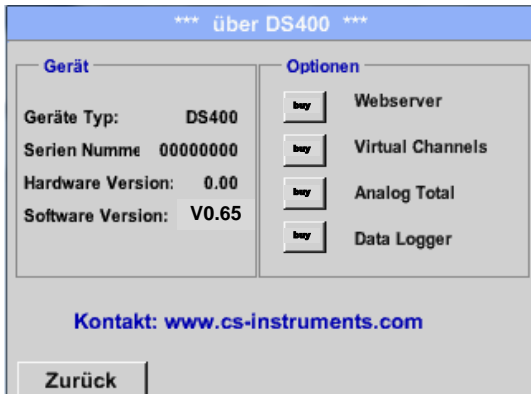

Please push the button *Buy* for „Webserver“ and you will requested to insert the key-code received

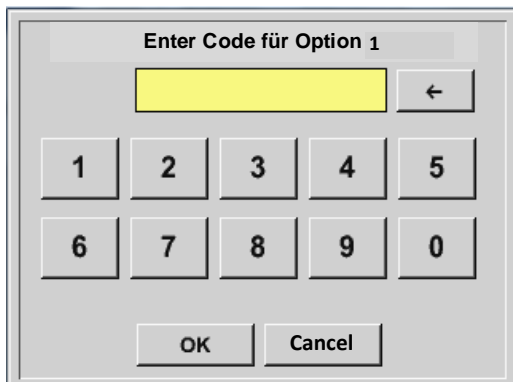

Please enter the Key-Code in the text-field and activate the option by pushing the button *OK*.

With an Internet-Explorer and the IP-address of your DS 400, you can check the following options worldwide:

http:// <IP-address of the DS 400>

Remark:

The IP-address of the DS 500 you can see in the chapters [12.2.7 System Status](#) and [12.2.4.3 Network settings](#)

Info:

CS INSTRUMENTS GmbH
DS 400
10.10.2011

Navigation
Info
Status
Actuals

System Information

Serialnumber	36110005
Hardware Version	V1.20
Software Version	V99.05

[visit CS-Instruments](#)

Staus:

CS INSTRUMENTS GmbH
DS 400
10.10.2011

Navigation
Info
Status
Actuals

Actual System State (17:06:15)

Alarm State

Relais 1	Relais 2

Logger State

State	Interval	Capacity
run	2 sec	524 days

[visit CS-Instruments](#)

Actuals:

CS INSTRUMENTS GmbH
DS 400
10.10.2011

Navigation
Info
Status
Actuals

Actual Values (17:08:16)

Channel	Value 1	Value 2	Value 3
(A1) VA 400	857.479 m³/h	5370109 m³	132.460 m/s
(A2)	54676.1 m³/h	27283584 m³	184.635 m/s
(B1) Druckluft	89699,4 m³/h	3456784 m³	178,35 m/s
(B2)	unused	unused	unused

[visit CS-Instruments](#)


Data Logger

12.2.12 Data Logger (optional)


After purchasing of the option „Data logger“ the functionality have to be activated first.

12.2.12.1 Option „Data Logger“ activation

Main menu → Settings → about DS 400

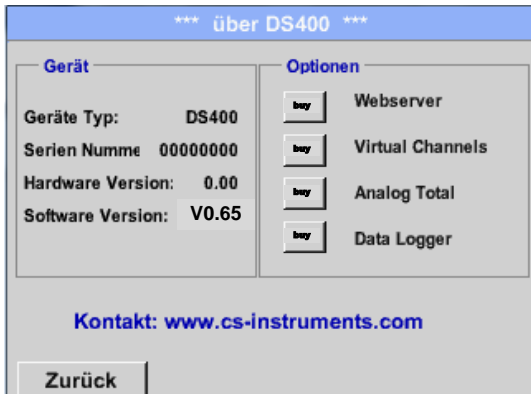


Please push the button *Buy* for „Data logger“ and you will requested to insert the key-code received

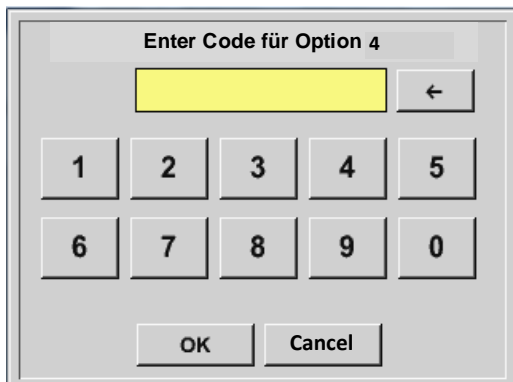

Please enter the Key-Code in the text-field and activate the option by pushing the button *OK*.


12.2.12.2 Data logger Settings

Main menu → Settings → Logger settings

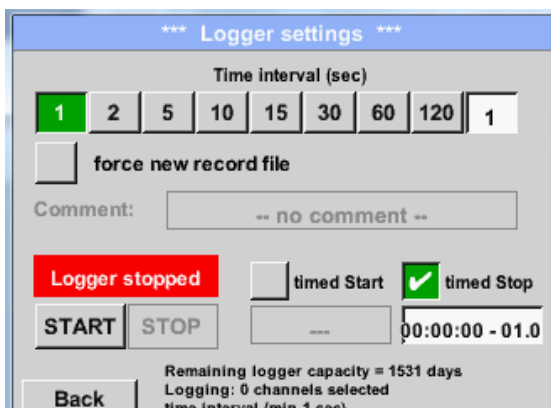

In the top row you can select the predefined *Time intervals* 1, 2, 5, 10, 15, 30, 60 and 120 seconds for recording.

Data Logger

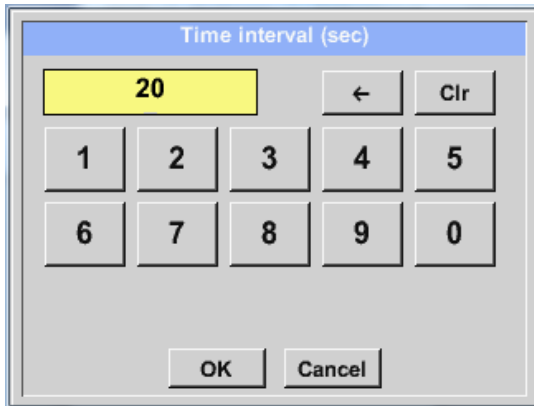

A different, individual *Time interval* can be entered in the highlighted white description field right at the head, where the currently set *Time interval* is always displayed.

Remark:

The largest possible *Time interval* is 300 seconds.

Remark:


If more than 12 measurement data are recorded at the same time, the smallest possible time interval of the data logger is 2 seconds.

And if more than 25 measurement data are recorded at the same time, the smallest possible time interval of the data logger is 5 seconds.


Main menu → Settings → Logger settings → force new Record File button

or

Main menu → Settings → Logger settings → force new Record File button → Comment description field

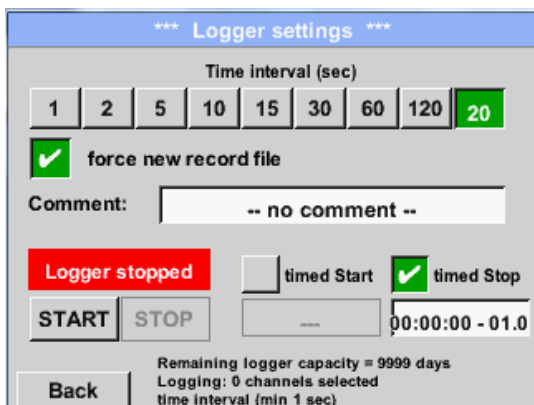

A new recording file will be created by pushing the *force new record file* button and a name or comment can be entered by the choice of the *Comment* description field.

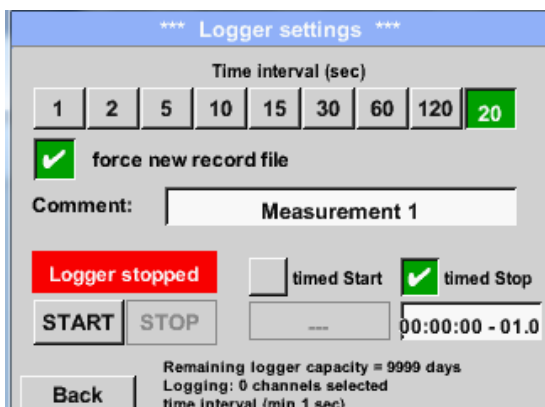

Important:

If a new recording file should be created, the *force new record file* button must be activated.

Otherwise, the last applied recording file is used.

Data Logger

Main menu → Settings → Logger settings → **timed Start button**

The screenshot shows the 'Logger settings' menu. At the top, it says '*** Logger settings ***'. Below that is a 'Time interval (sec)' section with buttons for 1, 2, 5, 10, 15, 30, 60, 120, and 1. The '1' button is highlighted. Below this is a checked checkbox for 'force new record file'. A 'Comment:' field contains 'Measurement 1'. A red 'Logger stopped' indicator is present. There are two checkboxes: 'timed Start' (checked) and 'timed Stop' (unchecked). Below these are two time fields: the first shows '1:02:00 - 10.0' and the second is empty. At the bottom, there are 'START' and 'STOP' buttons, a 'Back' button, and status text: 'Remaining logger capacity = 1531 days', 'Logging: 0 channels selected', and 'time interval (min 1 sec)'.

By pushing the *timed Start* button and then the date/time description field below, the date and the start time can be set for a data logger recording.

Remark:

If the start time is activated, it will automatically be set at the current time plus a minute.

Main menu → Settings → Logger settings → **timed Stop button**

The screenshot shows the 'Logger settings' menu. It is similar to the previous one, but the 'timed Stop' checkbox is also checked. The second time field now shows '2:02:00 - 10.0'. The 'START' and 'STOP' buttons are visible, along with the 'Back' button and status text.

By pushing the *timed Stop* button and then the date/time description field below, the date and the stop time can be set for a data logger recording.

Remark:

If the stop time activated, it will automatically be set to the current time plus an hour.


Main menu → Settings → Logger settings → **timed Start button/timed Stop button**
→ **Date/Time description field**

The screenshot shows a 'Stopzeit' (stop time) input window. It features a digital display showing '07:20:00' for the time and '21:06:13' for the date, with a 'Cal' button to the right. Below the display is a numeric keypad with buttons for digits 1-5 in the first row and 6-0 in the second row. At the bottom are 'OK' and 'Abbruch' (cancel) buttons.

After pushing the *date/time description field* a window will appear where the yellow marked area of the time or date can always be set and changed.


Data Logger

Main menu → Settings → Logger settings → timed Start button/timed Stop button
 → Date/Time description field → Cal button

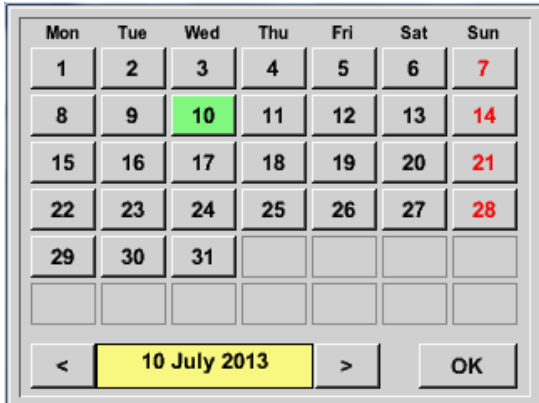

With the *Cal* button the desired date can be easily select from the calendar.


Main menu → Settings → Logger settings → Start button

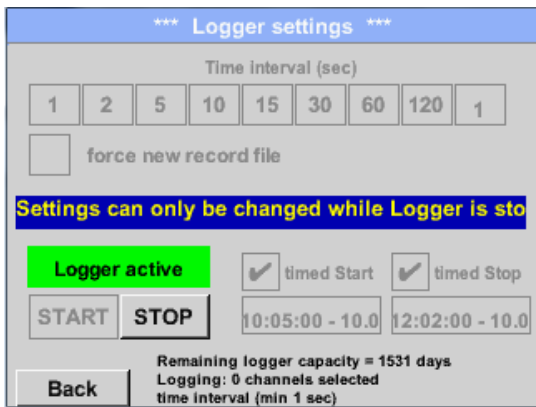

After the start and stop time activation and the created settings, the *Start* button will be pushed and the data logger is armed.

The data logger starts the recording at the set time!

Main menu → Settings → Logger settings → Start button/Stop button

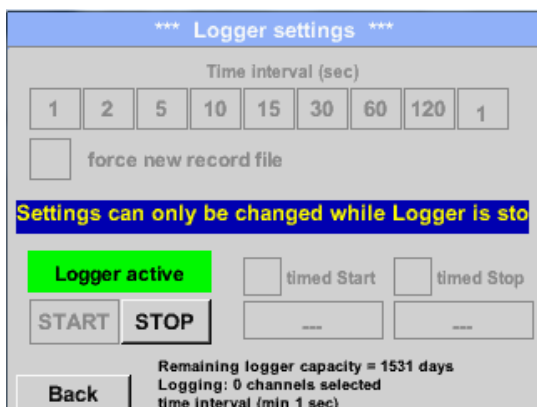

The data logger can be started without activated time settings, use the *Start* and *Stop* buttons for activate and disable. Left below there will be shown how many values are recorded and how long there still can be recorded.

Remark:

The settings cannot be changed, if the data logger runs.

Important:

If a new recording file should be created, the *force new record file* button must be activated. Otherwise, the last applied recording file is used.

Chart

12.3 Chart


Main menu → Chart

Attention:

In the **Chart** there can be represented only records that have already finished!

Current records can be seen in *Chart/Real time values*.

(See *chapter 12.4 Chart/Real time values*)

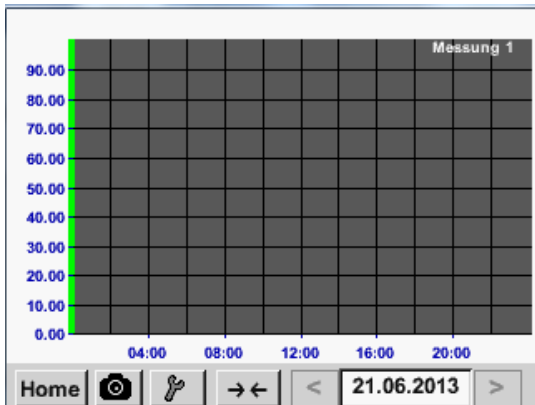

Running measurement, there are no values represented!

Zoom and scroll options in the time domain of the *Chart*:




Maximal an entire day can be represented (24h).




The smallest possible range is represented, depending on the time interval of the recording.

Additional zooming and scrolling options in *Chart* and *Chart/Real time values*:

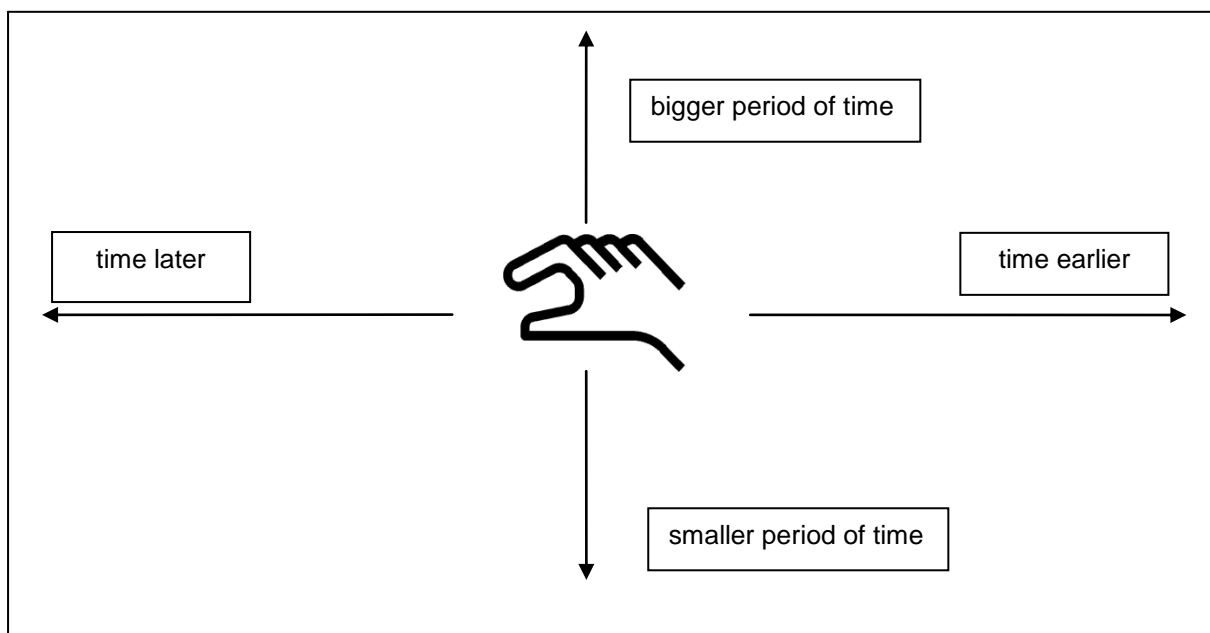

Chart

Main menu → Chart → Date description field

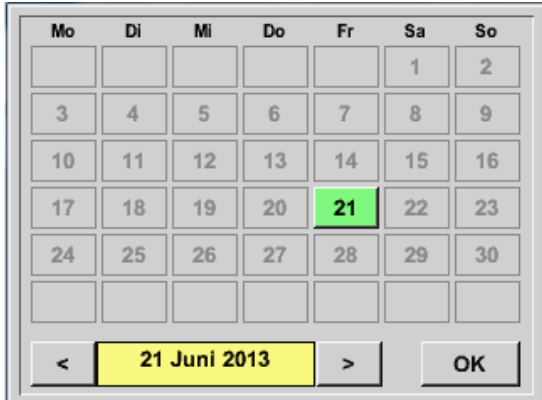

By pushing the **date** description field (center bottom) the calendar, from which the appropriate date can be selected conveniently, appears.



Stored measuring data can be select here by **time** (**START** and **STOP**), **Comment** and **File name** (contains English date).

Main menu → Chart → Setup

In the **Setup**, you can make up to four different y-axis labels and in addition choose a **Unit**, the grid (**min**, **max**, **step**) and several channels (**Plots**) and a **Colour**.



The y-axis **left** is already enabled, you can choose a **Colour** for it.

Remark:

Grid setting is already possible at this point, but later when a record is selected it is more reasonable!

Chart


Main menu → Chart → Setup → Unit description field



Select the *Unit* of the represented recording from the menu.




Main menu → Chart →

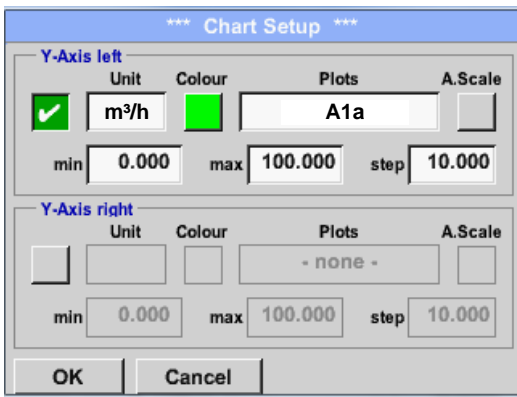

Now, the grid can be set with *min*, *max*, and *step*.

By pushing the *A.Scale*-button a calculated auto-scaling will be defined.

In the same way the remaining y-axes can be labeled!

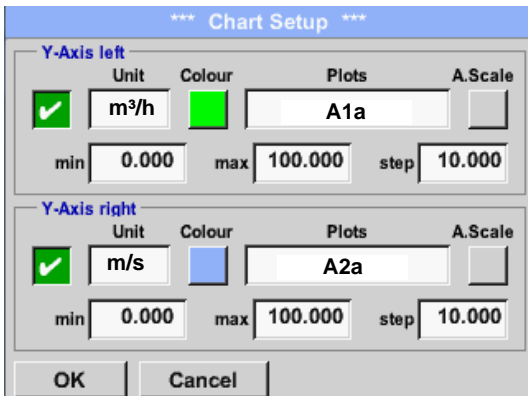

Two different grid settings with various *Units* and *Colours*.

Hauptmenü → Grafik

Chart


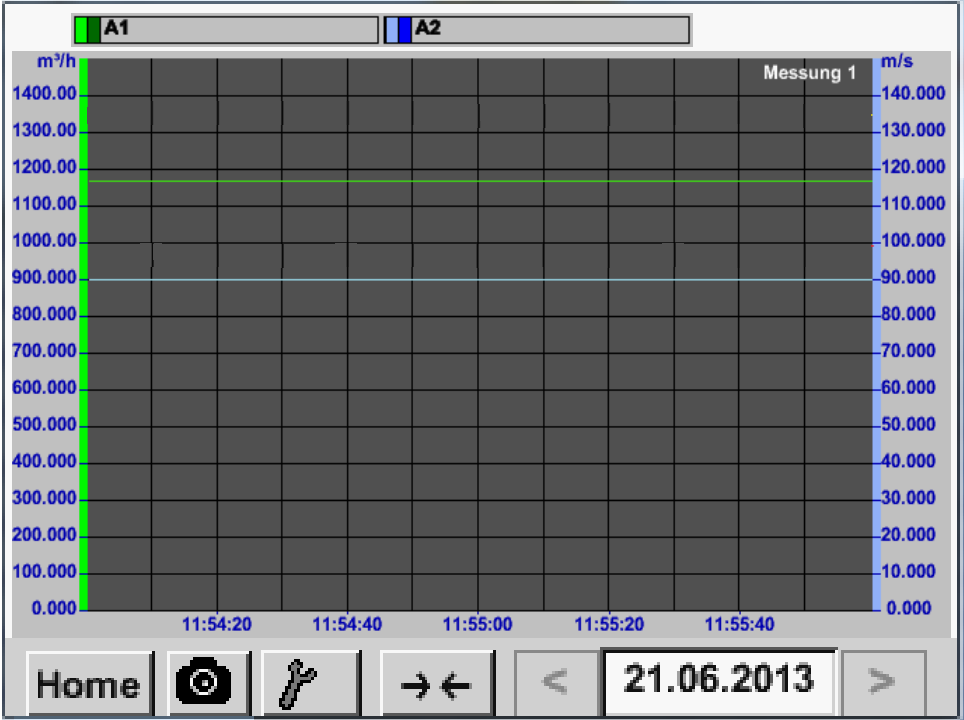


Chart / Real time values

12.4 Chart / Real time values

Main menu → Chart/Real time values

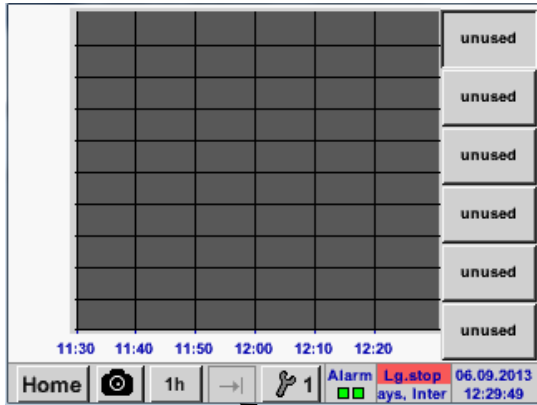


One or more channels for the recording and presentation of measured data can be selected here, such as a dew point sensor or several different sensors.

After pushing this button currently recorded measurement data in the current time range are represented.


Quick access to predefined time periods 24 h, 8 h, 1 h, 15 min and 2 min. At the push of a button the chart for the selected time range is displayed.

Screenshot button for saving the screen on an USB Stick or SD Card.

Main menu → Chart/Real time values →  #1- #6

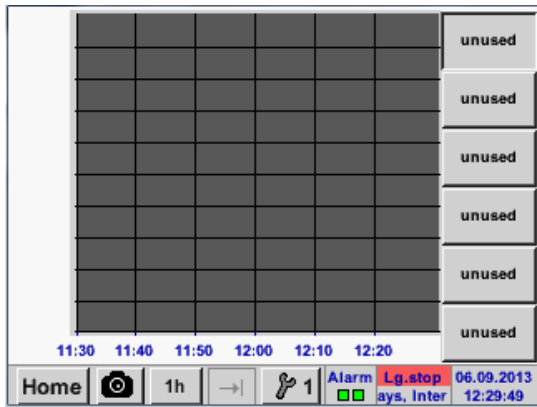

In this menu item, up to twelve channels (depending on the version of the DS 400) can be activated at the same time and viewed in *Main → Chart/Real time values*.

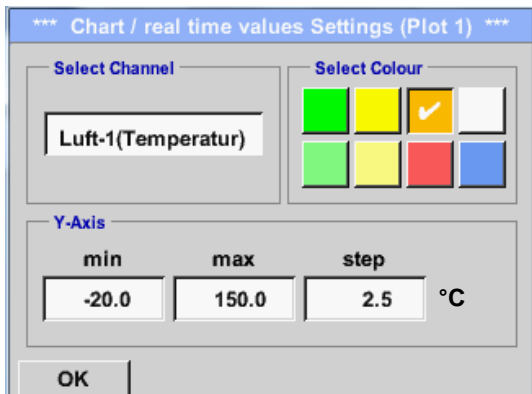


Here the channel A1 chosen.

For each channel, you can select a value to be represented in the *Chart* and one to display (*2. values*).

In addition, it can be set, like in *Main → Chart*, a *colour* and the grid (*min, max, step*) of the y-axis.

Chart

Hauptmenü → Grafik/aktuelle Werte

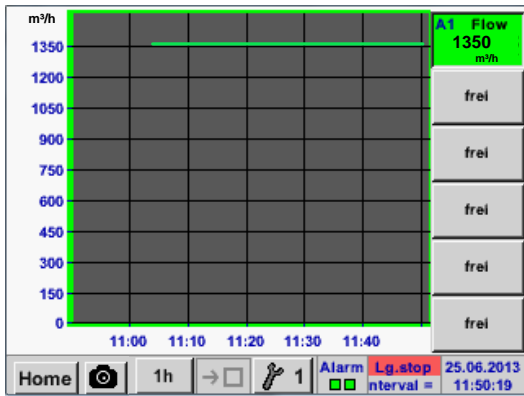

Channel A1:

Elected the flow as *Chart*

If several channels are logged, all charts will be displayed, but there is only the y-axis of the selected channel visible.

If there is no grid entered in the setup, *min* will be 0, *max* 100 and *step* 10

In the same way the remaining setups can be set!

12.5 Channels

Main menu → Channels

A1	Halle 1.1 Druckluft	A2	Halle 1.2 Druckluft
<input checked="" type="checkbox"/>	Flw 1165.200 m³/h	<input checked="" type="checkbox"/>	Flw 0.750 m³/h
<input checked="" type="checkbox"/>	Con 27366 m³	<input checked="" type="checkbox"/>	Con 7366 m³
<input checked="" type="checkbox"/>	Vel 180.000 m/s		Vel 80.000 m/s
B1	Halle 2.1 Taupunkt	B2	Halle 2.2 Taupunkt
	Dew -9.20 °Ctd	<input checked="" type="checkbox"/>	Dew -45.20 °Ctd
<input checked="" type="checkbox"/>	Hum 9.5 %rH	<input checked="" type="checkbox"/>	Hum 0.25 %rH
	Tmp 22.30 °C	<input checked="" type="checkbox"/>	Tmp 22.10 °C

Home [Camera] Virtual Ch. Alarm Lg.stop 25.06.2013 ity = 1531 14:22:14

The overview of *Real time values* shows the current measured values of all connected sensors.

Exceeds or falls below the set alarm limits, the respective measured value flashes yellow (*alarm 1*) or red (*alarm 2*).

Main menu → Channels → A1

*** Channel A1 ***			- 0.0 V	- 0 mA
Type	CS-Digital	Name	Luft-1	
Record		Alarm		
<input type="checkbox"/>	Flow	1165.2 m³/h	<input type="checkbox"/>	
<input type="checkbox"/>	Con	27366 m³	<input type="checkbox"/>	>
<input type="checkbox"/>	Vel.	180.0 m/s	<input type="checkbox"/>	
Back		Info		

Each channel can be selected and the settings viewed and checked, but **no changes** can be made here.


Remark:

Please, make changes in the *Settings!*

Real time values

12.6 Real time values

Main menu → Real time values

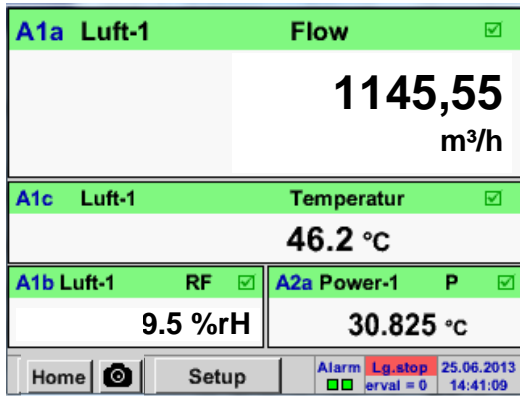


The view *Real time values* allows to display of 1 to 5 free definable measurement values.

By exceeding the upper- or lower alarm levels the respective measurement value flashes yellow for *Alarm-1* or red for *Alarm-2*.

Remark:
Changes for display settings have to be done in the *Setup* menu!

Main menu → Real time values → Setup → next Layout

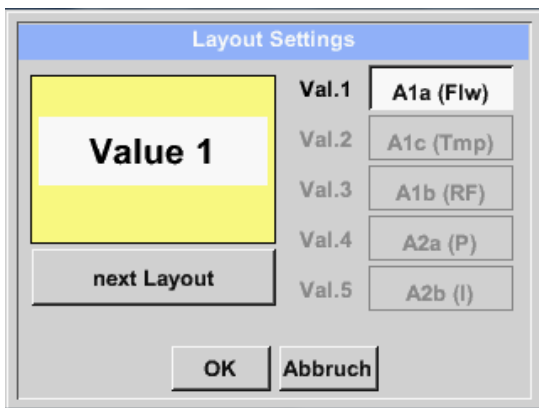


Here, by pressing *next Layout* –button it is possible to select the wanted layout.

You can choose between 6 different layouts showing 1-5 measurements. see below.

The values to be displayed could be selected in the *Val.1 to Val.5* description fields.


Different variantes :

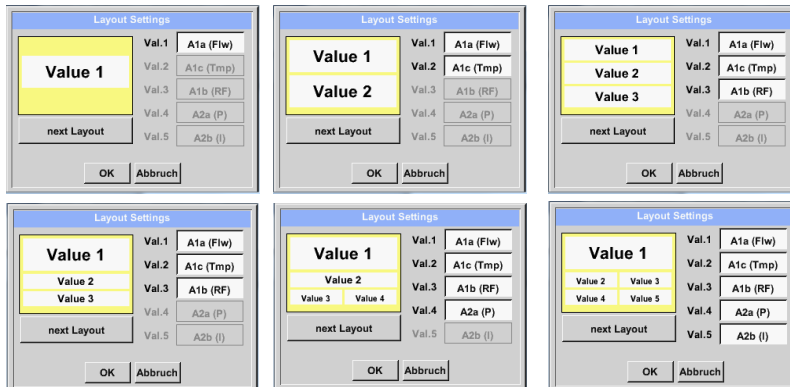

Alarm Overview

12.7 Alarm-Overview


Main menu → Alarm-Overview

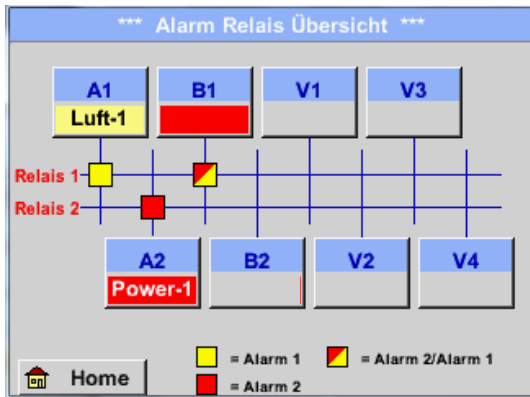

In the Alarm overview, you can immediately see whether there is an *alarm 1* or *alarm 2*. You can see also in other menu items:
Main → *Real time values* and
Main → *Settings* → *Sensor settings*
The channel name will appear yellow invers (*alarm 1*) or inverse red (*alarm 2*).
In addition, you can see which relay had been set for the channel as the *alarm 1* or *alarm 2*. This is indicated by the yellow and red or red/yellow squares on the intersections between measuring channel and relay.

Here *Alarm-1* for Channel A1 and *Alarm-2* for channel A2 and B1!

Main menu → Alarm-Overview → A1

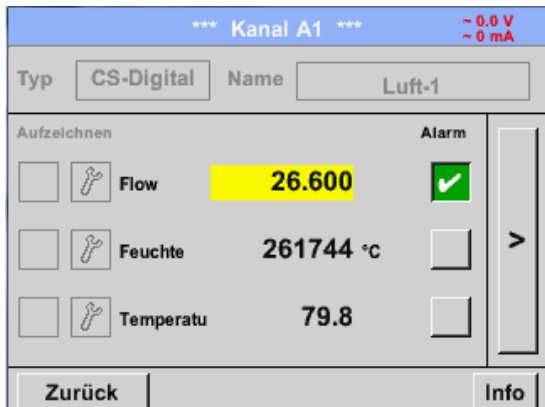

Like in *Main* → *Real time values*, individual channels can be selected here, to detect which and how much the value has exceeded or below the alarm range.


Remark:
The alarm parameters can be set and/or modified here.

Export Data

12.8 Export Data


Recorded data can be transferred to a USB stick, by using *Export Data*.

Main menu → Export data

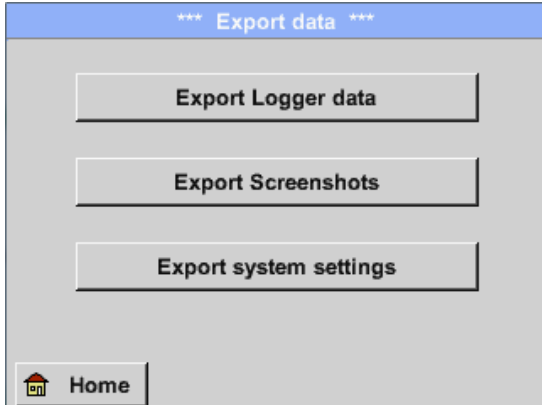


With *Export Logger data* and *Export system settings* the recorded measurement data and saved settings can be transferred to a USB stick.

Main menu → Export data → Export Logger data

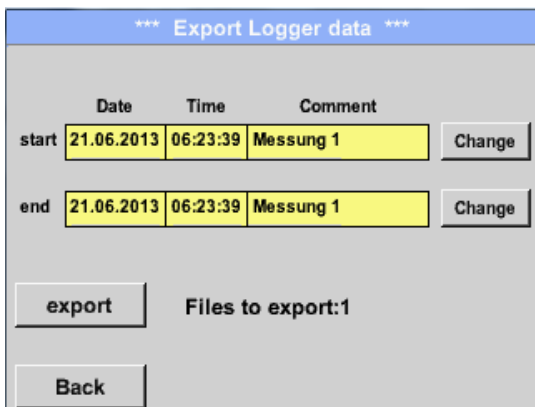

Use the *Change* buttons to adjust a period between *start* and *end*. Stored measurement data in this period are exported.


Main menu → Export data → Export Logger data → Change

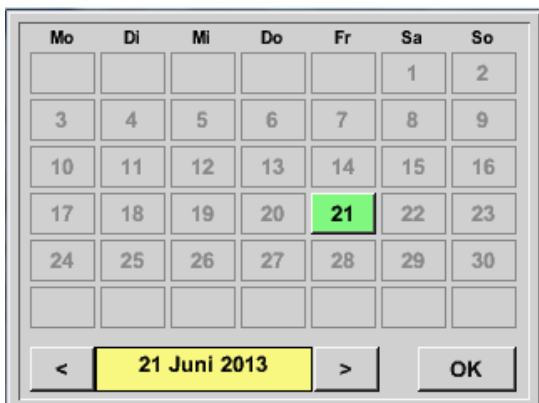

The selected date is always green, and the date numbers of the Sundays are red, like in the calendar.

On days, where measurement data were recorded, the date numbers are optical highlighted.

Export Data

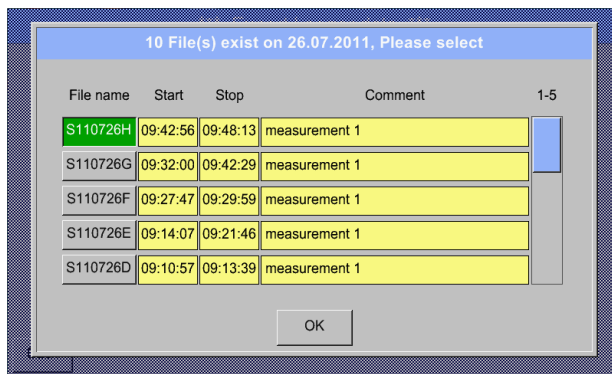

If there have been recorded several measurements on the same date, they appear after the date selection with **OK**.

Now a recording can be selected comfortable.

Main menu → Export data → Export Logger data → export

The measurement data of the selected period are exported to a USB stick.

Main menu → Export data → Export system settings

By using *Export system settings*, all existing sensor settings can be exported to a USB stick.

Screenshot function

12.9 Screenshot function

This function allows you to store a copy of the screen of the menus Chart, Chart / Real time Values, Channels and Real time Values to a USB-Stick or SD-Card. Mainly foreseen to save not logged data.



12.9.1 Screenshot saving

Main menu → Chart →

Main menu → Chart / real time Values →

Main menu → Channels →

Main menu → Real time Values →

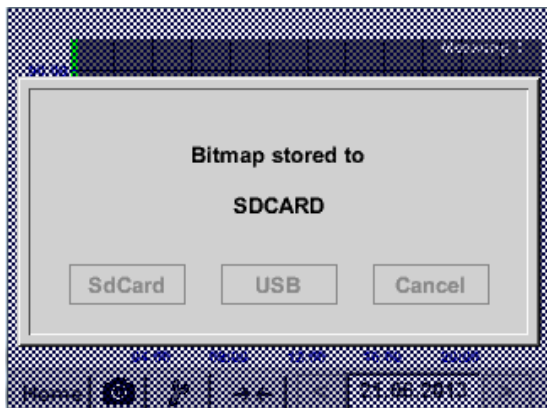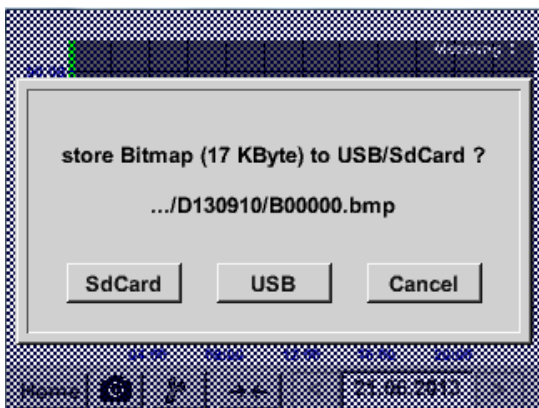

here, the location of USB stick or SD card can be selected.

Screenshots are stored in directories defined per day and here numbered consecutively.

Directory naming; DYYMMTT
D=fix(für Date)
YY = Year
MM= Month
TT= Day

Path: DEV0002/Hostname/Bitmap

For Hostname see
[Main menu → Settings → System Status](#)

Example: first Screenshot 10. September 2013


\\DEV0002/DE-4001/Bitmap/D130910/B00000.bmp

Screenshot export

12.9.2 Screenshots export


The screenshots stored on the SD card can be exported to a USB stick

Main menu → Export Data

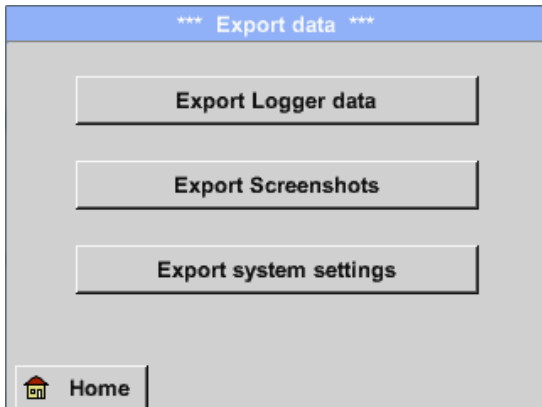

With *Export Screenshots* the recorded screenshots data can be transferred to a USB stick.

Main menu → Export Data → Export Screenshots

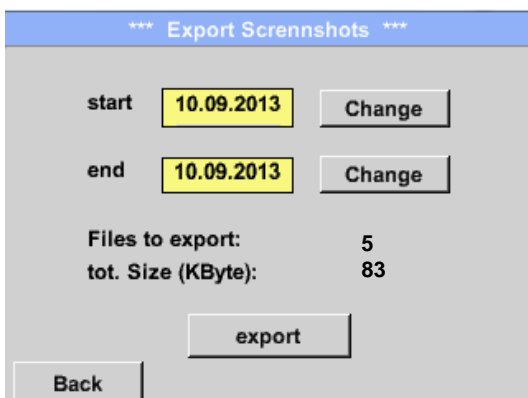

Use the *Change* buttons to adjust a period between *start* and *end*. Stored bitmaps data in this period are exported.

Main menu → Export Data → Export Screenshots → Change




The selected date is always green, and the date numbers of the Sundays are red, like in the calendar.

On days, where measurement data were recorded, the date numbers are optical highlighted.

Screenshot export

Main menu → Export Data → Export Screenshots → Export

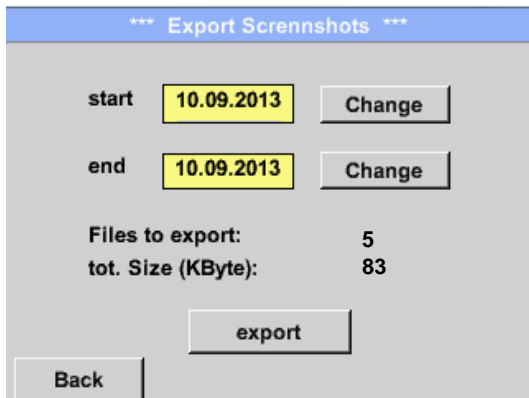

*** Export Screenshots ***

start 10.09.2013 Change

end 10.09.2013 Change

Files to export: 5
tot. Size (KByte): 83

Back export

The screenshots of the selected period are exported to a USB stick.

Version: 10/09/2013, V1.10