



Installation and operating instructions portable dew point meters DP 500 / DP 510



I. Foreword

Dear customer,

thank you very much for deciding in favor of the DP 500 / DP 510. Please read this installation and operation manual carefully before mounting and initiating the device and follow our advice. A riskless operation and a correct functioning of the DP 500 / DP 510 are only guaranteed in case of careful observation of the described instructions and notes



Sales Office South / Geschäftsstelle Süd

Zindelsteiner Str. 15

D-78052 VS-Tannheim

Tel.: +49 (0) 7705 978 99 0

Fax: +49 (0) 7705 978 99 20

Mail: info@cs-instruments.com

Web: <http://www.cs-instruments.com>

Sales Office North / Geschäftsstelle Nord

Am Oker 28c

D-24955 Harrislee

Tel.: +49 (0) 461 700 20 25

Fax: +49 (0) 461 700 20 26

Mail: info@cs-instruments.com

Web: <http://www.cs-instruments.com>

Table of Contents

II. Table of Contents

II. TABLE OF CONTENTS	3
1 SAFETY INSTRUCTIONS	6
2 APPLICATION AREA	7
3 TECHNICAL DATA DP 500 / DP 510	8
4 INSTALLATION AND MEASUREMENTS	9
4.1 Measurement with measuring chamber, connection via plug nipple	9
4.2 Measurement without measuring chamber, connection via external thread G1/2"	9
4.3 Dew point measuring at synthetic granules -dries	10
5 MAINTENANCE	10
6 CALIBRATION/ ADJUSTMENT	10
7 INPUTSIGNALS EXT. SENSOR DP 510	11
8 CABLE CROSS SECTION	11
8.1 Sensor circuit points/Output signal:	11
9 CONNECTION DIAGRAMS OF THE DIFFERENT SENSOR TYPES (DP 510 ONLY)	12
9.1 Connector pin assignment for all sensors DP 510	12
9.2 Connection CS dew point sensors series FA 415/FA 300	13
9.3 Connection for CS dew point- and consumption sensors, series FA/VA 400	13
9.4 Connection pulse sensors	14
9.5 Analogue two-, three-, and four-wire current signal	15
9.6 Three- and four-wire power supply 0 - 1/10/30 VDC	16
9.7 Two-, three-, and four-wire connector pin assignments for PT100/PT1000/KTY81	17
9.8 Connection with RS485	17

Table of Contents

10	OPERATION DP 500 / DP 510	18
10.1	Keypad	18
10.1.1	On- and Off button	18
10.1.2	Brightness buttons	18
10.1.3	Screenshot-Button	18
10.1.3.1	Storing Screenshot	18
10.1.3.2	Export Screenshots	19
10.2	Touchpanel	21
10.3	Main menu (Home)	22
10.3.1	Initialization	22
10.3.2	Main menu	23
10.3.2.1	Settings	24
10.3.2.1.1	Password-Settings	24
10.3.2.1.2	Sensor-settings	25
10.3.2.1.2.1	Settings internal Dewpoint-Sensor	26
10.3.2.1.2.1.1	Definition of the System pressure (relative pressure value)	26
10.3.2.1.2.1.2	Definition of Reference pressure (absolute pressure value)	27
10.3.2.1.2.2	Choice of the sensor type (For example type CS-Digital sensor)	28
10.3.2.1.2.3	Name the measurement data and define the decimal places	31
10.3.2.1.2.4	Recording measurement data	31
10.3.2.1.2.5	Alarm-Settings (Alarm Popup)	32
10.3.2.1.2.6	More Settings (scale analogue output)	33
10.3.2.1.2.7	Dew Point Sensor of type CS-Digital	34
10.3.2.1.2.8	Label and setting the description fields	35
10.3.2.1.2.9	Configuration of Analog-Sensors	38
10.3.2.1.2.10	Type 0 - 1/10/30 Volt and 0/4 – 20 mA	38
10.3.2.1.2.11	Type PT100x and KTY81	40
10.3.2.1.2.12	Type Pulse (Pulse ration)	41
10.3.2.1.2.13	Type „No Sensor“	43
10.3.2.1.2.14	Type Modbus	44
10.3.2.1.2.15	Selection and activation of Sensor-Type Modbus	44
10.3.2.1.2.15.1	Modbus Settings	44
10.3.2.1.3	Data logger Settings	48
10.3.2.1.4	Device Settings	52
10.3.2.1.4.1	Language	52
10.3.2.1.4.2	Date & Time	53
10.3.2.1.4.3	SD-Card	54
10.3.2.1.4.4	System update	55
10.3.2.1.4.4.1	Save System Settings	55
10.3.2.1.4.4.2	Check for new Software updates (USB)	56
10.3.2.1.4.4.3	Restore System Settings	57
10.3.2.1.4.5	Factory Reset	58
10.3.2.1.4.6	Calibrate touch-screen	59
10.3.2.1.5	Set backlight	59
10.3.2.1.6	Cleaning	60
10.3.2.1.7	System-Status	60
10.3.2.1.8	About DP 500 / DP 510	60
10.3.2.2	Chart	61
10.3.2.3	Chart / Real time values	65
10.3.2.4	Channels	67
10.3.2.4.1	Min/Max Funktion	67
10.3.2.5	Real time value	69
10.3.2.6	Alarm overview	70
10.3.2.7	Export Data	71

Table of Contents

11	VIRTUAL CHANNELS (OPTINAL)	73
11.1	Option „Virtual Channels“ activation	73
11.2	Virtual Channels Settings	74
11.2.1	Selection of Sensor-type	74
11.2.2	Configuration of each single virtual value	75
11.2.3	Activation of a single virtual value	75
11.2.4	Definition of Operands	75
11.2.5	Definition of Operations	77
11.2.6	Definition of Unit	77
11.2.7	Value name, resolution of decimal places and recording of values	79
12	ANALOG TOTAL (OPTIONAL ONLY FOR DP 510)	80
12.1	Option „Analog Total“ activation	80
12.2	Selection of sensor type	81

1 Safety instructions



Please check whether this manual corresponds with the device type.

Please attend to all notes indicated in this instruction manual. It contains essential information which has to be followed during installation, operation and maintenance. Therefore this instruction manual has to be read categorically by the technician as well as by the responsible user/qualified personnel before installation, initiation and maintenance.

This instruction manual has to be available at any time at the operation site of the DP 500 / DP 510. Regional and national regulations respectively, have to be observed in addition to this instruction manual if necessary.

In case of any obscurities or questions with regard to this manual or the instrument please contact CS Instruments GmbH.



Warning!

Supply voltage!

Contact with supply voltage carrying non-insulated parts may cause an electric shock with injury and death.

Measures:

- Note all applicable regulations for electrical installations (e. g. VDE 0100)!
- **Carry out maintenance only in strain less state!**
- All electric works are only allowed to be carried out by authorized qualified personnel.



Warning!

Inadmissible operating parameters!

Undercutting and exceeding respectively of limit values may cause danger to persons and material and may lead to functional and operational disturbances.

Measures:

- Make sure that the DP 500 / DP 510 is only operated within the admissible limit values indicated on the type label.
- Strict observance of the performance data of the DP 500 / DP 510 in connection with the application.
- Do not exceed the admissible storage and transportation temperature.

Further safety instructions:

- Attention should also be paid to the applicable national regulations and safety instructions during installation and operation.
- The DP 500 / DP 510 is not allowed to be used in explosive areas.

Additional remarks:

- Do not overheat the instrument!
- In case of mounting by screwing please use spanner flat (SW27)!
- DP 500 / DP 510 is not allowed to be disassembled!

Attention!

Malfunctions at the DP 500 / DP 510!



Faulty installation and insufficient maintenance may lead to malfunctions of the DP 500 / DP 510 which may affect the measuring results and which may lead to misinterpretations.

2 Application Area

The new instruments DP 500/DP510 are the ideal portable service instruments for dew point measurement for all types of driers down to -80°Ctd dew point

The 3.5" graphic display with touch screen makes the operation very easy..

The graphic indication of colored measuring curves is unique.

Ideal for measurement of the current dew point and for graphic indication of the dew point curve/the switching behavior of the drier over a longer period of time.

Up to 100 million measured values can be stored with date and measuring site name. The measured data can be transferred to the computer via USB stick or USB cable..

DP 510 additionally disposes of one further freely assignable sensor input.

Apart from the internal dew point measurement one further optional sensor can be connected like for example:

- Pressure sensors
- Flow sensors, VA 400/420
- Temperature sensors Pt 100, 4..20 mA
- Further dew point sensors
- Effective power meters
- Optional third-party sensors with the following signals:
0...1/10 V, 0/4...20 mA, Pt100, Pt1000, pulse, Modbus

Application ranges:

- Compressed air: Examination of refrigeration, membrane, adsorption driers
- Technical gases: Residual moisture measurement in gases like N₂, O₂ and so on
- Plastics industry: Examination of granulate driers
- Medical compressed air/breathing air

3 Technical data DP 500 / DP 510

CE	
Colour screen	3.5"-Touchpanel TFT transmissive, graphics, curves, statistics
Interfaces	USB
Measuring ranges	-80...+50 °Ctd -20...+70 °C 0...100 % rF
Accuracy	± 0,5 °Ctd (-10...+50 °Ctd) typical: ± 2 °Ctd
Humidity measurands	g/m³, mg/m³, ppm V/V, g/kg, °Ctdatm, % rF
Response Time T95	-50°Ctd ---- -10°Ctd < 10sec -10°Ctd ---- -50°Ctd < 5 Minuten
Pressure range	Mounting without measuring chamber: -1...50 bar Standard Mounting with measuring chamber: : -1...16 bar High pressure version up to 350 bar
Power supply for sensors (only DP510)	Output voltage: 24 VDC ± 10% Output current: 120 mA continuous operation
Current supply	Internal rechargeable Li-Ion batteries charging time approx. 4 h DP 500 operation: approx. 12h, DP 510 operation: > 4h depending on current consumption of external sensor
Power supply unit	100 – 240 VAC/50 – 60 Hz, 12VDC – 1A Safety class 2, only for application in dry rooms
Dimensions	125 x 96 x 245 mm
Material	Plastic PC/ABS
Weight	550 g
Operating temperature	-20...70°C measuring gas temperature 0... 50°C ambient temperature
Storage temperature	-20 bis +70°C
Optional	Data Logger, Memory size 2 GB SD memory card standard, optionally up to 4 GB
EMC	DIN EN 61326

4 Installation and measurements

We recommend the use of a measuring chamber!

4.1 Measurement with measuring chamber, connection via plug nipple



1. Preparation of the measuring point

Let compressed air flow off at the sampling point before measurement in order to remove condensate and particles. This avoids a soiling of DP 500 / DP 510 and the measuring chamber.

Stagnant air leads to long adjustment times.

If condensate occurs at the measuring point please check the compressed-air conditioning before measurement.

2. Switch on DP 500 / DP 510 and wait until the initialization has been finished.

Please observe the chapter "Operation".

3. Connect the measuring chamber screwed onto DP 500 / DP 510 with the plug nipple coupling of the measuring point

4. Wait until the value in the display of DP 500 / DP 510 has stabilized. Depending on the position of the measuring point this may take up to 15 minutes.

5. Disconnect the measuring chamber from the plug nipple coupling of the measuring point after measurement. Switch off DP 500 / DP 510 if you do not want to carry out further measurements.

4.2 Measurement without measuring chamber, connection via external thread G1/2"



1. Preparation of the measuring point

Make sure that the measuring point is depressurized.

Please check the sampling point before measurement.

If condensate occurs at the measuring point you should check the compressed-air conditioning before measurement.

2. Screw the DP 500 / DP 510 (without mounted measuring chamber) into the measuring point (with internal thread G1/2"). For mounting you should use the spanner flat (SW27)!

3. Switch on DP 500 / DP 510 and wait until the initialization has been finished.

Please observe the chapter "Operation".

4. Charge the measuring point slowly with pressure.


5. Wait until the value in the display of DP 500 / DP 510 has stabilized. Depending on the position of the measuring point this may take up to 15 minutes.

6. After measurement please drain the pressure slowly from the measuring point.

7. Remove DP 500 / DP 510 from the measuring point. For demounting the instrument you should use the spanner flat (SW 27)!

8. If you do not want to carry out further measurements please switch off DP 500 / DP 510.

4.3 Dew point measuring at synthetic granules -dries

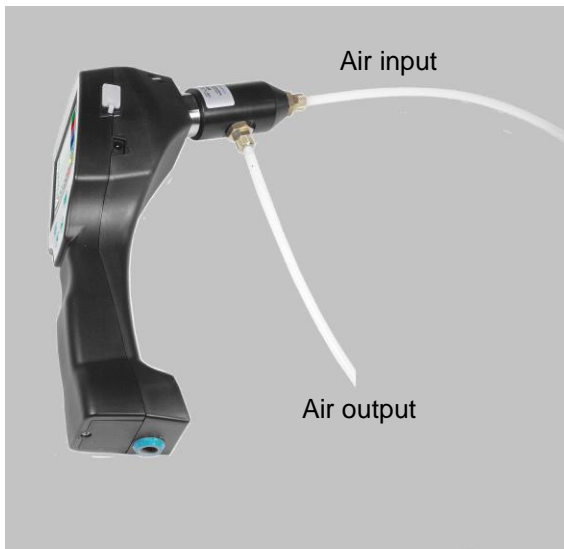

Synthetic granules-dries usually work with a slight positive pressure in the millibar range. Use in this application, with a slight excess pressure, the measuring chamber for synthetic granules dryer (Order Nr. 0699.3490).

Since the air temperature in the synthetic granules dryer is also very high, the air supply from the synthetic granules dryer to the measuring chamber via a correspondingly long Teflon tube (recommended length of 1-2 m), which serves as a cooling section. Note that the measured air temperature in the DP 500 if possible remains below 40 ° C, otherwise please use a longer Teflon tube as a cooling section.

The supply of air into the measuring chamber via port A (air input). On the air output, a Teflon tube is connected with a length of at least 80 cm. This prevents the back flow of humid ambient air back into the measuring chamber.

5 Maintenance

Cleaning of the sensor

The sensor can be cleaned by careful swinging in distilled water or isopropanol.



Remark:

Do not touch the surface of the sensor pad.

Avoid mechanical impact to the sensor (e. g. by means of a sponge or a brush).

If the sensor is very polluted the only possibility will be an examination and maintenance by the manufacturer.

6 Calibration/ Adjustment

We recommend an annual calibration and if necessary adjustment of the measuring instrument at the manufacturer.

Please observe the enclosed inspection certificate.

7 Inputs signals ext. sensor DP 510

Input signals		
Current signal (0 – 20 mA / 4 – 20 mA) internal or external power supply	Measuring range	0 – 20 mA / 4 – 20 mA
	Resolution	0,0001 mA
	Accuracy	$\pm 0,003 \text{ mA} \pm 0,05 \%$
	Input resistance	50 Ω
Voltage signal (0 - 1V)	Measuring range	0 - 1 V
	Resolution	0,05 mV
	Accuracy	$\pm 0,2 \text{ mV} \pm 0,05 \%$
	Input resistance	100 k Ω
Voltage signal (0 - 10 V / 30 V)	Measuring range	0 - 10 V/30 V
	Resolution	0,5 mV
	Accuracy	$\pm 2 \text{ mV} \pm 0,05 \%$
	Input resistance	1 M Ω
RTD Pt100	Measuring range	-200 - 850 °C
	Resolution	0,1 °C
	Accuracy	$\pm 0,2 \text{ °C}$ at -100 - 400 °C $\pm 0,3 \text{ °C}$ (further range)
RTD Pt1000	Measuring range	-200 - 850 °C
	Resolution	0,1 °C
	Accuracy	$\pm 0,2 \text{ °C}$ at -100 - 400 °C $\pm 0,3 \text{ °C}$ (further range)
Pulse	Measuring range	minimal pulse length 100 μs frequency 0 - 1 kHz max. 30 VDC

8 Cable cross section

8.1 Sensor circuit points/Output signal:

AWG16 – AWG28, cable cross-sections: 0,14 - 1,5 mm²

9 Connection diagrams of the different sensor types (DP 510 only)

9.1 Connector pin assignment for all sensors DP 510

The interface connector to be used is a ODU Medi Snap 8 pin – Reference: K11M07-P08LFD0-6550


Available connection cables at CS-Instruments are:

ODU with Open ends: Order no 0553 0501, cable length: 5 m.
Order no 0553 0502, cable length: 10 m.

ODU with M12 Connector: Order no 0553 0503, cable length: 5 m.

Extension cable (ODU/ODU): Order no 0553 0504, cable length: 10 m.

Connection scheme:

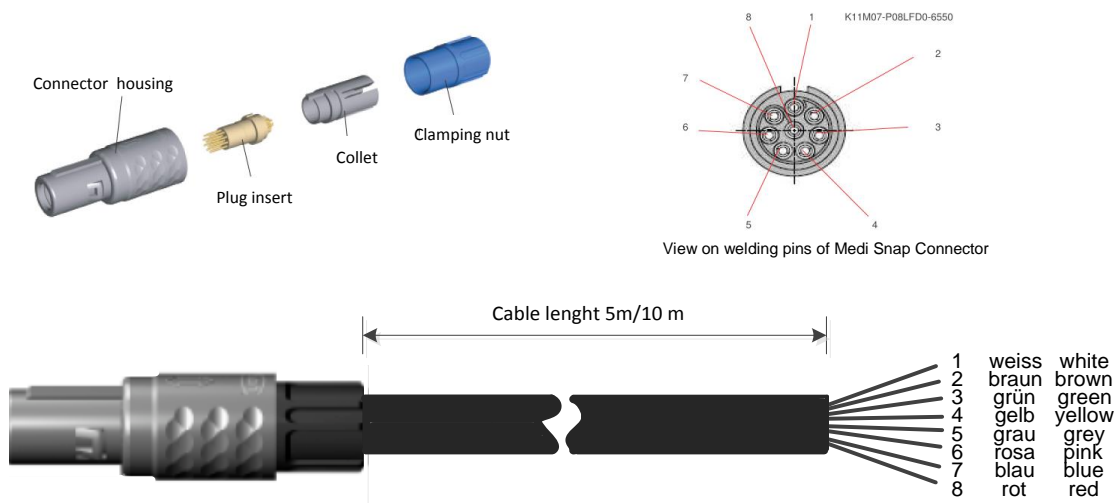


+ RS485	● 1	White	+ RS485
- RS485	● 2	Brown	- RS485
SDI	● 3	Green	SDI (CS-interne Datenübertragung für alle Taupunkt-/Verbrauchssensoren)
Analog IN +	● 4	Yellow	ANALOG IN + (Stromsignal und Spannungssignal)
Analog IN -	● 5	Grey	ANALOG IN – (Stromsignal und Spannungssignal)
I (500µA)	● 6	Pink	STROMQUELLE 500 µA
+VB 24Vdc	● 7	Blue	+VB, 24V DC Power supply for sensor
-VB GND	● 8	Red	-VB, GND Sensor

Connection diagrams of the different sensor types (DP 510 only)


FA serial: dew point sensors from CS Instruments

VA serial: consumption sensors from CS Instruments

9.2 Connection CS dew point sensors series FA 415/FA 300

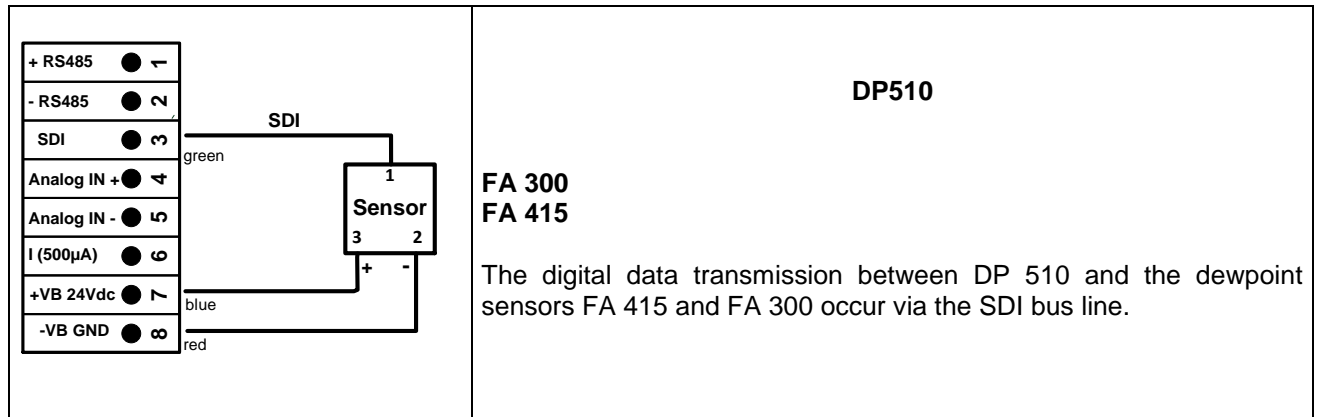

9.3 Connection for CS dew point- and consumption sensors, series FA/VA 400



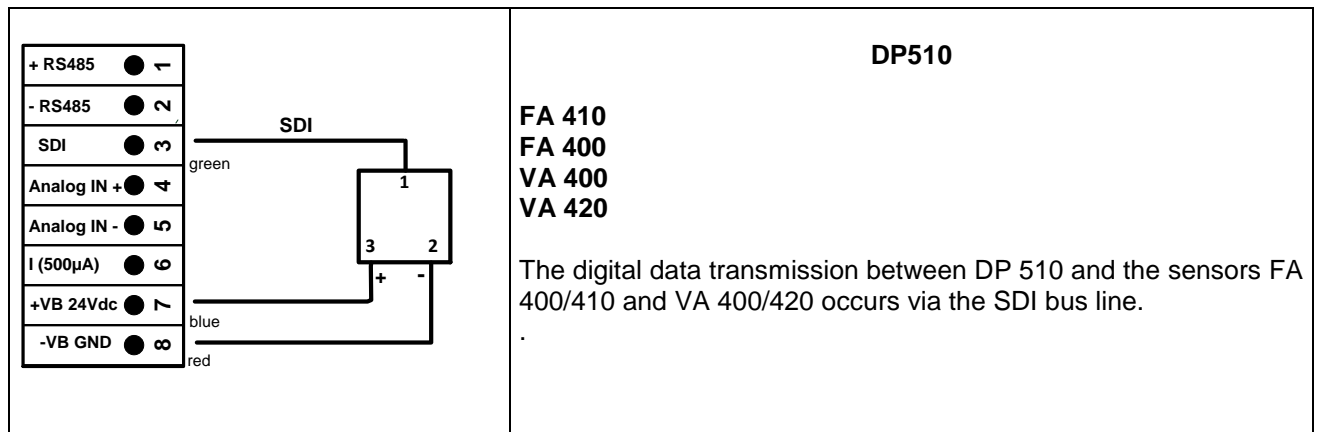


Connection diagrams of the different sensor types (DP 510 only)



9.4 Connection pulse sensors

<div><div><div>+ RS485</div><div>- RS485</div><div>SDI</div><div>Analog IN +</div><div>Analog IN -</div><div>I (500µA)</div><div>+VB 24Vdc</div><div>-VB GND</div></div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div></div><div><div>1 = 2.5V – 30V</div><div>0 = 0V – 0.7V</div></div><div><div>yellow</div><div>grey</div></div><div><div><div><div></div><div></div></div><div><div></div><div></div></div></div></div></div></div>	<div><div><div>1</div><div>2</div></div><div><div><div>I</div><div>0</div></div><div><div>t</div><div>t</div></div></div></div>	<div><div>Signal level 0: low = 0 – 0,7 VDC</div><div>Signal level 1: high = 2,5 – 30 VDC</div><div>t = 400 µs</div><div>max. frequency (duty cycle 1:1) = 1000 Hz</div><div>input resistance: min. 100 kilo ohm</div></div>
<div><div><div>+ RS485</div><div>- RS485</div><div>SDI</div><div>Analog IN +</div><div>Analog IN -</div><div>I (500µA)</div><div>+VB 24Vdc</div><div>-VB GND</div></div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div></div><div><div>yellow</div><div>grey</div><div>blue</div><div>red</div></div><div><div><div><div></div><div></div></div><div><div></div><div></div></div></div><div><div>R</div></div></div></div></div>	<div><div><div>1</div><div>2</div><div>3</div></div><div><div><div>P on</div></div><div><div>t</div><div>t</div></div></div></div>	<div><div>Required external R = 4K7</div><div><div>Attention:</div><div>The DP 510 is counting a consumption unit, by switching „power on“.</div></div></div>
<div><div><div>+ RS485</div><div>- RS485</div><div>SDI</div><div>Analog IN +</div><div>Analog IN -</div><div>I (500µA)</div><div>+VB 24Vdc</div><div>-VB GND</div></div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div></div><div><div>yellow</div><div>grey</div><div>blue</div><div>red</div></div><div><div><div><div></div><div></div></div><div><div></div><div></div></div></div><div><div>R</div></div></div></div></div>	<div><div><div>1</div><div>2</div></div><div><div><div>P on</div></div><div><div>t</div><div>t</div></div></div></div>	<div><div>Required external R = 4K7</div></div>
<div><div><div>+ RS485</div><div>- RS485</div><div>SDI</div><div>Analog IN +</div><div>Analog IN -</div><div>I (500µA)</div><div>+VB 24Vdc</div><div>-VB GND</div></div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div></div><div><div>yellow</div><div>grey</div></div><div><div><div><div></div><div></div></div><div><div></div><div></div></div></div></div></div></div>		<div><div>Not possible / allowed !</div></div>

9.5 Analogue two-, three-, and four-wire current signal

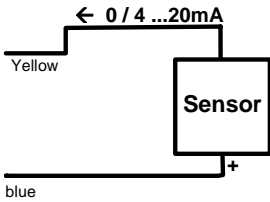
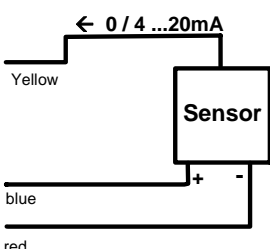
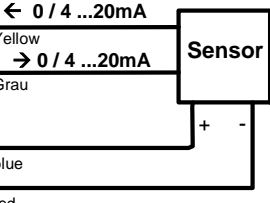
Sensors with 4 - 20 mA-output in 2-wire technology																	
<div><table><tr><td>+ RS485</td><td>1</td></tr><tr><td>- RS485</td><td>2</td></tr><tr><td>SDI</td><td>3</td></tr><tr><td>Analog IN +</td><td>4</td></tr><tr><td>Analog IN -</td><td>5</td></tr><tr><td>I (500µA)</td><td>6</td></tr><tr><td>+VB 24Vdc</td><td>7</td></tr><tr><td>-VB GND</td><td>8</td></tr></table></div>	+ RS485	1	- RS485	2	SDI	3	Analog IN +	4	Analog IN -	5	I (500µA)	6	+VB 24Vdc	7	-VB GND	8	DP510
+ RS485	1																
- RS485	2																
SDI	3																
Analog IN +	4																
Analog IN -	5																
I (500µA)	6																
+VB 24Vdc	7																
-VB GND	8																
Sensors with 4 - 20 mA output in 3-wire technology																	
<div><table><tr><td>+ RS485</td><td>1</td></tr><tr><td>- RS485</td><td>2</td></tr><tr><td>SDI</td><td>3</td></tr><tr><td>Analog IN +</td><td>4</td></tr><tr><td>Analog IN -</td><td>5</td></tr><tr><td>I (500µA)</td><td>6</td></tr><tr><td>+VB 24Vdc</td><td>7</td></tr><tr><td>-VB GND</td><td>8</td></tr></table></div>	+ RS485	1	- RS485	2	SDI	3	Analog IN +	4	Analog IN -	5	I (500µA)	6	+VB 24Vdc	7	-VB GND	8	DP510
+ RS485	1																
- RS485	2																
SDI	3																
Analog IN +	4																
Analog IN -	5																
I (500µA)	6																
+VB 24Vdc	7																
-VB GND	8																
Sensors with 4 - 20 mA output in 4-wire technology																	
<div><table><tr><td>+ RS485</td><td>1</td></tr><tr><td>- RS485</td><td>2</td></tr><tr><td>SDI</td><td>3</td></tr><tr><td>Analog IN +</td><td>4</td></tr><tr><td>Analog IN -</td><td>5</td></tr><tr><td>I (500µA)</td><td>6</td></tr><tr><td>+VB 24Vdc</td><td>7</td></tr><tr><td>-VB GND</td><td>8</td></tr></table></div>	+ RS485	1	- RS485	2	SDI	3	Analog IN +	4	Analog IN -	5	I (500µA)	6	+VB 24Vdc	7	-VB GND	8	DP510
+ RS485	1																
- RS485	2																
SDI	3																
Analog IN +	4																
Analog IN -	5																
I (500µA)	6																
+VB 24Vdc	7																
-VB GND	8																

9.6 Three- and four-wire power supply 0 - 1/10/30 VDC

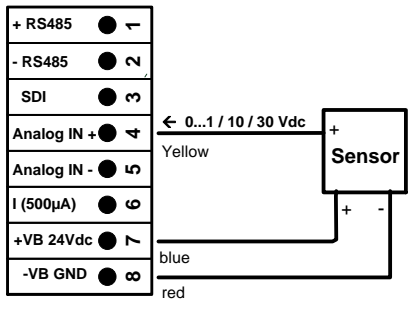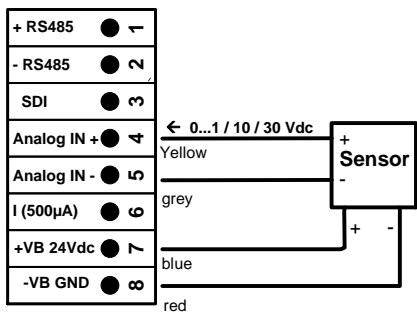
 <p>Terminal block connections:</p> <ul style="list-style-type: none"> + RS485 - RS485 SDI Analog IN + Analog IN - I (500µA) +VB 24Vdc -VB GND <p>3-wire sensor connection:</p> <ul style="list-style-type: none"> Yellow wire to Analog IN + Blue wire to +VB 24Vdc Red wire to -VB GND Sensor output: + to Analog IN +, - to -VB GND 	<p>Sensor with voltage output in 3-wire technology</p>
 <p>Terminal block connections:</p> <ul style="list-style-type: none"> + RS485 - RS485 SDI Analog IN + Analog IN - I (500µA) +VB 24Vdc -VB GND <p>4-wire sensor connection:</p> <ul style="list-style-type: none"> Yellow wire to Analog IN + Grey wire to Analog IN - Blue wire to +VB 24Vdc Red wire to -VB GND Sensor output: + to Analog IN +, - to -VB GND 	<p>Sensor with voltage output in 4-wire technology</p>

Connection diagrams of the different sensor types (DP 510 only)

9.7 Two-, three-, and four-wire connector pin assignments for PT100/PT1000/KTY81

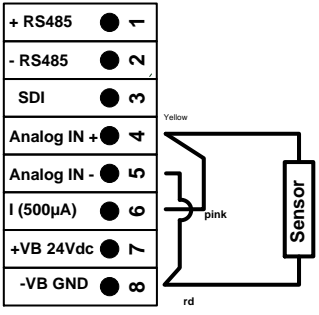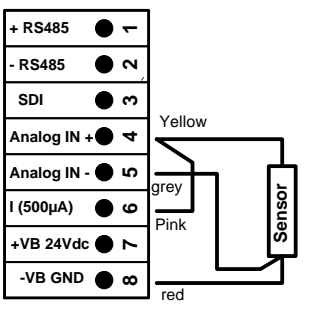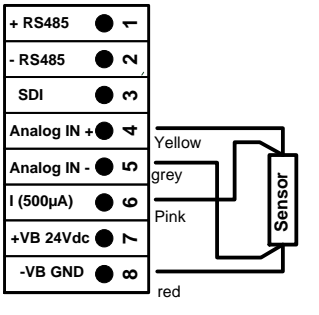	<p>2-wire PT100/PT1000/KTY81</p>
	<p>3-wire PT100/PT1000/KTY81</p>
	<p>4-wire PT100/1000/KTY81</p>

9.8 Connection with RS485

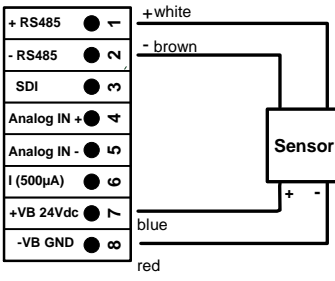
	<p>Sensor mit RS485 interface</p>
---	--

10 Operation DP 500 / DP 510



The operation of the DP 500 7 DP 510 by means of a keypad and a touch panel

10.1 Keypad

10.1.1 On- and Off button

On-or Off switching by long press  buttons.

10.1.2 Brightness buttons



With the button  and  the display brightness can be changed.

10.1.3 Screenshot-Button



By pressing the Screenshot-button the actual display content will be stored.
Storage is possible either to a USB Stick or on to the internal SD-card

10.1.3.1 Storing Screenshot

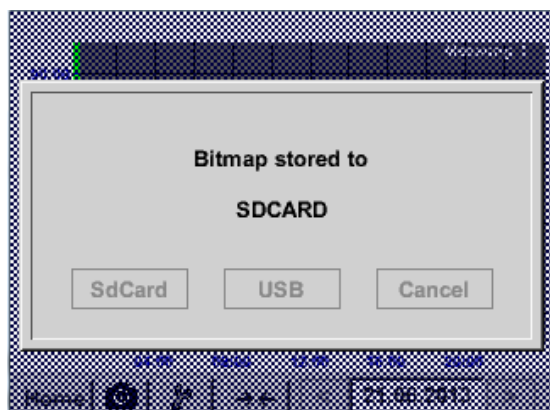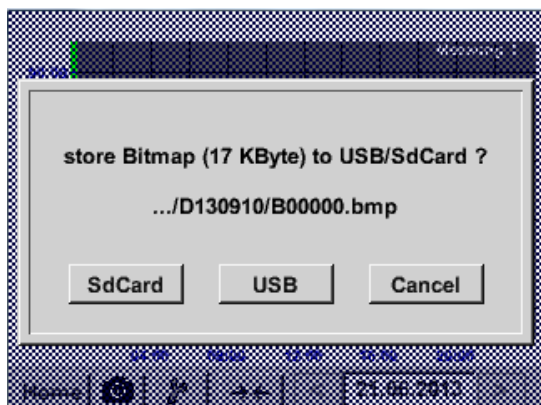

After pressing the Screenshot button a menu (see left) appears where the storage target, USB Stick or internal SD-card, could be selected.

The screens are stored as bitmap and the naming is a consecutively number. For new every day a new folder is created.

Folder definition;

DJJMMTT
D=fix(for date)
JJ = year
MM= month
TT= day

Path: DEV0003/DP500/Bitmap


Example: first picture 10. September 2013

\\DEV0003/P500/Bitmap/D130910/B00000.bmp

10.1.3.2 Export Screenshots

The stored bitmaps on the SD-card could be exported to a USB –Stick.

Main menu → Export Data

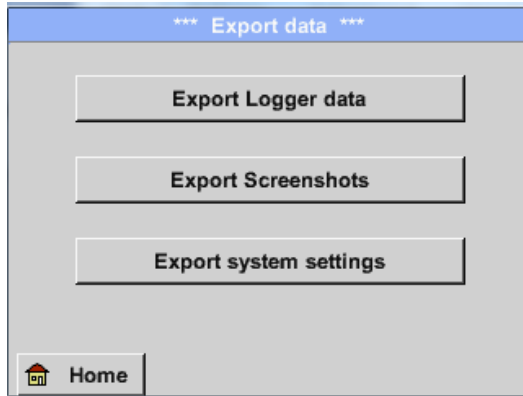

With *Export Screenshots* the stored Screenshots will be transferred to a USB-Stick.

Main menu → Export Data → Export Screenshots



Use the *Change* buttons to adjust a period between *start* and *end*. Stored bitmaps data in this period are exported.

Main menu → Export Data → Export Screenshots → Change




The selected date is always green, and the date numbers of the Sundays are red, like in the calendar.

On days, where bitmaps were recorded, the date numbers are optical highlighted.

Operation DP 500 / DP 510 - Touchpanel

Main menu → Export Data → Export Screenshots → Export

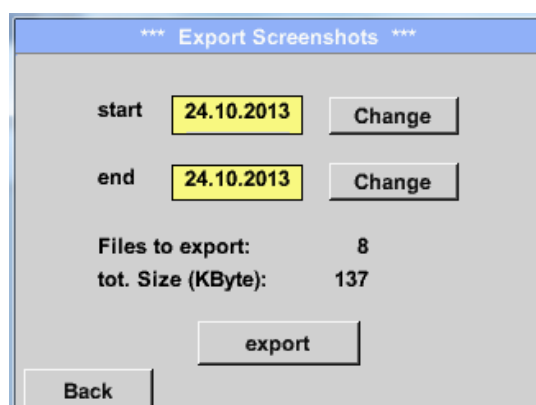

The screenshot shows a touchpanel interface titled "Export Screenshots". It features two date selection fields, both set to "24.10.2013", each with a "Change" button. Below these, it displays "Files to export: 8" and "tot. Size (KByte): 137". At the bottom, there are two buttons: "Back" on the left and "export" in the center.

*** Export Screenshots ***	
start	24.10.2013 <input type="button" value="Change"/>
end	24.10.2013 <input type="button" value="Change"/>
Files to export:	8
tot. Size (KByte):	137
<input type="button" value="export"/>	
<input type="button" value="Back"/>	

The Screenshots of the selected period are exported to the USB-Stick.

10.2 Touchpanel

The operation is largely self-explanatory and menu-driven via the touch panel. The selection of the respective menu items occur via short "tapping" with the finger or a soft round pen.

Attention: Please use no pens or other objects with sharp edges!
The foil can be damaged!

After sensors are connected, they also have to be configured.

Inputs or changes can be made with all white deposit fields.
The measured values can be represented as a curve or values.

Words in **green font** refer mainly to the pictures in the section of the chapter, but also on important menu paths or menu items that are related to are in **green font**.


The menu navigation is generally in a **green font**!

The table of contents and chapter references in **blue font** contain links to the respective chapter title.

10.3 Main menu (Home)

From the main menu, you can reach every available item.

10.3.1 Initialization

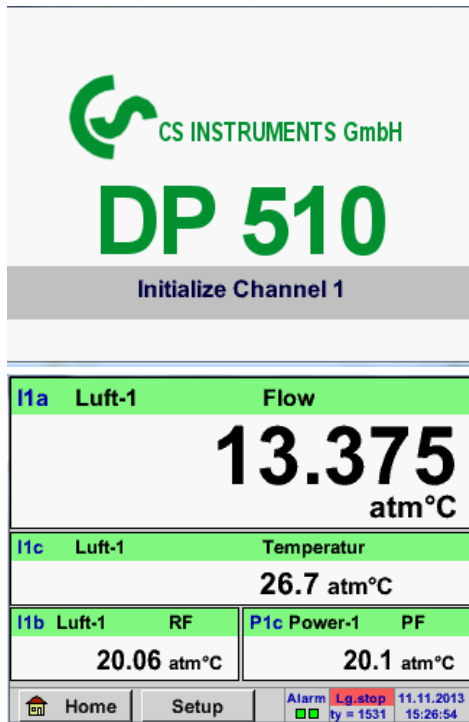

After switching on the DP500 / DP510 all channels are initialized and the menu „ *Real time values* „ appears.


Attention:

For the first initiation, there may be no external channel for DP 510 preset!

Please see chapter [10.3.2.1.2 Sensor Settings](#) then select appropriate configurations and set!

10.3.2 Main menu

Home

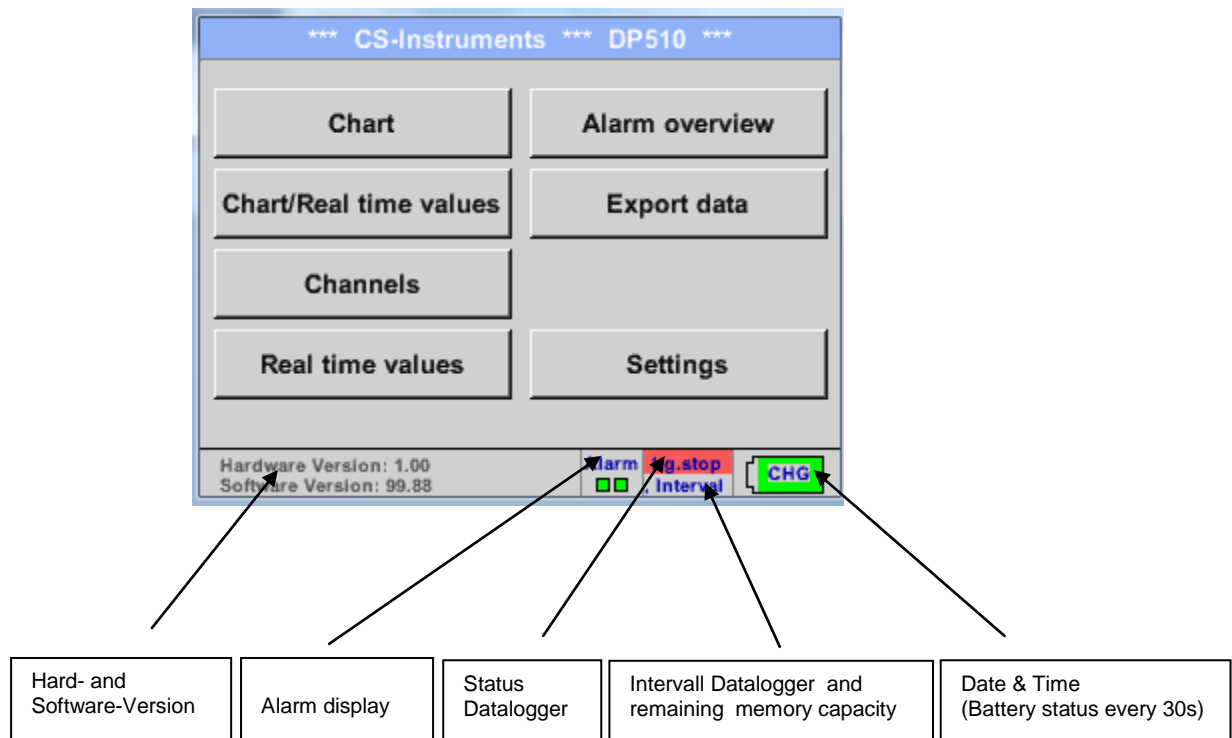

Important:

Before the first sensor setting is made, the language and time should be set!

Remark:

Chapter [10.3.2.1.3.1 language](#)

Main → Settings → Device Settings → Set Language)

Chapter [10.3.2.1.3.2 Date & Time](#)

Main → Settings → Device Settings → Date & Time)

10.3.2.1 Settings


The settings are all protected by a password!

Settings or changes are generally confirmed with **OK**!

Remark:

If you go back to main menu and then again one of the setting menus is called, you must enter the password again.


Hauptmenü → Settings

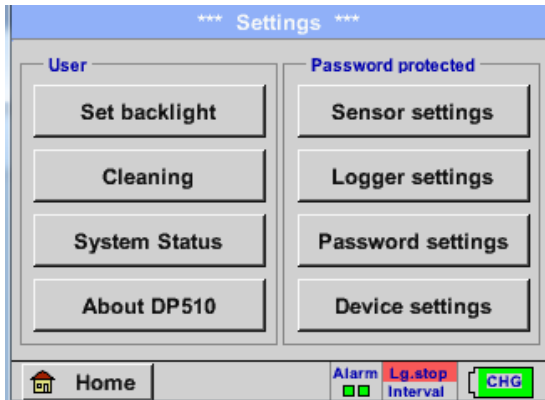

Overview of the *Settings*

10.3.2.1.1 Password-Settings


Main menu → Settings → Password settings

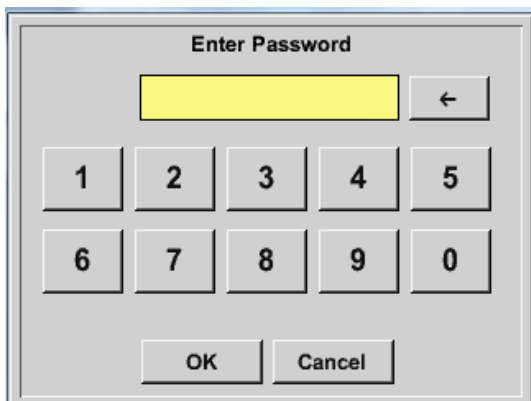

Factory settings for password at the time of delivery: 0000 (4 times zero).

If required, the password can be changed in the *Password settings*.

The new password must be entered two times in a row and in each case confirmed with **OK**

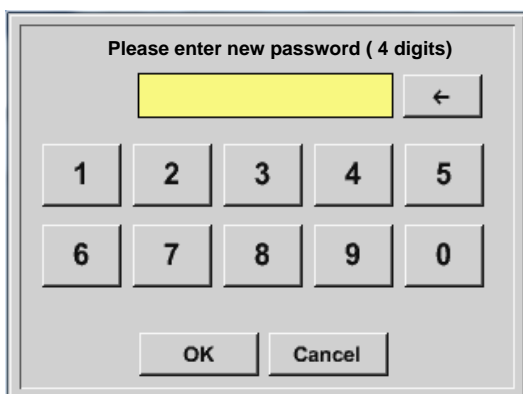

If an incorrect password is entered there appears *Enter password* or *New password repeat* in red font.

If you can't remember the password, please use Master password in order to enter a new password.

Remark:

The master password is supplied together with the instrument's documentation.

Sensor-settings

10.3.2.1.2 Sensor-settings

Important:

Sensors from CS Instruments are generally pre-configured and can be connected directly to external sensor channel! (DP 510 only)

Main menu → Settings → Sensor settings

I1 Feuchte intern

DewPoint 1,31 °Ctd
Rel.Humid. 20.90 %RH
Temperatur 24.33 °C
Abs.Humid. 4.777 g/m³

bei niedriger drehzahl

Back Virtual Ch. Alarm Lg.stop Capacity CHG

C1 Halle 2 Druckluft

Flw 1165.200 m³/h
Con 27366 m³
Vel 180.000 m/s

Back Virtual Ch. Alarm Lg.stop Interval 13.11.2013 08:35:24

An overview of the available channels appears after entering the password. Depending on the version DP 500 or DP 510 without or with the external sensor channel.

Remark:

Usually there is no preset for the external channel!

Main menu → Settings → Sensor settings → I1 → arrow right (2.page)

*** Channel I1 *** 2.3 V 10 mA

Type FA450 Internal-FA450

<

Unit Temperatur °C °F
Unit Abs.Humidity g/m³ mg/m³

Pressure Setting
Calibration

Back Info

In the upper block it the units for the temperature, °C and °F, as well as for the absolut humidity, g/m³ and mg/m³, can be selected.

10.3.2.1.2.1 Settings internal Dewpoint-Sensor

Für die Berechnung des atmosphärischen Taupunktes (wenn das Gas auf Umgebungsdruck entspannt würde) oder des Drucktaupunktes bei reduziertem Druck, muss der Referenzdruck und der Systemdruck eingegeben werden.



With the DP 500/510 the pressure dew point in the pressure line is measured automatically. The pressure dew point is always related to the pressure in the line.

A pressure input is not necessary, because the measuring principle measures independent of pressure.

The DP 500/510 is able simultaneously to the pressure dew point also calculate the atmospheric dew point or dew point at reduced pressure.

For the calculation of the atmospheric dew point (if the gas would be expanded to ambient pressure) or the dew point at reduced pressure, it is necessary to define the reference pressure and the system pressure.

10.3.2.1.2.1.1 Definition of the System pressure (relative pressure value)

Actual there are 2 possibilities to define system pressure (input as relative pressure value)

- System pressure as a fixed value
- System pressure taken over from an external pressure sensor (only DP 510)

Main menu → Settings → Sensor settings → I1 → arrow right (2.page) → Pressure Setting → Fixed


By activating the button **fixed** the value of the system pressure could be inserted in the corresponding text field.

Pressure unit is freely selectable. Selection menu is opened by pressing the button corresponding units

Confirm the settings by pressing the **OK** button.

Sensor-settings

Main menu → Settings → Sensor settings → I1 → arrow right (2.page) → Pressure Setting → Sensor

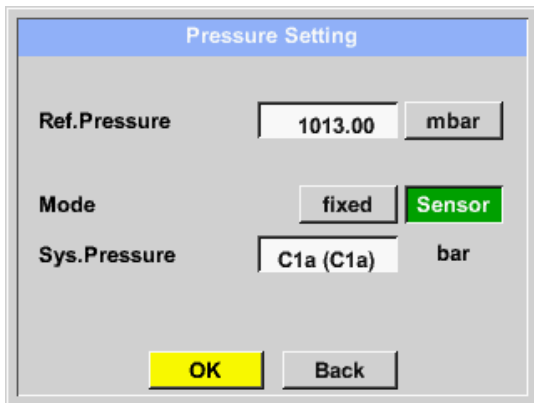


The 'Pressure Setting' dialog box has a blue header. It contains three rows of settings: 'Ref.Pressure' with a text field '1013.00' and a unit dropdown 'mbar'; 'Mode' with two buttons 'fixed' and 'Sensor' (the latter is highlighted in green); and 'Sys.Pressure' with a text field 'C1a (C1a)' and a unit dropdown 'bar'. At the bottom are 'OK' and 'Back' buttons.

When using an ext. Pressure probe on sensor input C1 (only DP 510) then the **Sensor** button have to be activated.


By entering the System pressure textfield the possible channels and the relevant values could be selected.

Only values with pressure units are selectable.

Confirm the settings by pressing the **OK** button.

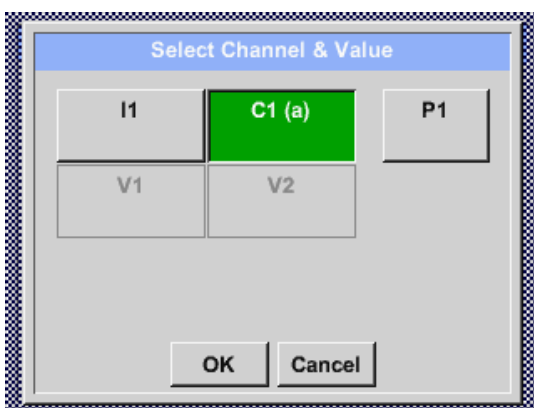


The 'Select Channel & Value' dialog box has a blue header. It shows a grid of buttons: 'I1', 'C1 (a)' (highlighted in green), 'P1', 'V1', and 'V2'. At the bottom are 'OK' and 'Cancel' buttons.

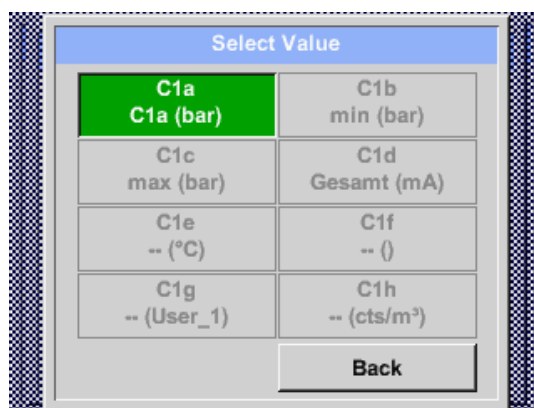

The 'Select Value' dialog box has a blue header. It shows a grid of buttons: 'C1a C1a (bar)' (highlighted in green), 'C1b min (bar)', 'C1c max (bar)', 'C1d Gesamt (mA)', 'C1e -- (°C)', 'C1f -- ()', 'C1g -- (User_1)', 'C1h -- (cts/m³)', and a 'Back' button at the bottom right.

10.3.2.1.2.1.2 Definition of Reference pressure (absolute pressure value)

Main menu → Settings → Sensor settings → I1 → arrow right (2.page) → Pressure Setting → Textfield Ref.Pressure

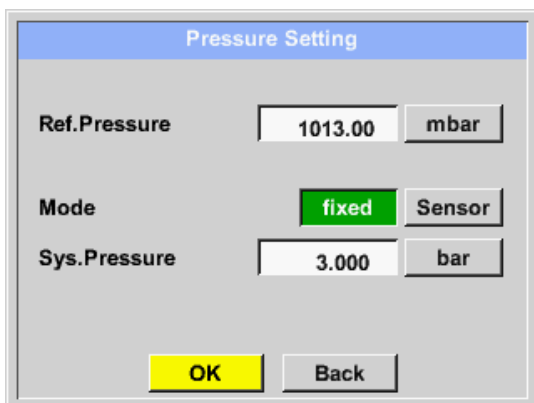

The 'Pressure Setting' dialog box has a blue header. It contains three rows of settings: 'Ref.Pressure' with a text field '1013.00' and a unit dropdown 'mbar'; 'Mode' with two buttons 'fixed' (highlighted in green) and 'Sensor'; and 'Sys.Pressure' with a text field '3.000' and a unit dropdown 'bar'. At the bottom are 'OK' and 'Back' buttons.

Reference pressure is the pressure for that the dew point in relaxation will be back-calculated.

Default- Value is 1013 mbar (Atm. Pressure).

Confirm the settings by pressing the **OK** button.

10.3.2.1.2.2 Choice of the sensor type (For example type CS-Digital sensor)

Main menu → Settings → Sensor settings → C1

*** Channel C1 ***
~ 0.0 V
~ 0 mA

Type **No Senso**

No Value defined

OK Cancel

If still no sensor has been configured, the **Type No Sensor** appears.

By pushing the description field **Type No Sensor** the list of sensor types appears (see next step).

Main menu → Settings → Sensor settings → C1 → Type description field → CS-Digital

Select Type of Channel

CS-Digital

0 - 1 V	0 - 10 V	0 - 30 V
0 - 20 mA	4 - 20 mA	PT100
PT1000	KTY81	Pulse
CS-Digital	Modbus	PM710

Page OK Cancel

Now the **Type CS-Digital** is selected for the VA/FA 400 series and confirmed by pressing the **OK** button.

Main menu → Settings → Sensor settings → A1 → arrow right (2.page) → diameter description field

*** Channel C1 ***
~ 0.0 V
~ 0 mA

Type **CS-Digital** Name

Record	Alarm
<input type="checkbox"/> C1a 0.000 ltr/ min	<input type="checkbox"/>
<input type="checkbox"/> C1b 2345678 ltr	<input type="checkbox"/>
<input type="checkbox"/> C1c 0.00 m/s	<input type="checkbox"/>


OK Cancel Min/Max

*** Kanal C1 ***

Type **CS-Digital** **VA-Sensor** 04mA = 0.000 m/s
V.max 92.7 m/s 20mA = 0.000 m/s

Unit °C °F	Diameter 100.00 mm
Gas Constant Air (287.0) J/Kg*k	Ref. Pressure 1000.00 hPa
Ref. Temp. 20.00 °C	Consumption *** ltr

OK Cancel More-Settings Info

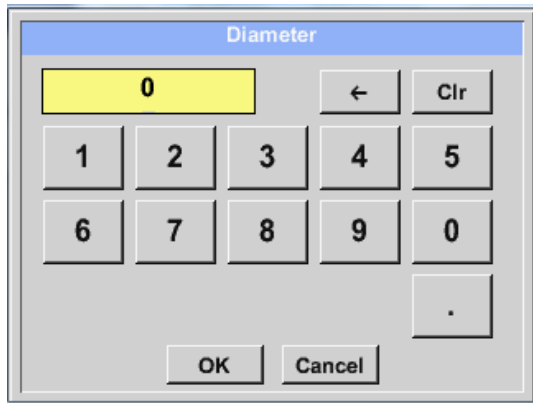

Important:

The **inner diameter** of flow tube can be entered here, if this was not automatically correctly set.

In case of a sensor change the **consumption value** of the old sensor could be transferred.

Please confirm by pressing the **OK** button and go back with **arrow left (1.page)**.

Important:

The **inner diameter** should be entered as precisely as possible, because otherwise the measurement results are not correct!

There is no uniform standard for the tube **inner diameter**!
(Please, inquire at the manufacturer or measure by your own !)

Sensor-settings

Main menu → Settings → Sensor settings → C1

*** Channel C1 *** ~ 0.0 V ~ 0 mA

Type **CS-Digital** Name

Record	Alarm
<input type="checkbox"/> C1a 0.000 ltr/min	<input type="checkbox"/>
<input type="checkbox"/> C1b 2345678 ltr	<input type="checkbox"/>
<input type="checkbox"/> C1c 0.00 m/s	<input type="checkbox"/>

OK Cancel Min/Max

Now you can enter a *Name*.

Main menu → Settings → Sensor settings → C1

*** Channel C1 *** ~ 0.0 V ~ 0 mA

Type **CS-Digital** Name **Air 1**

Aufzeichnen	Alarm
<input checked="" type="checkbox"/> C1a 0.000 ltr/min	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/> C1b 2345678 ltr	<input type="checkbox"/>
<input checked="" type="checkbox"/> C1c 0.00 m/s	<input type="checkbox"/>

OK Cancel Min/Max

After defining the *name* and confirmation with *OK*, the sensor configuration is completed.

More options of sensor settings, see Chapter!

See also chapter [10.3.2.1.2.8 label and setting the description fields](#)

Remark:

After confirm with *OK*, the font is black again and the values and settings are accepted.

Attention:

Reference temperature and reference pressure (factory setting 20 °C, 1000 hPa):
All volume flow values (m³/h) and consumption values indicated in the display are related to 20 °C, 1000 hPa (according to ISO 1217 intake condition)
0 °C and 1013 hPa (= standard cubic meter) can also be entered as a reference.
Do not enter the operation pressure or the operation temperature under reference conditions!

Sensor-Einstellung - Messdaten bezeichnen und aufzeichnen

10.3.2.1.2.3 Name the measurement data and define the decimal places


Remark:

The *Resolution* of the decimal places, the *Short Name* and *Value Name* are found under the **Tool button!**



Tool Button:

Main menu → Settings → Sensor settings → C1 → Tool Button

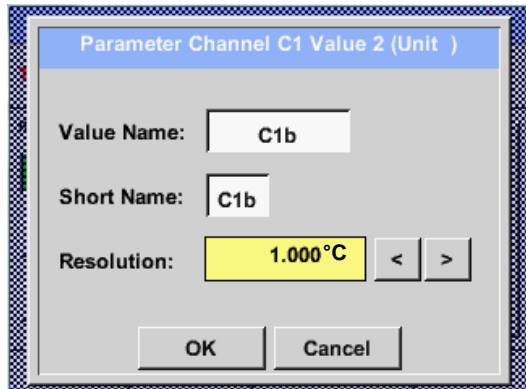


For the recorded *Value* there can be entered a *Name* with 10 characters and later in menu item *Graphics/Real time values* it is easier to identify it. Otherwise the *Name* is, for example, **C1b**. The channel name is **C1** and **a** is the first measurement data at the channel, the Second **b** and the Third **c**. The *Resolution* of the decimal places is simply adjustable by pushing right and left (0 to 5 decimal places).

See chapter 10.3.2.1.2.8 label and setting the description fields

10.3.2.1.2.4 Recording measurement data

Main menu → Settings → Sensor settings → C1 → Record Button

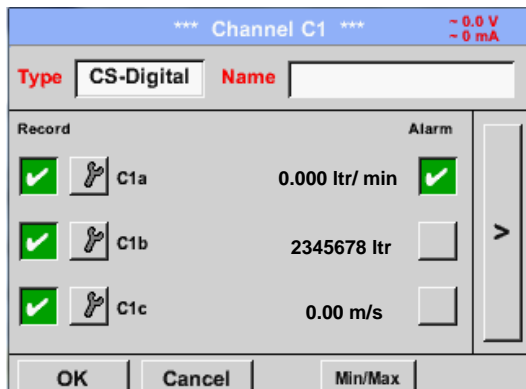

Use the *Record* buttons to select the measurement data that will be stored by **activated data logger**.

Attention:

Before the selected measurement data are recorded, the data logger must be activated after the settings(See chapter 12.2 [Logger-Settings\(Datalogger\)](#)).

10.3.2.1.2.5 Alarm-Settings (Alarm Popup)

Main menu → Settings → Sensor settings → C1 → → Alarm-Button

By pushing an alarm button, the following window appears:

In the alarm settings an *Alarm 1* and *Alarm 2* incl. *Hysteresis* can be entered for each channel.

In the menu *Alarm overview* (can be reached from the main menu), the alarm settings are clearly represented.

Main menu → Settings → Sensor settings → C1 → → Alarm-Button → Alarm-1- und Alarm-2-buttons + Popup-buttons

Here for example the *Alarm-1* yellow and the *Alarm-2* red.

Main menu → Settings → Sensor settings → C1

After alarm setting for Channel C1a.

Remark:

After confirm with *OK*, the font is black again and the values and settings are accepted

10.3.2.1.2.6 More Settings (scale analogue output)

Main menu → Settings → Sensor settings → A1 → arrow right (2.page) → More settings

The top screenshot shows the 'More-Settings C1-Luft-1' dialog box. It has two main sections: '4...20mA Output of Sensor' and 'Calibration Data'. Under '4...20mA Output of Sensor', there are two buttons: 'm³/h' and 'm/s'. The 'm/s' button is highlighted in green. Below these buttons is a 'scale manual' button. Under 'Calibration Data', there are fields for Gas (Air (287.0)), Temperature (293.0 °K), Pressure (1000.0 hPa), Area (110.0 mm²), and Cal. Date (24.07.2013). At the bottom, there are 'OK' and 'Cancel' buttons.

The bottom screenshot shows the same dialog box, but with the 'scale manual' button checked with a green checkmark. The '4mA =' field is set to '0.000' and the '20mA =' field is set to '200.000'. The 'm/s' button remains highlighted in green. The 'Cal. Date' is now '03.07.2013'.

In *More-Settings*, you can define whether the 4 - 20 mA analogue output of the sensor based on the flow rate or velocity.

The green highlighted description field is selected!

In addition, you can push the *scale manual* button and set the measuring range.

After confirming with *OK*, the settings are assumed.

Remark:
More-Settings only for type **CS-Digital** available!

The settings are completed after pressing the *OK* button!

Remark:

After confirming with *OK*, the font is black again and the values and settings are accepted.

Sensor-Settings

10.3.2.1.2.7 Dew Point Sensor of type CS-Digital

First step: choose an unused sensor channel

Main menu → Settings → Sensor settings → A1

Second step: choose type CS-Digital

Main menu → Settings → Sensor settings → A1 → Type description field → CS-Digital

Third step: confirm with **OK** two times

Now, a **Name** (see Chapter 10.3.2.1.2.8 label and setting the description fields), the **alarm settings** (see Chapter 10.3.2.1.2.5 Alarm-Settings) and the **recording-settings** (see Chapter 10.3.2.1.2.4 Recording measurement data) and the **Resolution** of the decimal places (see Chapter 10.3.2.1.2.3 Name measurement data and define the decimal places) can be determined.


Main menu → Settings → Sensor settings → C1

*** channel C1 ***		- 0.0 V	- 0 mA
Typ	CS-Digital	Name	Taupunkt
Aufzeichnen			
<input checked="" type="checkbox"/>	A1a	-9.2 °Ctd	<input type="checkbox"/>
<input checked="" type="checkbox"/>	A1b	9.5 % rF	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/>	A1c	22.6 °C	<input type="checkbox"/>
Alarm			
<input type="checkbox"/>			
>			
OK		Cancel	Info

The DP 510 detects, if the connected sensor is a flow or dewpoint sensor of **CS Instruments** and set the **CS-Digital** subtype automatically correct.

10.3.2.1.2.8 Label and setting the description fields

Main menu → Settings → Sensor settings → C1

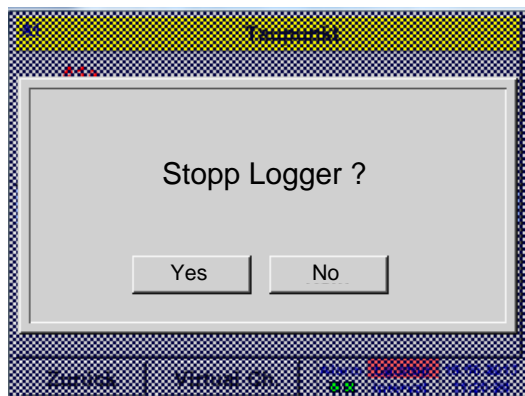


If the data logger is activated, the following window will appear and via pushing **Yes** it can be disabled.

(Only activated, if already settings and recordings are made)

Remark:


If sensor settings are defined or changed, the data logger must be stopped.

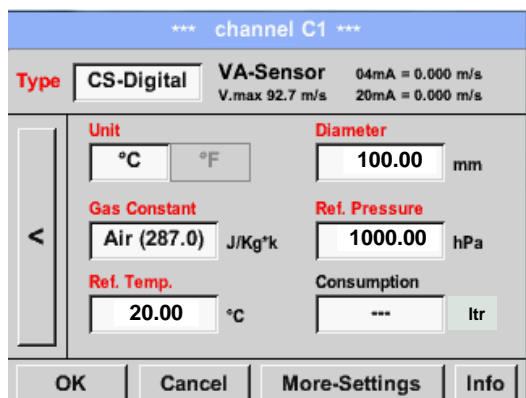

Changes or entries can be made by pressing the highlighted white fields

The **Alarm**- (See chapter 10.3.2.1.2.5 Alarm-Settings) and **Record**-Buttons (See chapter 10.3.2.1.2.4 Recording measurement data), the **Resolution** of the decimal places and the **Short name** or the **Value-Name** (See chapter 10.3.2.1.2.3 name measurement data and define decimal places) and the **More-Settings** (See chapter 10.3.2.1.2.6 More settings) are all described in Chapter 10.3.2.1.2 Sensor-Settings .


Main menu → Settings → Sensor settings → C1 → description field Name

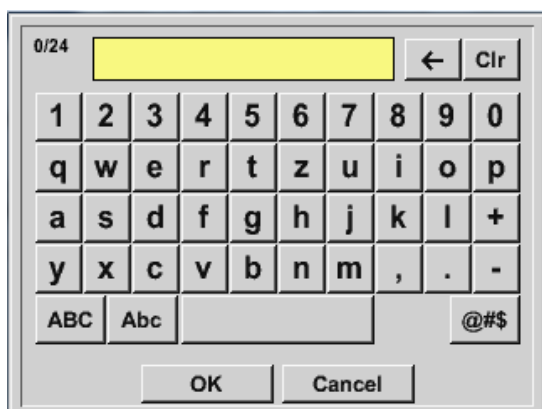

It is possible to enter a name with 24 characters.

Sensor-Settings

Main menu → Settings → Sensor settings → C1 → description field Type

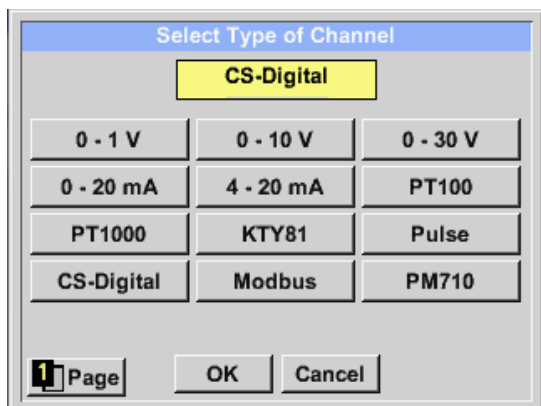


You can choose the following options, after pushing the *Type* description field.

(shown in figure)


See also chapter [10.3.2.1.2.9 Configuration of analogue sensors](#)

Main menu → Settings → Sensor settings → C1 → description field Unit

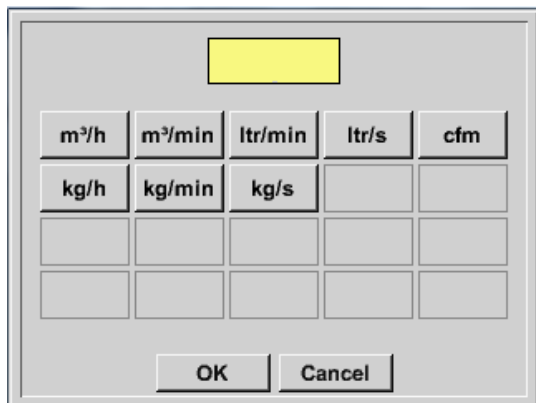

A preset selection of suitable *Units*.

Main menu → Settings → Sensor settings → A1 → arrow right (2.page) → description field of numerical value

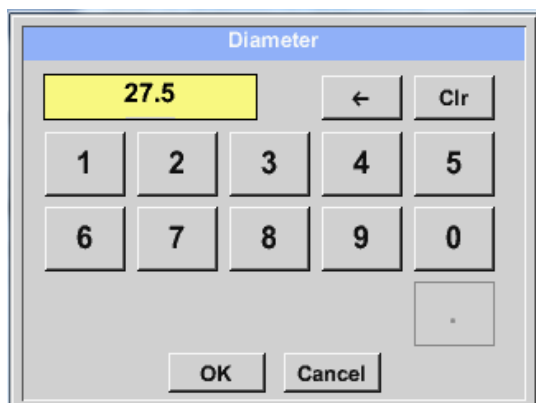

Important:

The *inner diameter* of flow tube can be entered here, if this was not automatically correctly set.

Inner diameter is entered here for example 27.5 mm.


Important:

The *inner diameter* should be entered as precisely as possible, because otherwise the measurement results are not correct!

There is no uniform standard for the tube *inner diameter*!
(Please, inquire at the manufacturer or measure by your own!)

Sensor-Settings


Main menu → Settings → Sensor settings → A1 → arrow right (2.page → Gas Constant description field

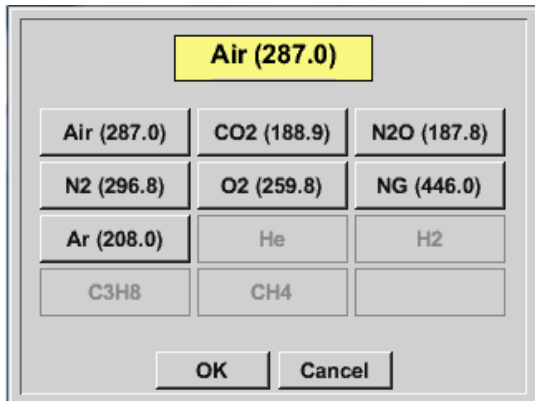

A preset selection of suitable *Gas Constants*.

In the same way as here in chapter 10.3.2.1.2. 8 Label and setting the description fields described, the remaining description fields can be labelled.

Main menu → Settings → Sensor settings → C1 → arrow right (2.page)

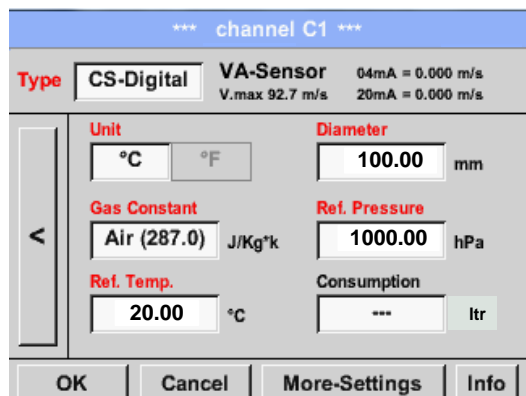

The red labeled description fields indicate, that different values, such as the *Diameter* and the *Type*, have been changed or added.

See also Chapter [10.3.2.1.2.2 Choice of the sensor type \(For example type CS-Digital sensor\)](#)

Remark:

After confirming with *OK*, the font is black again and the values and settings are accepted.

Attention:

Reference temperature and reference pressure (factory setting 20 °C, 1000 hPa):
All volume flow values (m³/h) and consumption values indicated in the display are related to 20 °C, 1000 hPa (according to ISO 1217 intake condition)
0 °C and 1013 hPa (= standard cubic meter) can also be entered as a reference.
Do not enter the operation pressure or the operation temperature under reference conditions!

10.3.2.1.2.9 Configuration of Analog-Sensors

Applicable only at DP 510.

A brief overview of the possible **Type** of settings with examples.

For **CS-Digital** siehe Kapitel [10.3.2.1.2.2 Choice of the sensor type \(For example type CS-Digital sensor\)](#) and [10.3.2.1.2.7 Dew Point sensor with type CS-Digital](#).

The **Alarm-settings**, **Record-Button**, the **Resolution** of the decimal places and **Short Name** and **Value-Name** are all described in Chapter [10.3.2.1.2 Sensor-Settings](#).

The caption of description fields, see chapter [10.3.2.1.2.8 Label and setting the description fields](#)!

10.3.2.1.2.10 Type 0 - 1/10/30 Volt and 0/4 – 20 mA

Main menu → Settings → Sensor settings → C1 → Type description field → 0 - 1/10/30 V

Please see the scale of the sensor (here for example **Type 0 - 10V** corresponds to 0 - 250 ° C) from the data sheet of the connected sensor.

By **Scale 0V** enter the lower and by **Scale 10V** the upper scale value.

Main menu → Settings → Sensor settings → C1 → arrow right (2.page)

By **Scale 0V** enter the lower and by **Scale 10V** the upper scale value

The **Sensor Supply Voltage** is switched **On**, if it's required by the sensor type, otherwise off (no green hook).


Please confirm by pressing the **OK** button

It is possible to define a Offset-Value. With the **Set Value to**-button (**Offset**) you enter it. The positive or negative difference of the **Offset** will be displayed.

By pressing the **Reset**-button the **Offset** will be deleted

Sensor-Settings / Configuration of Analogue sensors

Main menu → Settings → Sensor settings → C1 → arrow right (2.page) → description field Unit

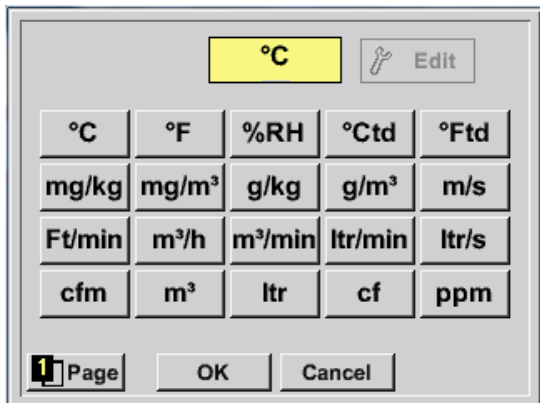


A preset selection of suitable units by **Type**
0 - 1/10/30 V and 0/4...20 mA.


The different pages could be displayed by pressing the **Page**-button.

In addition **User** specific units could be defined

Here with the **Edit** button could analog to **description field** a User unit be defined.

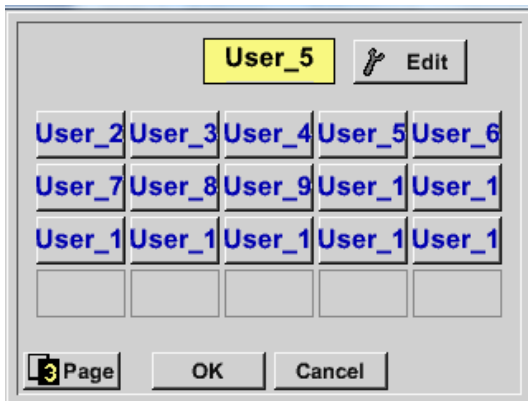

Main menu → Settings → Sensor settings → C1 → Type description field → 0/4 - 20 mA

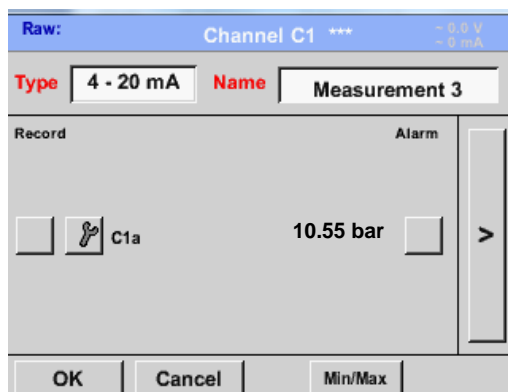

Here for example **Type 4 - 20 mA**.

10.3.2.1.2.11 Type PT100x and KTY81

Main menu → Settings → Sensor settings → B1 → Type description field → PT100x

*** Channel C1 *** ~ 0.5 V ~ 0 mA

Type **PT100** Name **Measure 2**

Record Alarm

☒ B1a 123.54 °C ☐

☐ R

☐ U

OK Cancel Info

Here the sensor type *PT100* and the *Unit* in °C are chosen, alternatively the sensor types *PT1000* and *KTY81*, as well as the *Unit* °F can be selected.

*** Channel C1 *** ~ 0.5 V ~ 0 mA

Type **PT100**

Unit **°C**

Sensortype: **PT100** PT1000 KTY81

Offset 0.00 °C

(Offset) Set Temp. to ... Reset

Back Info

More setting options, see chapter [10.3.2.1.2.10 Type 0 - 1/10/30 Volt and 0/4 - 20 mA!](#)

10.3.2.1.2.12 Type Pulse (Pulse ration)

Main menu → Settings → Sensor settings → B1 → Type description field → Pulse

*** Channel C1 *** ~ 0.0 V ~ 0 mA

Type **Pulse** Name **Measure 3**

Record	Alarm
<input checked="" type="checkbox"/> B1a 9000 m³/h	<input type="checkbox"/>
<input checked="" type="checkbox"/> B1b 367001 m³	<input type="checkbox"/>
<input type="checkbox"/> B1c 50 Hz	<input type="checkbox"/>

OK Cancel Info

Typically the value with unit of **1 Pulse** is standing on the sensor and can directly entered to the **1 Pulse =** description field.

Remark:

Here, all description fields are already labeled or occupied.

*** Channel C1 *** ~ 0.0 V ~ 0 mA

Type **Pulse**

1 Pulse = **0.005** m³

Unit	Pulse	Consumption	Counter
m³	m³/h	m³	m³

Counter **367001** m³ ☒ Power

OK Cancel Info

Main menu → Settings → Sensor settings → B1 → arrow right (2.page) → Unit Pulses

m³

	ltr	m³	Nltr	Nm³
cf	Ncf	kg	kWh	PCS

OK Cancel

By **Unit Pulse** you can choose between a flow volume or a power consumption unit.

Sensor-Settings / Configuration of Analogue sensors

Main menu → Settings → Sensor settings → B1 → arrow right (2.page) → Unit Consumption




Unit of current *Consumption* by *Type Pulse*

Remark:

Example with the unit cubic meters / hour

Main menu → Settings → Sensor settings → B1 → arrow right (2.page) → Unit Counter

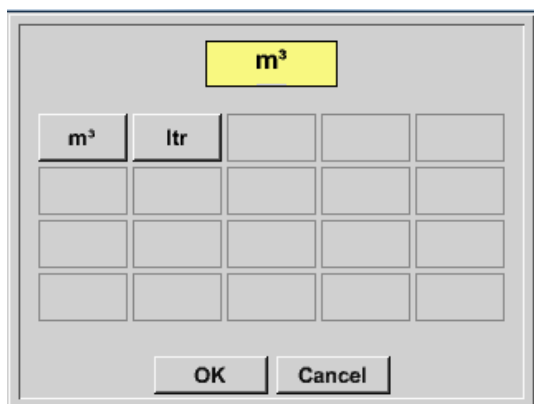


The available Units for the *Unit of Counter* by *Type Pulse*

The **counter** can be set any time to any value you need.


More setting options, see chapter [10.3.2.1.2.10 Type 0 - 1/10/30 Volt and 0/4 - 20 mA!](#)

10.3.2.1.2.13 Type „No Sensor“

Main menu → Settings → Sensor settings → C1 → Type description field → No Sensor

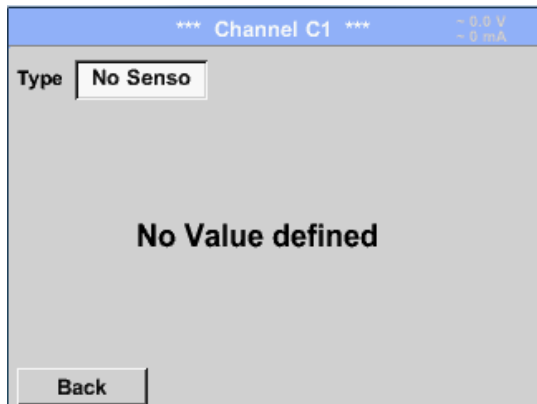

Is used to declare a not currently needed channel as *No Sensor* defined.

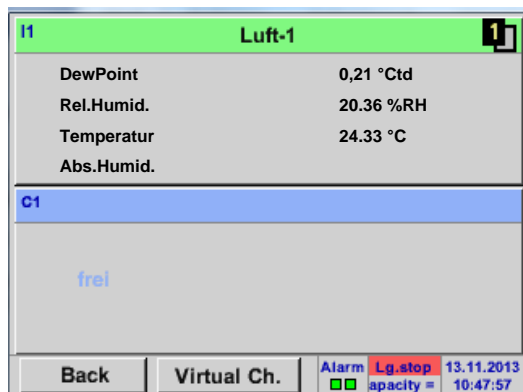

If you go to *Type No Sensor* Back, the channel will appear as *unused*.

10.3.2.1.2.14 Type Modbus

10.3.2.1.2.15 Selection and activation of Sensor-Type Modbus

First Step: First step: choose an unused sensor channel

Main menu → Settings → Sensor settings → C1


Second step: choose type Modbus

Main menu → Settings → Sensor settings → C1 → Type description field → Modbus

Third step: confirm with **OK**.

Now, a **Name** (see chapter 10.3.2.1.2.8 Label and setting the description fields) can be determined.

Main menu → Settings → Sensor settings → C1 → arrow right (2.page) → Va → use

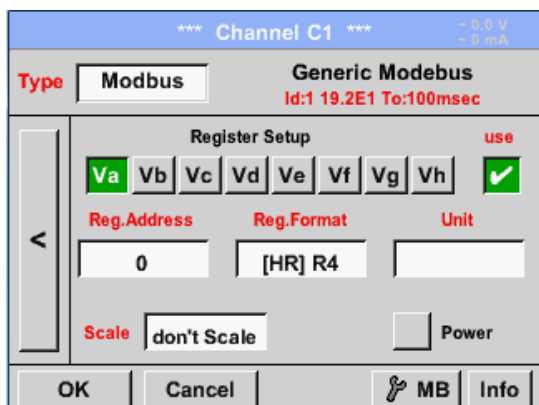


Via Modbus it is possible to read out up to 8 Register-Values (from Input or Holding Register) of the sensor.

Selection by the Register Tabs **Va – Vh** and activation by pressing of the corresponding **Use** button.

10.3.2.1.2.15.1 Modbus Settings

Main menu → Settings → Sensor settings → C1 → arrow right (2.page) → Modbus Settings → ID - Textfield

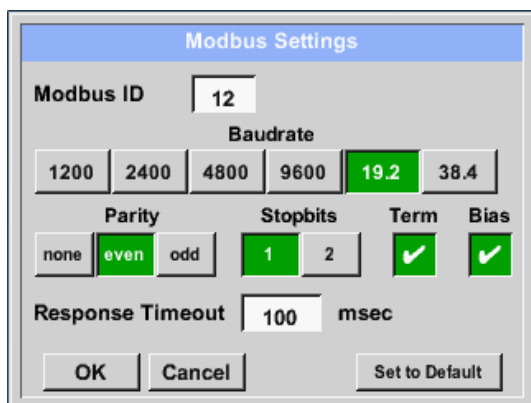

Please insert here the specified **Modbus ID** of the sensor, allowed values are 1 -247, (e.g.. here **Modbus ID = 12**)

For setting the Modbus ID on the sensor please see sensor-datasheet.

In addition in the menu are the serial transmission settings **Baudrate**, **Stopbit**, **Paritybit** and **Timeout** time to define.

In case that the DP 510 is the end of the RS485 bussystem with activating **Term-** & **Bias-** button the required termination and biasing could be activated.

Confirmation by pressing **OK** button.

For resetting to the default values please press **Set to Default**.

Sensor-Settings / Type „Modbus“

Main menu → Settings → Sensor settings → C1 → Reg. Address description field

The measurement values are kept in the registers of the sensor and can be addressed via Modbus and read by the DP 510.

This requires to set the desired register addresses in the DP 510

Entering the register / data address is here in decimal with 0-65535.

Important:

Required is the correct *register-address*.

It should be noted that the register-number could be different to the register-address (Offset). For this please consult the sensor data sheet.

Main menu → Settings → Sensor settings → C1 → Reg. Format description field

With the buttons *Input Register* and *Holding Register* the corresponding Modbus-register type will be selected.

The number format and transmission order of each value needs to be defined by *Data Type* and *Byte Order*. Both have to be applied in correct combination.

Supported Data types:

Data Type:	UI1(8b) = unsigned Integer	=>	0	-	255
	I1 (8b) = signed integer	=>	-128	-	127
	UI2 (16b) = unsigned Integer	=>	0	-	65535
	I2 (16b) = signed integer	=>	-32768	-	32767
	UI4 (32b) = unsigned Integer	=>	0	-	4294967295
	I4 (32b) = signed integer	=>	-2147483648	-	2147483647
	R4 (32b) = floating point number				

Byte Order:

The size of each Modbus-register is 2 Byte. For a 32 bit value two Modbusregister will be read out by the DS500. Accordingly for a 16bit Value only one register is read.

In the Modbus Specification the sequence of the transmitted bytes is not defined clearly. To cover all possible cases, the byte sequence in the DS500 is adjustable and must adapted to the respective sensor. Please consult here for the sensor datasheet.

e.g.: High byte before Low Byte, High Word before Low Word etc

Therefore the settings have to be made in accordance to the sensor data sheet.

Sensor-Settings / Type „Modbus“

Example :

Holding Register - UI1(8b) - Value: 18

The dialog box 'Data Format' shows 'Register Type' as 'Holding Register'. Under 'Data Type', 'UI1-8' is selected. Under 'Byte Order', 'A' is selected. 'OK' and 'Cancel' buttons are at the bottom.

Selection Register Type *Holding Register*,
Data Type *UI1(8b)* und Byte Order *A / B*

	HByte	LByte
18 =>	00	12
Data Order	1. Byte	2. Byte
A	00	12
B	12	00

Holding Register – UI4(32) - Value: 29235175522 → AE41 5652

The dialog box 'Data Format' shows 'Register Type' as 'Holding Register'. Under 'Data Type', 'UI4-32' is selected. Under 'Byte Order', 'A-B-C-D' is selected. 'OK' and 'Cancel' buttons are at the bottom.

Selection Register Type *Holding Register*,
Data Type *UI1(32b)* und Byte Order *A-B-C-D*

	HWord		LWord	
	HByte	LByte	HByte	LByte
29235175522 =>	AE	41	56	52
Data Order	1.Byte	2.Byte	3.byte	4.Byte
A-B-C-D	AE	41	56	52
D-C-B-A	52	56	41	AE
B-A-D-C	41	AE	52	56
C-D-A-B	56	52	AE	41

Main menu → Settings → Sensor settings → C1 → Unit- description field


The screen shows 'Channel C1' configuration. 'Type' is 'Modbus'. 'Generic Modbus' is selected with 'Id:12 19.2E1 To:100msec'. Under 'Register Setup', 'Va' is selected. 'Reg.Address' is '0', 'Reg.Format' is '[HR] UI4', and 'Unit' is empty. 'Scale' is 'don't Scale' and 'Power' is unchecked. At the bottom, there is a grid of unit options: °C, °F, %rF, °Ctd, °Ftd, mg/kg, mg/m³, g/kg, g/m³, m/s, Ft/min, Nm/s, Nft/min, m³/h, m³/min, ltr/min, ltr/s, cfm, Nm³/h. 'Page', 'OK', and 'Abbruch' buttons are at the bottom.

By pressing the description field *Unit*
the list with the available units appear

Please select the unit by pressing the
respective button e.g. *m³/h*.
For validation of the unit please push the
button *OK*
To move through the list please press the
button *Page*.
In case the unit is **not** available it is possible
to create a user defined unit.
Therefore please select one of the *User_X*
buttons..

Sensor-Settings / Type „Modbus“


Main menu → Settings → Sensor settings → A1 → Scale- description field

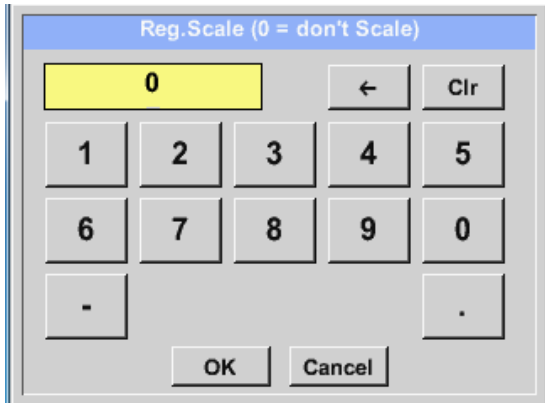

The use of this factor allows to adapt the output value by the same.

By default or value = 0 no scaling is applied and displayed in the field is *don't scale*


Main menu → Settings → Sensor settings → C1 → OK

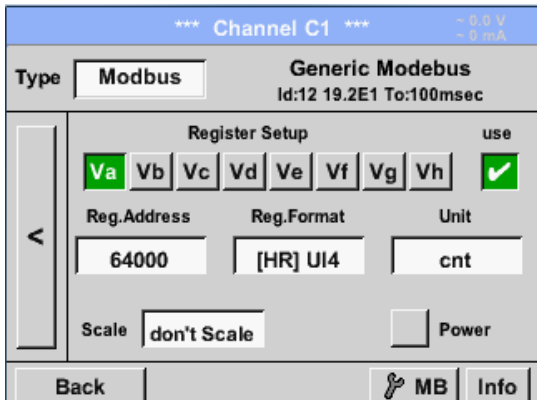


By pressing the *OK* button the inputs are confirmed and stored.

10.3.2.1.3 Data logger Settings

Main menu → Settings → Logger settings

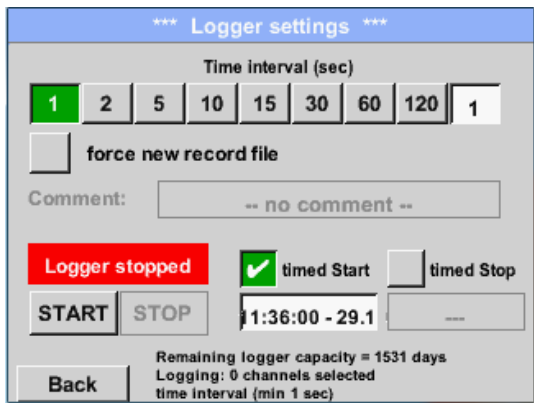

In the top row you can select the predefined *Time intervals* 1, 2, 5, 10, 15, 30, 60 and 120 seconds for recording.

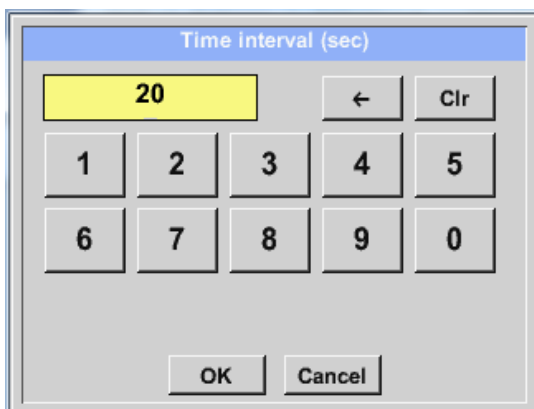

A different, individual *Time interval* can be entered in the highlighted white description field right at the head, where the currently set *Time interval* is always displayed.

Remark:

The largest possible *Time interval* is 300 seconds.

Remark:

If more than 12 measurement data are recorded at the same time, the smallest possible time interval of the data logger is 2 seconds.

And if more than 25 measurement data are recorded at the same time, the smallest possible time interval of the data logger is 5 seconds.

Data logger settings

Main menu → Settings → Logger settings → force new Record File button

or

Main menu → Settings → Logger settings → force new Record File button → Comment description field

A new recording file will be created by pushing the *force new record file* button and a name or comment can be entered by the choice of the *Comment* description field.

Important:

If a new recording file should be created, the *force new record file* button must be activated. Otherwise, the last applied recording file is used.

Main menu → Settings → Logger settings → timed Start button

By pushing the *timed Start* button and then the date/time description field below, the date and the start time can be set for a data logger recording.

Remark:

If the start time is activated, it will automatically be set at the current time plus a minute.

Data logger settings

Main menu → Settings → Logger settings → timed Stop button

*** Logger settings ***

Time interval (sec)

1 2 5 10 15 30 60 120 1

☒ force new record file

Comment: Messung 1

Logger stopped

☒ timed Start ☒ timed Stop

START STOP 1:36:00 - 29.1 2:36:00 - 29.1

Back

Remaining logger capacity = 1531 days
Logging: 0 channels selected
time interval (min 1 sec)

By pushing the *timed Stop* button and then the date/time description field below, the date and the stop time can be set for a data logger recording.

Remark:

If the stop time activated, it will automatically be set to the current time plus an hour.

Main menu → Settings → Logger settings → timed Start button/timed Stop button
→ Date/Time description field

timed Start

11 : 40 : 00 29 · 11 · 13 Cal

1 2 3 4 5

6 7 8 9 0

OK Cancel

After pushing the *date/time description field* a window will appear where the yellow marked area of the time or date can always be set and changed.


Data logger settings

Main menu → Settings → Logger settings → timed Start button/timed Stop button
→ Date/Time description field → Cal button



With the **Cal** button the desired date can be easily select from the calendar.


Main menu → Settings → Logger settings → Start button

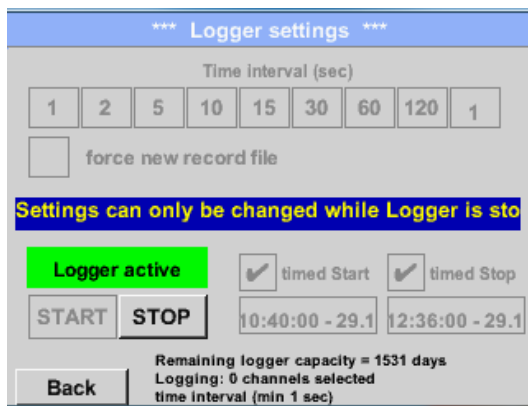

After the start and stop time activation and the created settings, the **Start** button will be pushed and the data logger is armed.

The data logger starts the recording at the set time!

Main menu → Settings → Logger settings → Start button/Stop button

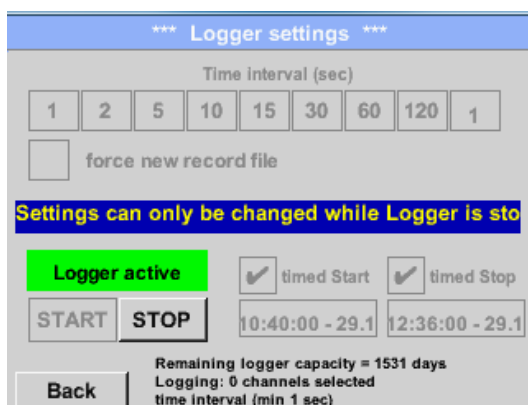

The data logger can be started without activated time settings, use the **Start** and **Stop** buttons for activate and disable. Left below there will be shown how many values are recorded and how long there still can be recorded.

Remark:


The settings cannot be changed, if the data logger runs.

Important:

If a new recording file should be created, the **force new record file** button must be activated. Otherwise, the last applied recording file is used.

10.3.2.1.4 Device Settings


Main menu → Settings → Device settings

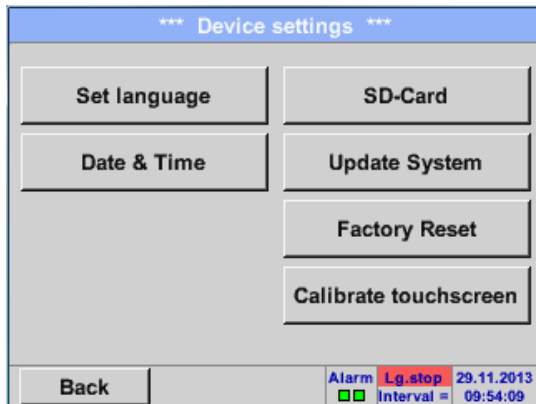

Overview of *Device settings*

10.3.2.1.4.1 Language


Main menu → Settings → Device settings → Set language

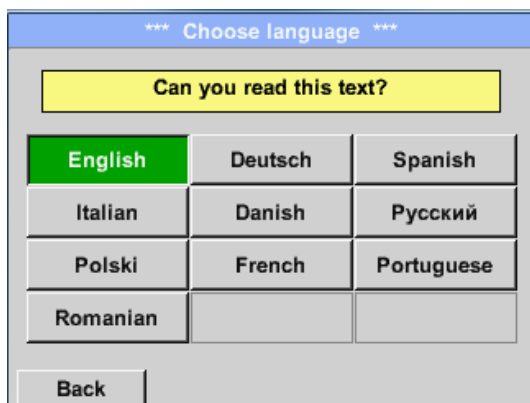


Here you can select one of 10 languages for the 500 / DP 510.

10.3.2.1.4.2 Date & Time

Main menu → Settings → Device settings → Date & Time

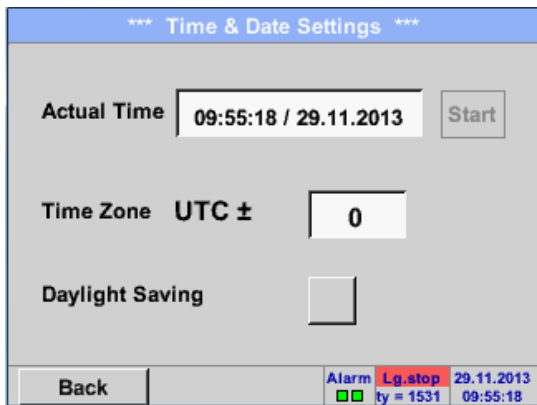

By pushing the *Time Zone* description field and enter the correct *UTC*, you can set the correct time all over the world.

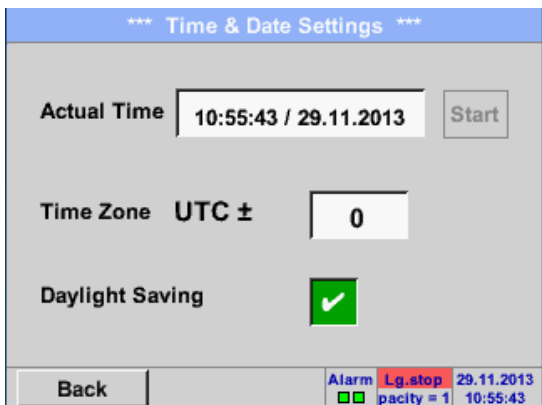


The summer and winter time switchover is realized by pushing the *Daylight Saving* button.

10.3.2.1.4.3 SD-Card

Main menu → Settings → Device settings → SD-Card → Reset Logger Database

Main menu → Settings → Device settings → SD-Card → Erase SdCard

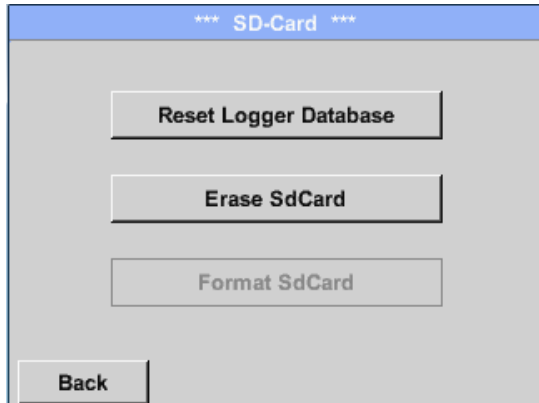


By pressing *Reset Logger Database* all actual stored data on SD-Card will be blocked for use in DS 400. Nevertheless all data are still stored and available for external use only.

By pressing *Erase SdCard* all Data on the SD-Card will be deleted.


10.3.2.1.4.4 System update

Important!

System update can only be done with power supply connected to ensure there is a continuous power supply during the update.

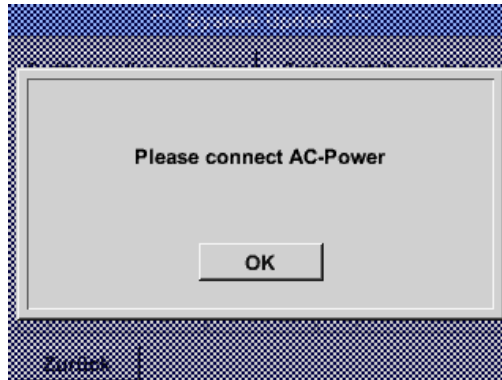


Main menu → Settings → Device settings → System-Update

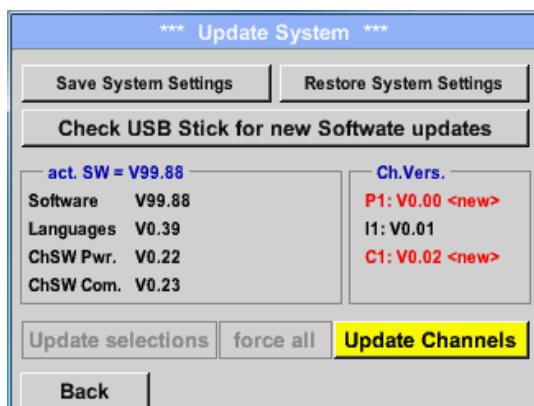

Overview of the **Update System** features

10.3.2.1.4.4.1 Save System Settings

Main menu → Settings → Device settings → System-Update → Save System Settings

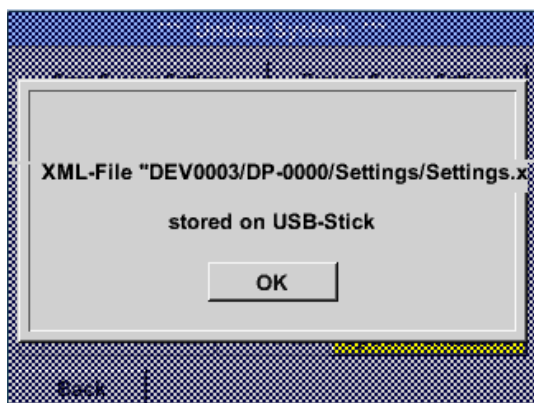

Stores the **channel** and **system settings** in XML format on a USB stick.

10.3.2.1.4.4.2 Check for new Software updates (USB)

Main menu → Settings → Device settings → Update System → Check USB Stick for new Software updates

*** Update System ***

Save System Settings Restore System Settings

Check USB Stick for new Software updates

act. SW = V99.88

Software	<no file>	Ch.Vers.	P1: V0.00 <new>
Languages	<no file>	I1: V0.01	
ChSW Pwr.	<no file>	C1: V0.02 <new>	
ChSW Com.	<no file>		

Update selections force all Update Channels

Back

If after pushing the *Check USB Stick for new Software updates* button the following messages in the window appears, then DP 500 DP 510 is not connected properly with the USB stick or no files are available.

*** Update System ***

Save System Settings Restore System Settings

Check USB Stick for new Software updates

act. SW = V0.48

Software	V0.66<V0.48>	Ch.Vers.	P1: V0.00 <new>
Languages	V0.36<V0.33>	I1: V0.01	
ChSW Pwr.	V0.27<V0.25>	C1: V0.02 <new>	
ChSW Com.	V0.27<V0.25>		

Update selections force all Update Channels

Back

If the DP 500 / DP 510 is correctly connected to USB, and new version available it will displayed.

Right aside it shows the current (old) and another (new) available versions

Ist das DP 500 korrekt mit dem USB-Stick


Main menu → Settings → Device settings → System Update → Update selections

Important:

If the *Reboot system* button after the update appears, he must be pushed to restart the DP 500 / DP 510!

System / System update

Main menu → Settings → Device settings → System Update → Update channels

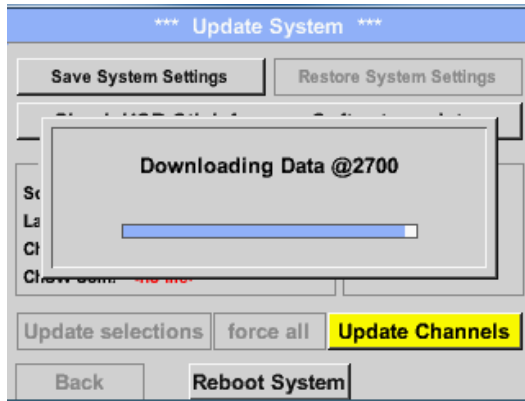

Update for the available *channels* of the DP 500 / DP 510.

Wichtig: Important:

If after the channel update the *Reboot system* button appears, it has to be pushed to restart the DP 500 / DP 510.


Update of the channels maybe requires a repeating this procedures with a reboot of the system. In that case after reboot of the system a popup is displayed.

10.3.2.1.4.4.3 Restore System Settings

Main menu → Settings → Device settings → → Update System → Restore System Settings



With the help of the *Restore System Settings* button the channel and system settings can be reset to the last saved version.




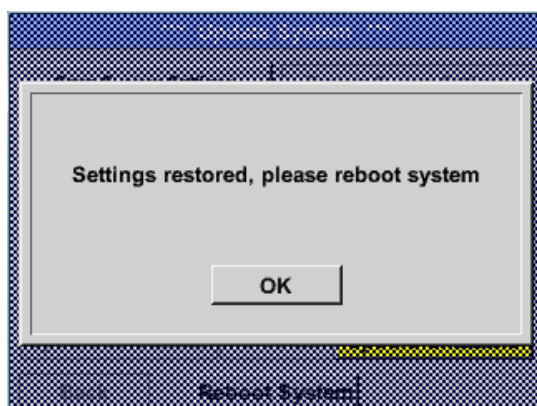


Important:

If the channel and system settings have been reset you have to push *OK* and then the *Reboot system* button.


10.3.2.1.4.5 Factory Reset

Main menu → Settings → Device settings → Factory Reset → Reset to Defaults

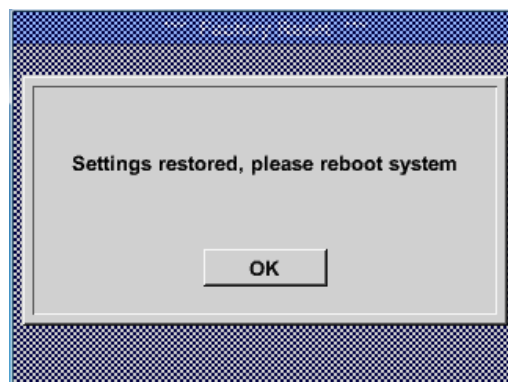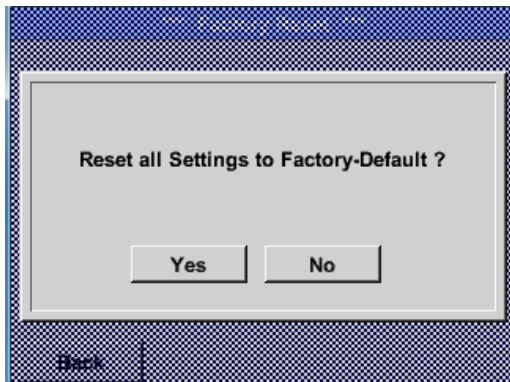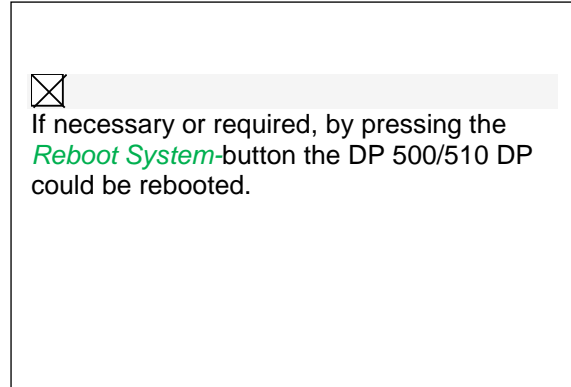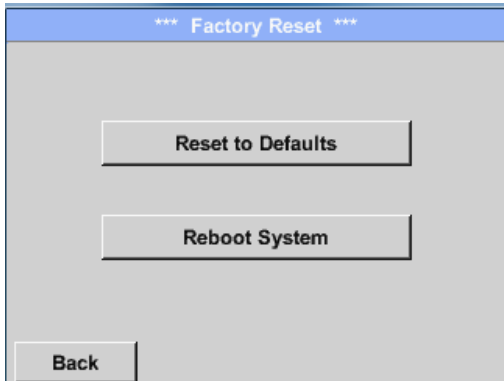

10.3.2.1.4.6 Calibrate touch-screen

Main menu → Settings → Device settings → calibrate touchscreen

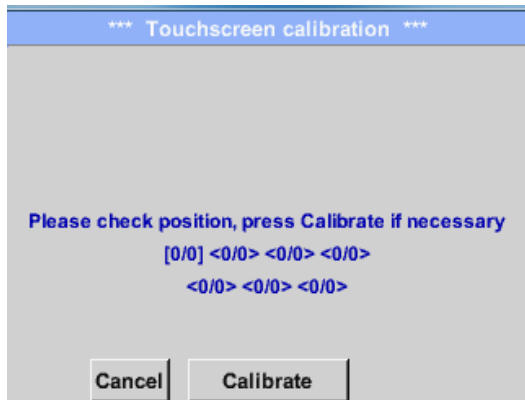

If necessary, the touch-screen calibration can be changed here.


Push **Calibrate** and it appears, 1. left above, 2. bottom right and 3. in the middle, a calibration cross that must be pushed consecutively.

If the calibration finished and the touch-screen display averaged, you can confirm with **OK**.

Is this not the case, so you can repeat the calibration with the help of the **Cancel** and **Calibrate** buttons.


10.3.2.1.5 Set backlight

Hauptmenü → Einstellungen → Helligkeit

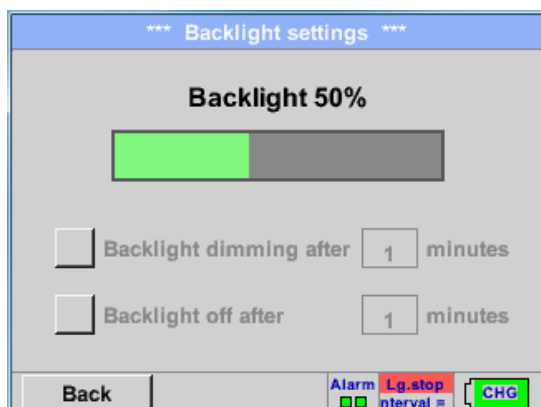

Here you adjust the desired **Backlight** (15-100%) of the display directly.

e.g. **Backlight** to 50 %

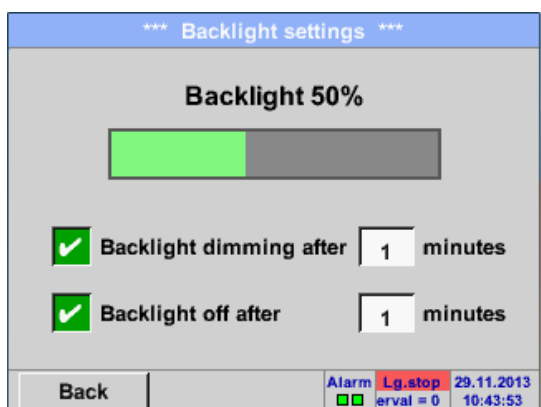

With the help of the **Backlight dimming after** button, after a definable time interval (here after 15 minutes), the **Backlight** can be reduced to the minimum.

In addition, for a longer battery runtime, the backlight could be switched off completely after the defined time (here 1 minutes) by pressing **backlight off after** button.

As soon as the dimmed screen is operated again, the **Backlight** is committed automatically on the last set value before dimming.

Remark:

At the first touch, the **Backlight** in our example is reset to 50%, after that a "normal" function operation is possible.

Important:

If the **Backlight dimming after** button is not activated, then the **Backlight** stays permanently on, in the currently set brightness.

10.3.2.1.6 Cleaning

Main menu → Settings → Cleaning




This function can be used for cleaning the touch panel during running measurements.

If one minute is not enough time to clean, the process can be repeated at any time.

If the cleaning faster finished, then you can push the *to abort press long* button (for one or two seconds) to cancel.

10.3.2.1.7 System-Status

Main menu → Settings → System-Status

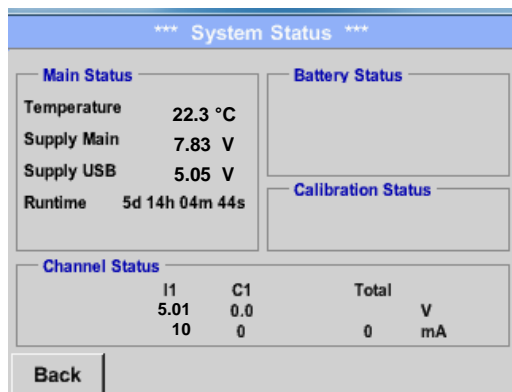

The function **System Status** offers an overview, fitting voltages and currents on the individual and the entire channel, as well as the power supply of the power supply unit.

By the *Runtime*, you always know how long the DP 500 / DP 510 was in total in operation

10.3.2.1.8 About DP 500 / DP 510

Main menu → Settings → About DP 510



Brief description of the **Hardware** and **Software Version**, as well as the **Serial Number** of the DP 500 /DP 510.

Under options, you can buy two additional, different functions (only DP 510 , if you haven't done this by ordering.

Chart

10.3.2.2 Chart


Main menu → Chart

Attention:

In the **Chart** there can be represented only records that have already finished!


Current records can be seen in **Chart/Real time values**.

(See chapter 10.3.2.3 Chart/real time values)

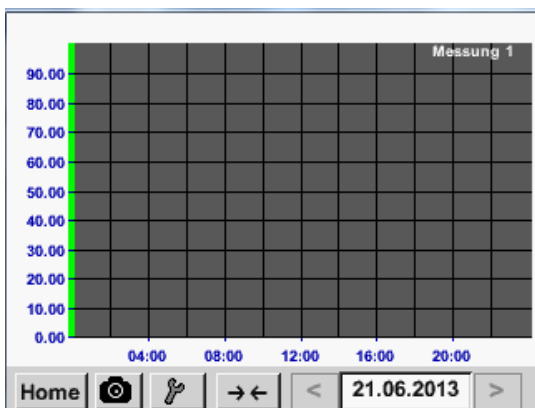

Running measurement, there are no values represented!

Zoom and scroll options in the time domain of the **Chart**:




Maximal an entire day can be represented (24h).




The smallest possible range is represented, depending on the time interval of the recording.

Additional zooming and scrolling options in **Chart** and **Chart/Real time values**

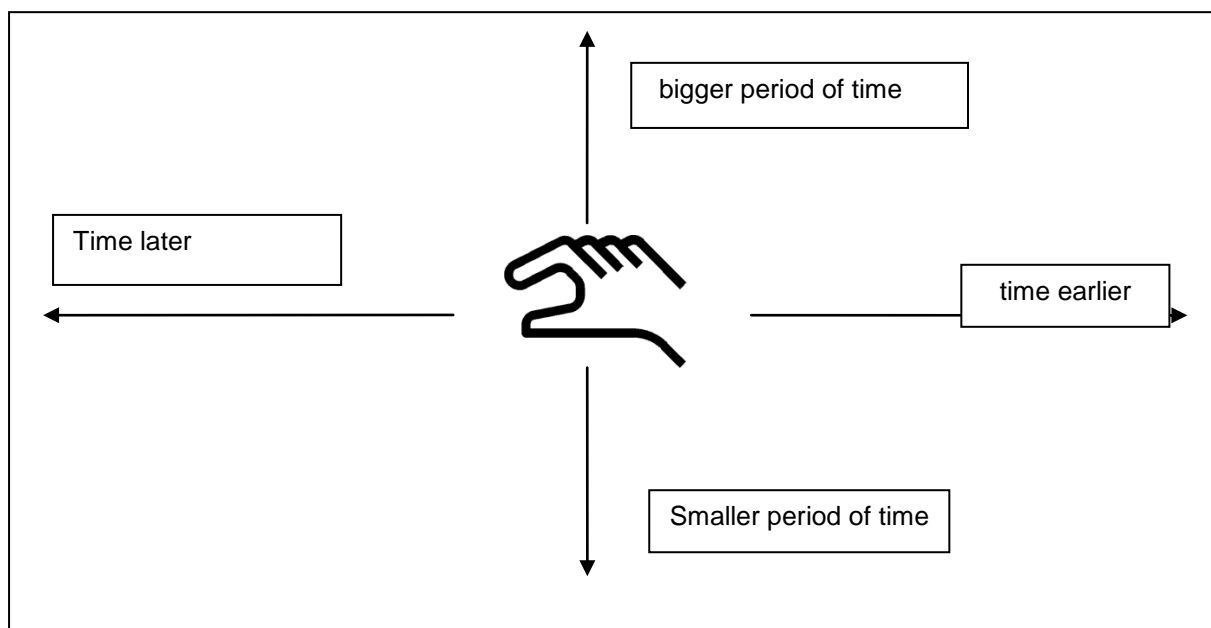


Chart

Main menu → Chart → Date description field

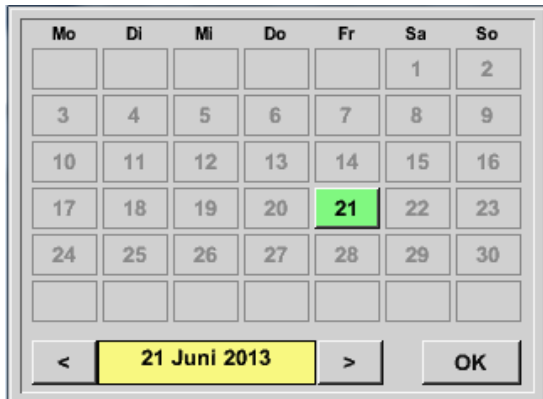


By pushing the **date** description field (center bottom) the calendar, from which the appropriate date can be selected conveniently, appears.

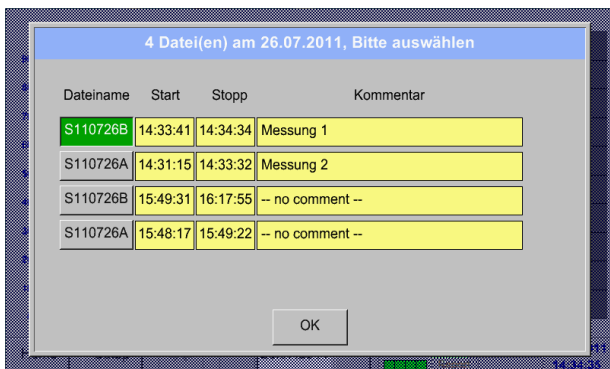

Stored measuring data can be select here by **time** (**START** and **STOP**), **Comment** and **File name** (contains English date).

Main menu → Chart → Setup

In the **Setup**, you can make up to four different y-axis labels and in addition choose a **Unit**, the grid (**min**, **max**, **step**) and several channels (**Plots**) and a **Colour**.

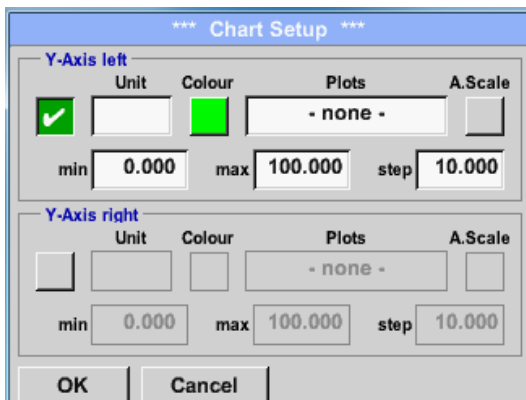

The y-axis **left** is already enabled, you can choose a **Colour** for it.

Remark:

Grid setting is already possible at this point, but later when a record is selected it is more reasonable!

Chart


Main menu → Chart → Setup → Unit description field



Select the *Unit* of the represented recording from the menu.




Main menu → Chart →

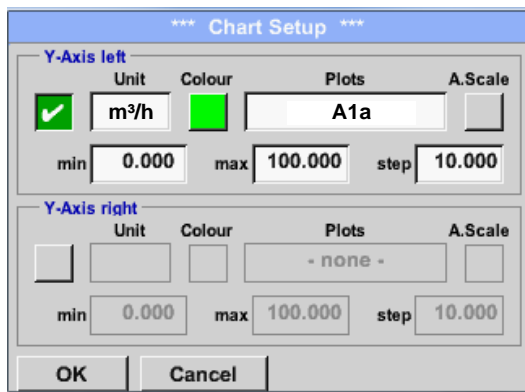

Now, the grid can be set with *min*, *max*, and *step*.

By pushing the *A.Scale*-button a calculated auto-scaling will be defined.

In the same way the remaining y-axes can be labelled!

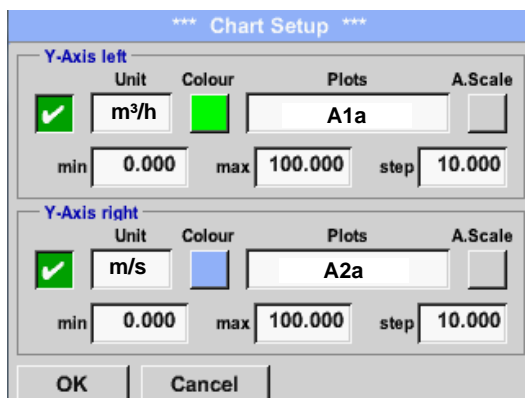

Two different grid settings with various *Units* and *Colours*.

Chart

Main menu → Chart


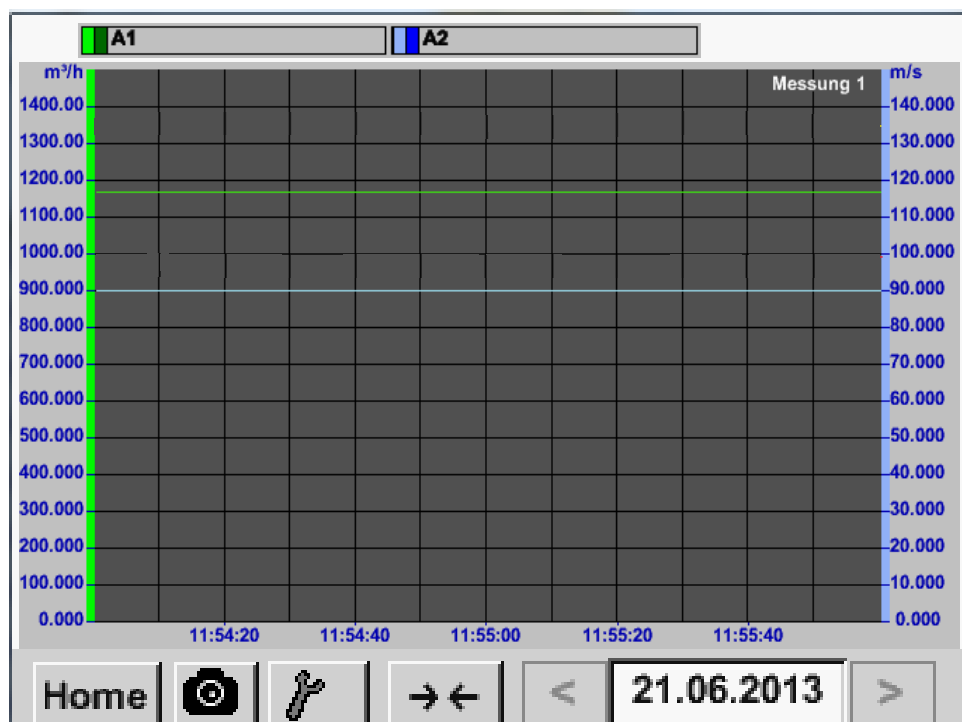


Chart / Real time values

10.3.2.3 Chart / Real time values

Main menu → Chart/Real time values

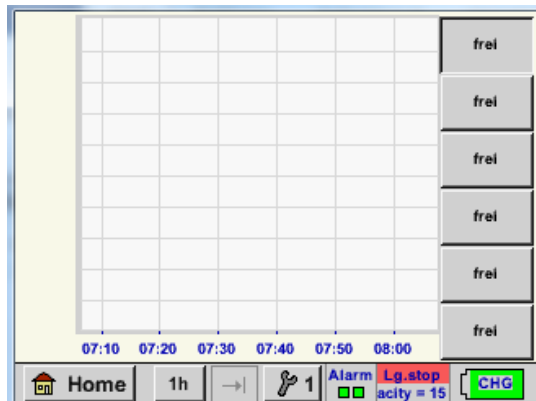


One or more channels for the recording and presentation of measured data can be selected here, such as a dew point sensor or several different sensors.

After pushing this button currently recorded measurement data in the current time range are represented.

Quick access to predefined time periods 24 h, 8 h, 1 h, 15 min and 2 min. At the push of a button the chart for the selected time range is displayed.

Main menu → Chart/Real time values →  #1- #6

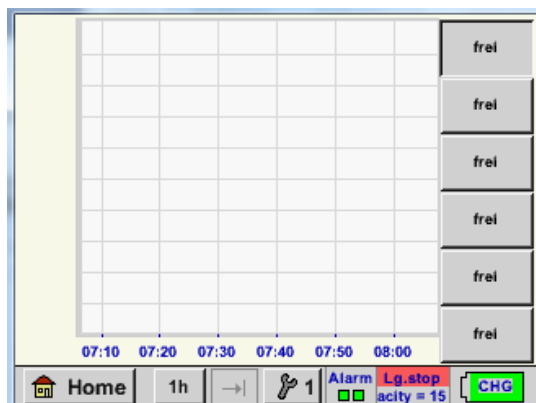

In this menu item, up to twelve channels (depending on the version of the DS 400) can be activated at the same time and viewed in [Main → Chart/Real time values](#).


Here the channel C1 chosen.

For each channel, you can select a value to be represented in the [Chart](#) and one to display ([2. values](#)).

In addition, it can be set, like in [Main → Chart](#), a [colour](#) and the grid ([min](#), [max](#), [step](#)) of the y-axis.

Chart / Real time values

Hauptmenü → Grafik/aktuelle Werte

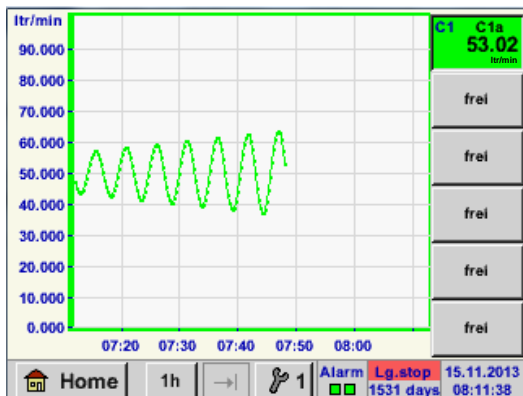

Channel C1:

Elected the flow as *Chart*

If several channels are logged, all charts will be displayed, but there is only the y-axis of the selected channel visible.

If there is no grid entered in the setup, *min* will be 0, *max* 100 and *step* 10

In the same way the remaining setups can be set!

10.3.2.4 Channels

Main menu → Channels

I1 Feuchte intern	
DewPoint	0,21 °Ctd
Rel.Humid.	20.36 %RH
Temperatur	24.33 °C
Abs.Humid.	

C1 Halle 2 Druckluft	
Flw	1165.200 m³/h
Con	27366 m³
Vel	180.000 m/s

Back Virtual Ch. Alarm Lg.stop 13.11.2013 08:35:24

The overview of *Channels* shows the current measured values of all connected sensors.

Exceeds or falls below the set alarm limits, the respective measured value flashes yellow (*alarm 1*) or red (*alarm 2*).

Main menu → Channels → C1

*** Channel C1 *** ~ 0.0 V ~ 0 mA

Type CS-Digital Name Luft-1

Aufzeichnen Alarm

<input checked="" type="checkbox"/>	<input type="checkbox"/>	Flw	1165.200 m³/h	<input type="checkbox"/>
<input checked="" type="checkbox"/>	<input type="checkbox"/>	Con	27366 m³	<input type="checkbox"/>
<input checked="" type="checkbox"/>	<input type="checkbox"/>	Vel	180.000 m/s	<input type="checkbox"/>

Back Min/Max Info

Each channel can be selected and the settings viewed and checked, but **no changes** can be made here.

Remark:

Please, make changes in the *Settings*!

10.3.2.4.1 Min/Max Funktion

This feature allows to read out the minimum or maximum values of the current measurement for each connected sensor. Start of recording is immediately after setting of the sensor, but there is always the possibility to reset the Min and Max values.

Main menu → Channels → I1 → Min/Max

*** Channel I1 *** ~ 3.3 V ~ 10 mA

Type FA450 Name

Record Alarm

<input type="checkbox"/>	<input type="checkbox"/>	DewPoint	1.82 °Ctd	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	Rel.Humid.	23.5774 %	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	Temperatur	23.87 °C	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	Abs.Humid	5.0811 g/m³	<input type="checkbox"/>

Back Min/Max 1..4


Min/Max I1-			
DewPoint	↑	10.08 °Ctd	Reset
	↓	-0.32 °Ctd	
Rel.Humid.	↑	45.4107 %	Reset
	↓	18.2203 %	
Temperatur	↑	27.54 °C	Reset
	↓	15.70 °C	
Abs.Humid.	↑	9.0252 g/m³	Reset
	↓	4.4212 g/m³	

Back 1..4

↑ = Max-Wert ↓ = Min-Wert

Channels

Main menu → Channels → I1 → **Min/Max** → Dew point **Reset**

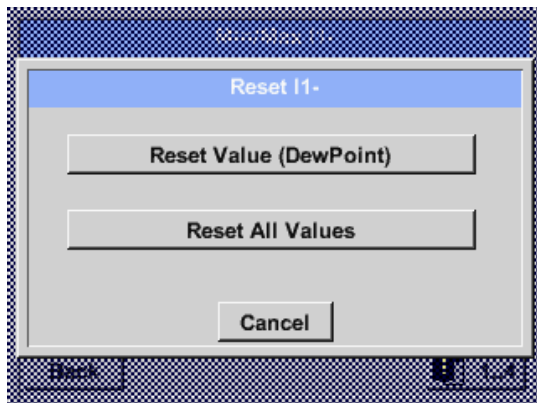

It is possible to reset a single measurement value, here it is the dew point or if needed to reset all minimum and maximum values of the sensor.

For resetting the single value the *Reset Value* –Button for all Min/Max-Values the *Reset All Values* –Button has to be pressed.

Real time values

10.3.2.5 Real time value

Main menu → Real time values

A1a Luft-1		Flow	1145,55 m³/h
A1c Luft-1		Temperatur	46.2 °C
A1b Luft-1	RF	A2a Power-1	P
9.5 %rH		30.825 °C	
Home Setup		Alarm Lg.stop 25.06.2013 erval = 0 14:41:09	

The view *Real time values* allows to display of 1 to 5 free definable measurement values.

By exceeding the upper- or lower alarm levels the respective measurement value flashes yellow for *Alarm-1* or red for *Alarm-2*.

Remark:

Changes for display settings have to be done in the *Setup* menu!

Hauptmenü → Aktuelle Werte → Setup → next Layout

Layout Settings	
Value 1	Val.1 I1a (Flw)
Value 2	Val.2 I1b (RF)
Value 3	Val.3 I1c (Tmp)
Value 4	Val.4 C1a (C1a)
next Layout	Val.5 C1b (C1b)
OK	Cancel

Here, by pressing *next Layout*–button it is possible to select the wanted layout.

You can choose between 6 different layouts showing 1-5 measurements. see below.

The values to be displayed could be selected in the *Val.1 to Val.5* description fields.

Different variantes :

Layout Settings	
Value 1	Val.1 I1a (Flw)
	Val.2 I1b (RF)
	Val.3 I1c (Tmp)
	Val.4 C1a (C1a)
	Val.5 C1b (C1b)
next Layout	
OK	Cancel

Layout Settings	
Value 1	Val.1 I1a (Flw)
Value 2	Val.2 I1b (RF)
	Val.3 I1c (Tmp)
	Val.4 C1a (C1a)
	Val.5 C1b (C1b)
next Layout	
OK	Cancel

Layout Settings	
Value 1	Val.1 I1a (Flw)
Value 2	Val.2 I1b (RF)
Value 3	Val.3 I1c (Tmp)
	Val.4 C1a (C1a)
	Val.5 C1b (C1b)
next Layout	
OK	Cancel

Layout Settings	
Value 1	Val.1 A1a (Flw)
Value 2	Val.2 A1c (Tmp)
Value 3	Val.3 A1b (RF)
	Val.4 A2a (P)
	Val.5 A2b (I)
next Layout	
OK	Abbruch


Layout Settings	
Value 1	Val.1 I1a (Flw)
Value 2	Val.2 I1b (RF)
Value 3	Val.3 I1c (Tmp)
Value 4	Val.4 C1a (C1a)
Value 5	Val.5 C1b (C1b)
next Layout	
OK	Cancel

Layout Settings	
Value 1	Val.1 I1a (Flw)
Value 2	Val.2 I1b (RF)
Value 3	Val.3 I1c (Tmp)
Value 4	Val.4 C1a (C1a)
Value 5	Val.5 C1b (C1b)
next Layout	
OK	Cancel

Alarm overview

10.3.2.6 Alarm overview

Main menu → Alarm-Overview

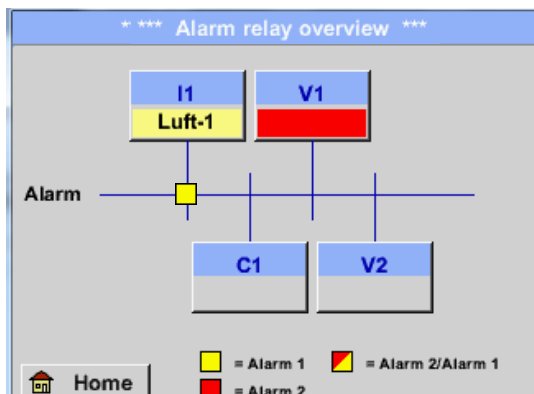

In the Alarm overview, you can immediately see whether there is an *alarm 1* or *alarm 2*.

You can see also in other menu items:

Main → Real time values and

Main → Settings → Sensor settings

The channel name will appear yellow invers (*alarm 1*) or inverse red (*alarm 2*).

In addition, you can see which popup had been set for the channel as the *alarm 1* or *alarm 2*.

Here *Alarm-1* for Channel I1!

Main menu → Alarm-Overview → C1

*** Channel C1 ***

Type Pulse Name

Record Alarm

<input type="checkbox"/>	C1a	1165,5 m³/h	<input checked="" type="checkbox"/>
<input type="checkbox"/>	C1b	27366 m³	<input type="checkbox"/>
<input type="checkbox"/>	C1c	180.0 m/s	<input type="checkbox"/>

Back Min/Max

Like in *Main → Real time values*, individual channels can be selected here, to detect which and how much the value has exceeded or below the alarm range.

Remark:


The alarm parameters can be set and/or modified here.

Export Data

10.3.2.7 Export Data

Recorded data can be transferred to a USB stick, by using *Export Data*.

Main menu → Export data

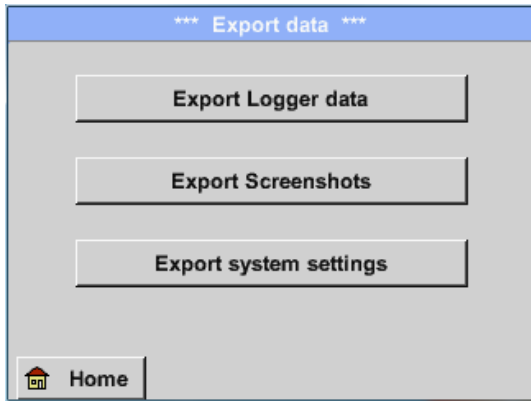


With *Export Logger data* and *Export system settings* the recorded measurement data and saved settings can be transferred to a USB stick.

Main menu → Export data → Export Logger data



Use the *Change* buttons to adjust a period between *start* and *end*. Stored measurement data in this period are exported

Main menu → Export data → Export Logger data → Change

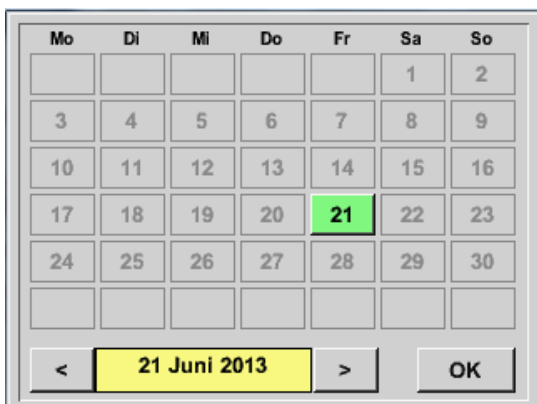

The selected date is always green, and the date numbers of the Sundays are red, like in the calendar.

On days, where measurement data were recorded, the date numbers are optical highlighted.

Export Data



If there have been recorded several measurements on the same date, they appear after the date selection with **OK**.

Now a recording can be selected comfortable.

Main menu → Export data → Export Logger data → export

The measurement data of the selected period are exported to a USB stick.

Main menu → Export data → Export system settings

By using *Export system settings*, all existing sensor settings can be exported to a USB stick.

11 Virtual Channels (optinal)

The option „Virtual Channels“ offers 4 additional channels (no HW Channels) where it is possible to display calculations of each single HW-Channel, virtual channels and free defined constants as well. For each „Virtual Channel“ are 8 calculations each with of 3 operands and 2 operations possible.


Possible cases are calculation of:

- Specific performance of a compressor(s)
- Complete consumption of a compressor(or the sum of several compressors)
- Energycost etc.

11.1 Option „Virtual Channels“ activation

After purchasing of the option „Virtual Channels“ the functionality have to be activated first.

Main menu → Settings → About DP 510

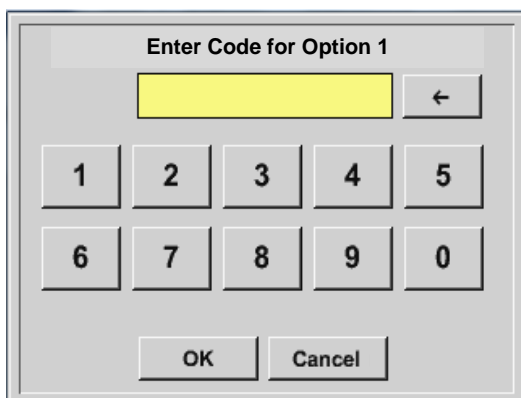


Please push the button Buy for „Virtual Channels“ and you will requested to insert the key-code received

Please enter the Key-Code in the text-field and activate the option by pushing the button
OK

Virtual Channels

11.2 Virtual Channels Settings

Main menu → Settings → Sensor Settings → Virtual Channels

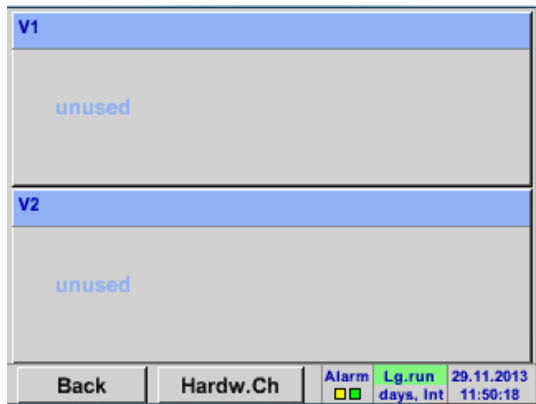

After pushing the button „*Virtual Channels*“ in the Sensor Settings menu an overview with the 4 available „*Virtual Channels*“ is displayed.

Remark:

By default all channels are without settings.


11.2.1 Selection of Sensor-type

Main menu → Settings → Sensor Settings → Virtual Channels → V1



By pushing the description field *Type No Sensor* the list of sensor types appears (see next step).

Main menu → Settings → Sensor Settings → Virtual Channels → V1 → Type description field

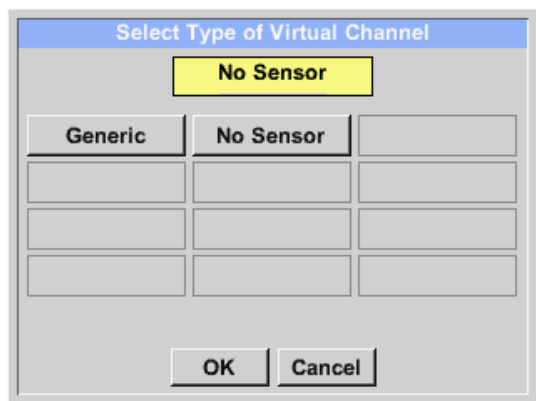

If still no sensor has been configured, the *Type No Sensor* appears.

By pushing the button **Generic** the virtual channel is selected.

Pushing the button **No Sensor** will reset the virtual channel.

Confirmation of selection is done by pressing the button **OK**.

Virtual Channels

Main menu → Settings → Sensor Settings → Virtual Channels → V1 → Name description field




By pushing the Text field *Name* a Sensor name could be inserted.

11.2.2 Configuration of each single virtual value

Each virtual channel includes 8 individual calculated values where every value has to be activated separately.

11.2.3 Activation of a single virtual value


Main menu → Settings → Sensor Settings → Virtual Channels → V1 → arrow right(2.page) → V1a → Use

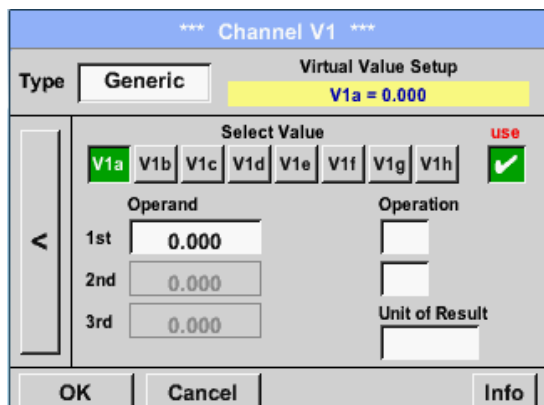

Every virtual value has to be activated by selecting the respective *Value-Button* e.g. *V1a* and pushing of the *Use Button*.

11.2.4 Definition of Operands


Main menu → Settings → Sensor Settings → Virtual Channels → V1 → arrow right(2.page) → 1stOperand

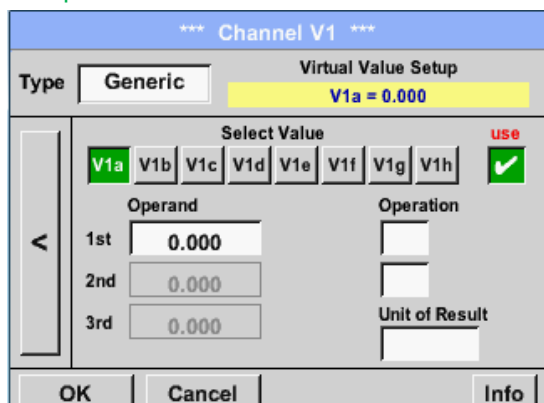


By accessing the text field *1st Operand* The list with all channels (HW and virtual channels) and const. Value appears.

Virtual Channels


Main menu → Settings → Sensor Settings → Virtual Channels → V1 → arrow right(2.page) → 1stOperand → C1

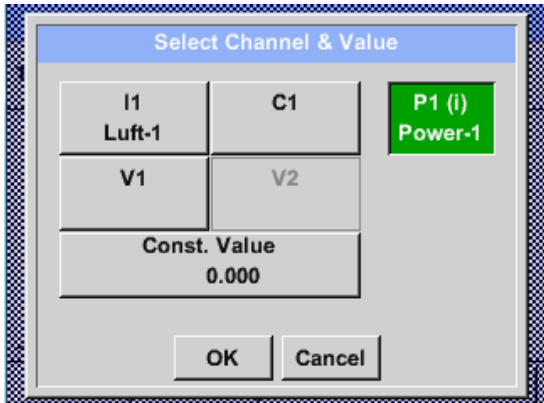

By pressing a button either for HW-, virtual channel or const. Value e.g. **C1** a list of all available measurement channels or measurement values will appear.

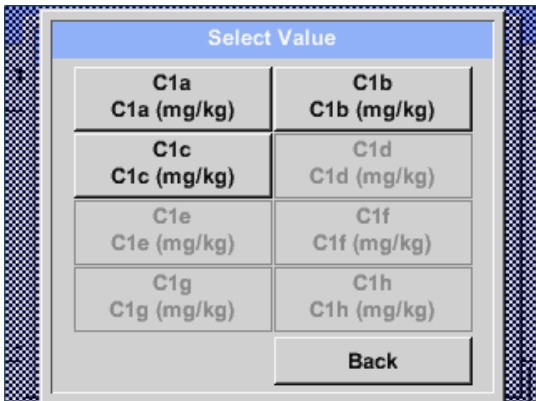

Pressing the respective channel button e.g. **C1b** will select the measurement channel

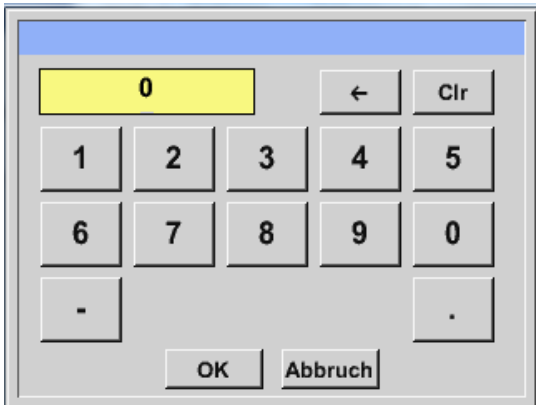

Pressing the button **const. Value** requests the input of the **const. Value** into the text field.

With button **OK** the value will validated

With the buttons **←** and **Clr** it is possible to correct the input.

Button **←** deletes the last figure

Button **Clr** clears the whole field

This approach is analogous to the other operands. (1st Operand, 2nd Operand and 3rd Operand) .

11.2.5 Definition of Operations

Main menu → Settings → Sensor Settings → Virtual Channels → V1 → arrow right (2.page) → 1st Operation



By accessing the text field *1st Operation* the list with all available operands appears.


Selecting and validation of the operand by pressing the respective operand.

Pressing of the button *not used* deactivates the operation of the dedicated operand.


This approach is analogous for both operations (1st Operation and 2nd Operation)

11.2.6 Definition of Unit

Main menu → Settings → Sensor Settings → Virtual Channels → V1 → arrow right (2.page) → Unit

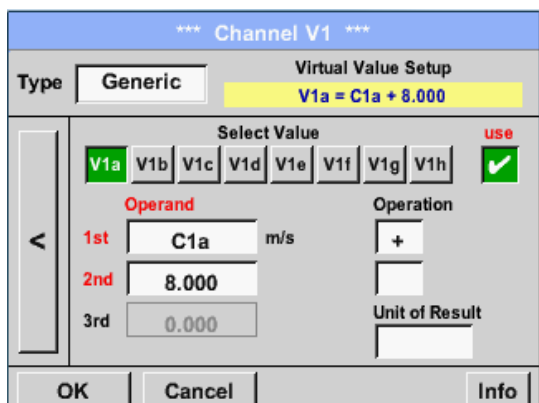


By accessing the text field *Unit of Result* the list with all available units appears

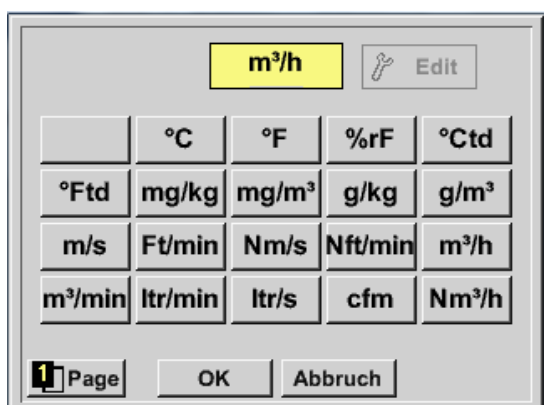


Please select the unit by pressing the respective button e.g. *m³/h*.
For validation of the unit please push the button *OK*.
To move through the list please press the button *Page*.
In case the unit is **not** available it is possible to create a user defined unit.
Therefore please select one of the *User_X* buttons.

Virtual Channels

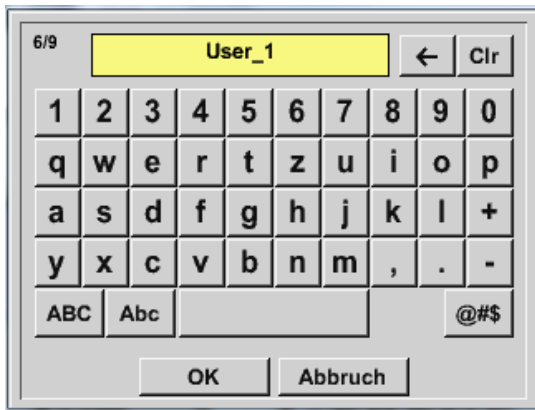

By pressing the button *Edit* you enter the menu for inserting the new Unit.

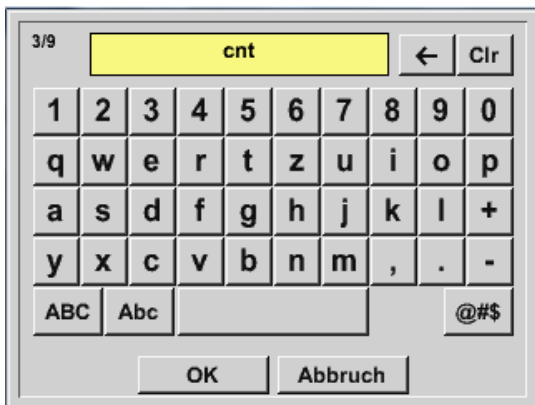

Then define the unit and confirm it with the button *OK*.

With the buttons *←* and *Clr* it is possible to correct the input.

Button *←* deletes the last figure
Button *Clr* clears the whole field

Important

Each calculation allows you the use of maximum 3 operands and 2 operations.

The calculation is then based on following formula:

Example: $V1a = (1st\ Operand\ 1st\ operation\ 2nd\ Operand)\ 2nd\ operation\ 3rd\ Operand$
 $V1a = (A1c - A2a) * 4.6$

11.2.7 Value name, resolution of decimal places and recording of values

Main menu → Settings → Sensor Settings → Virtual Channels → V1 → Tool-Button

The *Resolution* of the decimal places, the *Short Name* and *Value Name* are found under the **Tool button**

For the recorded *Value* there can be entered a *Name* with 10 characters and later in menu item *Graphics/Real time values* it is easier to identify it.

Default names are e.g. *V1a*.
V1 is the Channelme, *a* is the first measuring value of channel V1, *b* is the second measuring value and *c* the third etc.

The *Resolution* of the decimal places is simply adjustable by pushing right and left

Main menu → Settings → Sensor Settings → Virtual Channels → V1 → Record Button

Use the *Record* buttons to select the measurement data that will be stored by **activated data logger**

Attention:

Before the selected measurement data are recorded, the data logger must be activated after the settings (See chapter [10.2 Logger-Settings \(Data logger\)](#)).

See also chapter [10.3.2.1.2.3 Name the measurement](#) and [10.3.2.1.2.4 Recording measurement data](#)



12 Analog Total (optional only for DP 510)

The Option „**Analog Total**“ offers the possibility of a consumption measurement also for sensors with analogen outputs e.g.: 0-1/10/30V and 0/4 – 20mA.

12.1 Option „Analog Total“ activation

After purchasing of the option „Analog Total“ the functionality has to be activated first.

Main menu → Settings → about DP 510

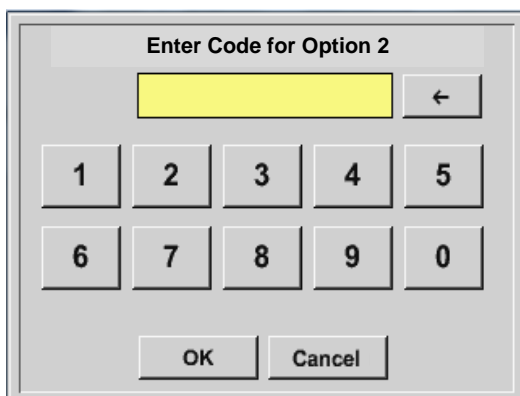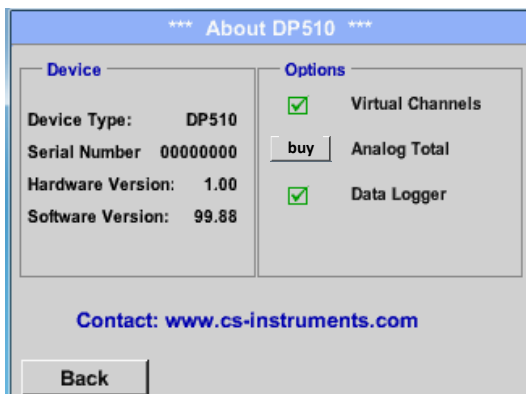


Please push the button *Buy* for „Analog Total“ and you will requested to insert the key-code received

Please enter the Key-Code in the text-field and activate the option by pushing the button *OK*.

12.2 Selection of sensor type

See also Chapter [10.3.2.1.2.9 Configuration of analogue sensors](#)


Main menu → Settings → Sensor Settings → C1

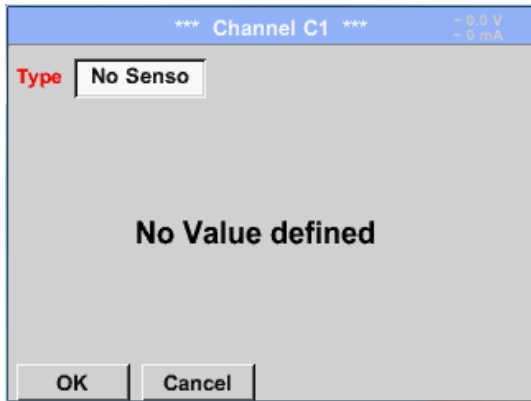

If still no sensor has been configured, the **Type No Sensor** appears.


By pushing the description field **Type No Sensor** the list of sensor types appears (see next step).

Main menu → Settings → Sensor Settings → C1 → Type description field

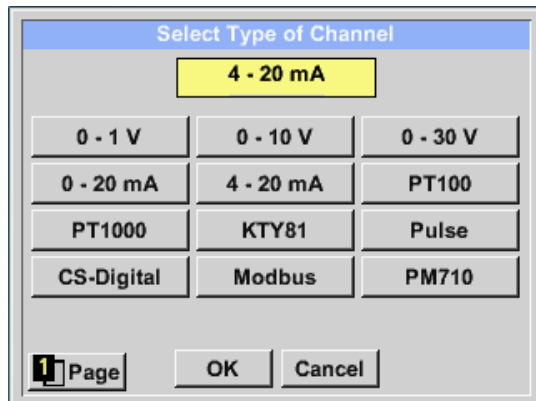

By pushing the button of the required sensor button e.g. 4 -20mA the sensor is selected. Pushing the button **No Sensor** will reset the selection.

Confirmation of selection is done by pressing the button **OK**.

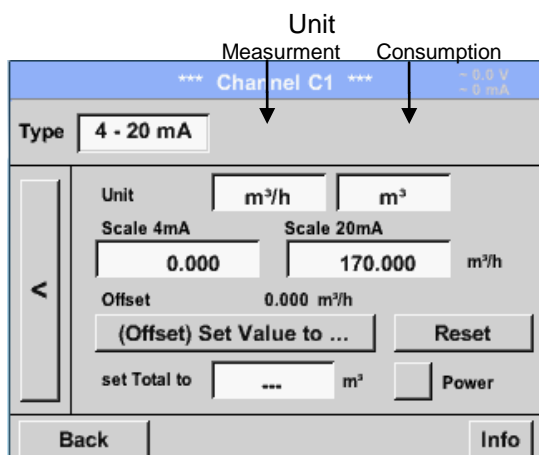

Selection of the units by pushing the text fields for the corresponding measurement and consumption units.

In addition, you can push the **scale buttons** for the min. and max. scaling values and set the measuring range.

Here we have **0 m³/h** for 4 mA and **170m³/h** for 20mA

In addition it is possible to enter a starting value for consumption entering **set Total to** field e.g. to take over value from an old counter.

Remark:

The Textfield „Unit-Consumption“ is only editable in case of measurement values(Units) with volume per time unit and thus also the consumption calculation.

For labeling and setting of the description fields see also chapter [10.3.2.1.2.8 label and setting the deception field](#)

CS Instruments GmbH

Konformitätserklärung

Mobile Taupunkt -Messgeräte **DP 500 / DP 510**

Die CS Instruments GmbH als Hersteller erklärt hiermit, dass o.g. Messgerät den Anforderungen folgender Richtlinien entspricht:

Elektromagnetische Verträglichkeit	2004/108/EG
Niederspannungsrichtlinie	2006/95/EG

Zur Beurteilung des Gerätes wurden folgende Normen herangezogen:

Elektromagnetische Verträglichkeit

Störaussendung:	EN 61326-1: 2013-07 EN 61000-3-2 : 2006-10
Störfestigkeit:	EN 61326-1: 2013-07

Niederspannungsrichtlinie

Sicherheit	EN 61010-1: 2010-06
-------------------	----------------------------


Anbringungsjahr der CE-Kennzeichnung: 13

Das Produkt ist mit dem abgebildeten Zeichen gekennzeichnet



CS Instruments GmbH
Zindelsteiner Str. 15
78052 VS-Tannheim
Tel. 07705 978 99-0
Fax 07705 978 99-20

Tannheim 10. Dezember 2013


Wolfgang Blessing, Geschäftsführer

Diese Erklärung beinhaltet keine Zusicherung von Eigenschaften.
Die Sicherheitshinweise der mitgelieferten Produktdokumentation sind zu beachten.



报告编号(Report ID): H11133012221D~1

锂电池UN38.3测试报告

Lithium Battery UN38.3 Test Report

样品名称 (Sample Description)	Lithium-ion Battery 238700
委托单位 (Applicant)	Jauch Quartz GmbH-Batteries
生产单位 (Manufacturer)	Jauch Quartz GmbH-Batteries

PONY 谱尼测试
Pony Testing International Group
www.ponytest.com

No.: H11133012221D
Code: ssak93kqy



Pony Testing International Group

I. SAMPLE DESCRIPTION

Sample Name	Lithium-ion Battery		Battery Type	238700	
Client	Jauch Quartz GmbH-Batteries				
Manufacturer	Jauch Quartz GmbH-Batteries				
Nominal Voltage	7.2V	Rated Capacity	2600mAh	Limited Charge Voltage	8.56±0.025V
Charge Current	1250mA	Maximum Continuous Charge Current	2600mA	End Charge Current	100mA
Cut-off Voltage	5.5V	Maximum Discharge Current	5200mA	Use	---
Cells Number	2PCS	Cell Model	18650	Rated Capacity	2600mAh
Manufacturer of cell		Samsung SDI Co., Ltd			
Chemical component		Li-Ion			
Client date	2013-11-12		Finished date	2013-12-02	

II. REFERENCE METHOD

《United Nations Recommendations On The Transport Of Dangerous Goods, Manual Of Tests And Criteria》(ST/SG/AC.10/11/Rev.5/Amend.1).

III. TEST ITEM

- | | |
|------------------------|---------------------------|
| 1. Altitude simulation | 5. External short circuit |
| 2. Thermal test | 6. Impact |
| 3. Vibration | 7. Overcharge |
| 4. Shock | 8. Forced discharge |

IV. CONCLUSION

ITEM	SAMPLE NUMBER	STANDARD	CONCLUSION
Altitude simulation	N1~N4 C1~C4	UN38.3	PASS
Thermal test			PASS
Vibration			PASS
Shock			PASS
External short circuit			PASS
Impact	N9~N13		PASS
Overcharge	N5~N8 C5~C8		PASS
Forced discharge	N14~N23 C9~C18		PASS

The submitted battery and component cell were complied with the UN Manual of Tests and Criteria, Part III, sub-section 38.3.

Prepared by: *Pony Kwei Kwei*Checked by: *chengpeng*Approved by: *P. J. Yau*

Approval Date: December 2, 2013

PONY 谱尼测试
Pony Testing International Group

www.ponytest.com ☎Hotline 400-819-5688

Add: 北京市昌平区东大街49-3

Tel: (010) 82018118

Add: 天津市南开区红桥区南

Tel: (022) 27340730

Add: 上海市徐汇区平江路680号

Tel: (021) 64851999

Add: 宁波市海曙区新南路150号

Tel: (0574) 8776499

Add: 深圳市福田区福安路199

Tel: (0755) 26000000

Add: 广州市海珠区新港路189号

Tel: (020) 89224310

Add: 青岛市崂山区海泊路199

Tel: (0532) 88786000