

■ Product specification code check

Compare the specification code on the case with the following to make sure it is the product you ordered.

● CODE SELECTION TABLE

Item	Code	Specification
1. Series	SR91-	48×48 DIN size Digital Controller
2. Input	8	Universal input Thermocouple, R.T.D., Voltage (mV)
	4	Current (mA)
	6	Voltage (V)
3. Control output (1)	Y-	Contact
	I-	Current
	P-	SSR drive voltage
	V-	Voltage
4. Power supply	90-	100 to 240V AC ±10% 50/60Hz
	08-	24V AC/DC ±10% 50/60Hz
5. Event (Option)	0	None
	1	Event output
6. Option ● Control output (2) ● Heater break alarm ● Analog output ● Communication ● DI	N	None
	Y	Control output (2) Contact
	I	Control output (2) Current
	P	Control output (2) SSR drive voltage
	V	Control output (2) Current
	1	Heater break alarm 30A *1
	2	Heater break alarm 50A *1
	3	Analog output 0 to 10mV DC
	4	Analog output 4 to 20mA DC
	6	Analog output 0 to 10V DC
	5	Communication RS-485
	8	DI (set value bias, STBY, or ACT) 1 point
7. Remarks	0	Without
	9	With (Please consult before ordering)

Item	Code	Specification
1. Series	SR92-	72×72mm DIN size Digital Controller
2. Input	8	Universal input Thermocouple, R.T.D., Voltage (mV)
	4	Current (mA)
	6	Voltage (V)
3. Control output (1)	Y-	Contact
	I-	Current
	P-	SSR drive voltage
	V-	Voltage
4. Control output (2)	N-	None
	Y-	Contact
	I-	Current
	P-	SSR drive voltage
5. Power supply	90-	100 to 240V AC ±10% 50/60Hz
	08-	24V AC/DC ±10% 50/60Hz
6. Event Event output + heater break alarm	0	None
	1	Event output
	2	Event output + heater break alarm 30A *1
	3	Event output + heater break alarm 50A *1
7. Analog output	0	None
	3	0 to 10mV DC
	4	4 to 20mA DC
	6	0 to 10V DC
8. Communication or DI	0	None
	5	RS-485
	7	RS-232C
	8	DI (set value bias, STBY, or ACT) 1 point
9. Remarks	0	Without
	9	With (Please consult before ordering)


Item	Code	Specification
1. Series	SR93- SR94-	96×96 DIN size Digital Controller 96×48 DIN size Digital Controller
2. Input	8	Universal input Thermocouple, R.T.D., Voltage (mV)
	4	Current (mA)
	6	Voltage (V)
3. Control output (1)	Y-	Contact
	I-	Current
	P-	SSR drive voltage
	V-	Voltage
4. Control output (2) (Option)	N-	None
	Y-	Contact
	I-	Current
	P-	SSR drive voltage
5. Power supply	90-	100 to 240V AC ±10% 50/60Hz
	08-	24V AC/DC ±10% 50/60Hz
6. Event Event output + heater break alarm (Option)	0	None
	1	Event output
	2	Event output + heater break alarm 30A *1
	3	Event output + heater break alarm 50A *1
	00	None
	30	Analog output 0 to 10mV DC
	40	Analog output 4 to 20mA DC
	60	Analog output 0 to 10V DC
	08	DI (set value bias, STBY, or ACT) 1 point
	38	Analog output 0 to 10mV DC + DI (set value bias, STBY, or ACT) 1 point
	48	Analog output 4 to 20mA DC + DI (set value bias, STBY, or ACT) 1 point
	68	Analog output 0 to 10V DC + DI (set value bias, STBY, or ACT) 1 point
	05	Communication RS-485
	07	Communication RS-232C
9. Remarks	0	Without
	9	With (Please consult before ordering)

*1: Selectable only when Control Output 1 is Y or P.

产品中有毒有害物质或元素的名称及含量

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印制电路板	×	○	○	○	○	○
电子元器件	×	○	○	○	○	○
接线端子	○	○	○	○	○	○
外壳	○	○	○	○	○	○
○: 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006 标准规定的限量要求以下。						
×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006 标准规定的限量要求。						

■ Names and functions of parts on front panel

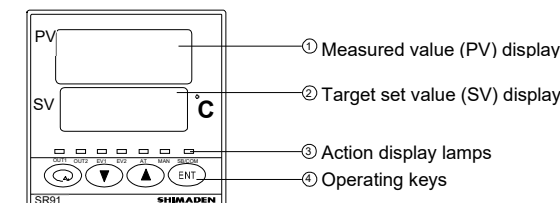


Name	Function
① Measured value (PV) display:	(1) Present measured value (PV) is displayed on the screen group 0, basic screen and output display screens (OUT1 and OUT2). (red) (2) Type of parameter is shown on each parameter screen. (3) The decimal point at the lowest digit flashes when the controller is in standby (STBY) mode.
② Target set value (SV) display:	(1) Target set value (SV) is displayed on the basic screen of the screen group 0. (green) (2) Present output value is displayed by % on control output monitor screens (OUT1, OUT2) of the screen group 0. (3) Selected item and set value are displayed on each parameter screen.
③ Action display lamps:	(1) Control output indicators: OUT1 and OUT2 (option) (green) - OUT1 lights up when output turns ON and goes out when it turns OFF during contact or SSR drive voltage output. - The brightness changes in proportion to output increase/decrease during current or voltage output. - OUT2 functions only if the option is added. (2) Event output indicators: EV1/EV2 (option) (orange) - Light up when assigned events (including heater break/heater loop alarm) turn ON if event option is added. (3) Auto tuning action indicator: AT (green) - Flashes when ON is selected by key on the AT action selection screen and AT is executed by key, and goes out when AT terminates automatically or is released. (4) Manual control output action indicator: MAN (green) - Flashes when manual control output is selected on control output display screens (OUT1, OUT2). Goes out when automatic (PID) control output is executed. (5) Set value bias/communication indicator: SB/COM (option) (green) - Lights up when optional DI function is added, SB (set value bias) is assigned to it, and at the time of shorting across the DI terminal (set value bias in action). - Lights up when optional communication function is added and COM mode is selected. Goes out when Local is selected for communication mode.
④ Operating keys:	(1) (parameter) key - Pressing this key on any screen of the screen group 0 and the screen group 1 calls the next screen onto display. - When pressed continuously for 3 seconds, this key functions to move between the basic screen of screen group 0 and the initial screen of screen group 1. - Pressing this key simultaneously with key in the screen group 1 calls the preceding screen onto display. (2) (down) key - When pressed on a parameter screen, the decimal point at the lowest digit flashes and the set data decreases or moves backward. (3) (up) key - When pressed on a parameter screen, the decimal point at the lowest digit flashes and the set data increases or moves forward. (4) (entry/registration) key - Used to register a set data changed by means of or key on a parameter screen. - Pressing this key simultaneously with key on a screen of the screen group 1 calls the preceding screen onto display. - When pressed continuously for 3 seconds on the control output screens (OUT1, OUT2), or pressing + key functions to switch between automatic output and manual output.

■ Parameter Schematic Diagram

This instruction manual explains easy operation about SR90 series. Please download the Instruction Manual (Detailed Version) from our website to refer to all except for following setting.

- Measuring rang setting
- Event output setting (Deviation alarm/Absolute value Alarm)
- Operation mode setting (PID control mode, ON/OFF (2-position control mode))
- Output characteristics switching
- Measured value (PV) correction

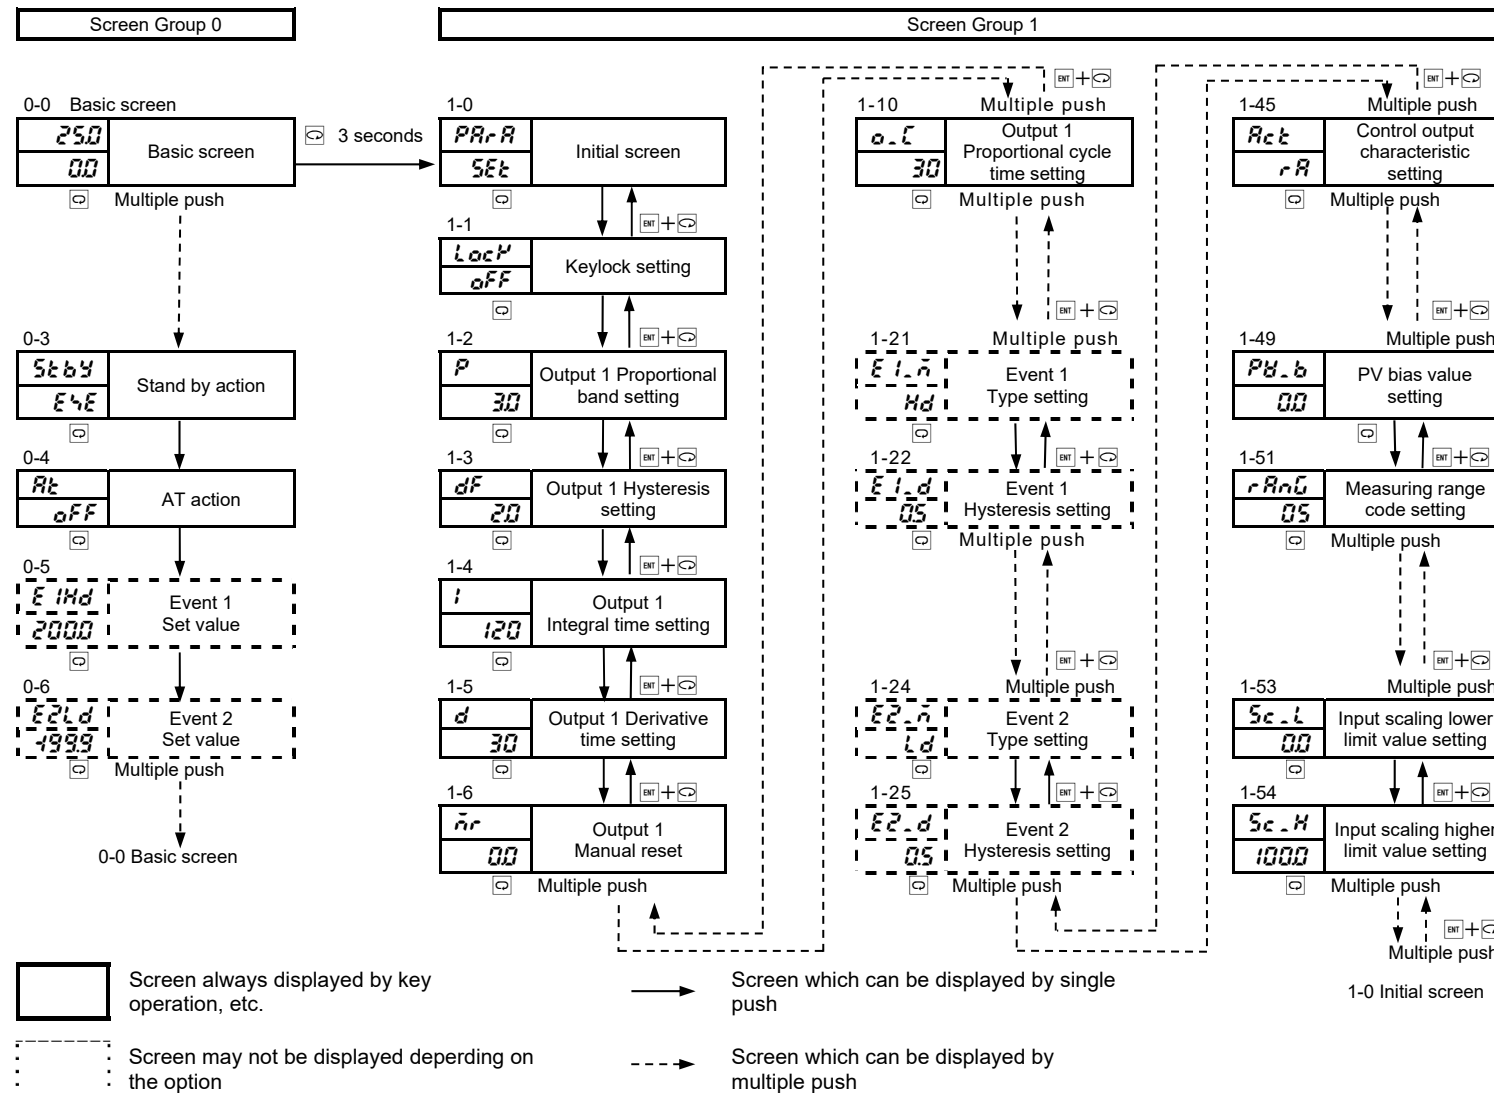

Measuring Range Codes

Select a measuring range from the following table.

A change of the code will initialize all data related to the measuring range.

Input type		Code	Measuring range (°C)	Measuring range (°F)
Universal Input	Thermocouple	B *1	0 to 1800	0 to 3300
		R	0 to 1700	0 to 3100
		S	0 to 1700	0 to 3100
		K *2	-199.9 to 400.0	-300 to 750
			0 to 800.0	0 to 1500
			0 to 1200	0 to 2200
		E	0 to 700	0 to 1300
		J	0 to 600	0 to 1100
		T	-199.9 to 200.0	-300 to 400
		N	0 to 1300	0 to 2300
	Kelvin	PL II *3	0 to 1300	0 to 2300
		C(WRe5-26)	0 to 2300	0 to 4200
		U *4	-199.9 to 200.0	-300 to 400
		L *4	0 to 600	0 to 1100
		K	10.0 to 350.0 K	10.0 to 350.0 K
		AuFe-Cr	0.0 to 350.0 K	0.0 to 350.0 K
		K	10 to 350 K	10 to 350 K
		AuFe-Cr	0 to 350 K	0 to 350 K
	R.T.D.	Pt100	-200 to 600	-300 to 1100
			-100.0 to 100.0	-150.0 to 200.0
			-50.0 to 50.0	-50.0 to 120.0
			0.0 to 200.0	0.0 to 400.0
		JPt100	-200 to 500	-300 to 1000
			-100.0 to 100.0	-150.0 to 200.0
Voltage	mV		-10 to 10mV	
			0 to 10mV	
			0 to 20mV	
			0 to 50mV	
			10 to 50mV	
			0 to 100mV	
	V		-1 to 1V	
			0 to 1V	
			0 to 2V	
			0 to 5V	
			1 to 5V	
			0 to 10V	
Current	mA		0 to 20mA	
			4 to 20mA	

Thermocouple: B, R, S, K, E, J, T, N, C(WRe5-26): JIS/IEC

R.T.D.: Pt100: JIS/IEC, JPt100: Former JIS

*1 Thermocouple B: Accuracy guarantee not applicable to 400°C (752°F) and below.

*2 Thermocouple K, T, U: Accuracy of those whose readings are below -100°C is $\pm(0.7\% \text{ FS} + 1 \text{ digit})$

*3 Thermocouple PLII: Platinel

*4 Thermocouple U, L: DIN 43710

*5 Thermocouple K: Accuracy is as follows;

Temperature range	External CJ	Internal CJ	Temperature range	External CJ	Internal CJ
10.0 to 30.0 K	$\pm(2.0\% \text{ FS} + 40^\circ \text{C} + 1 \text{ digit})$		0.0 to 30.0 K	$\pm(0.7\% \text{ FS} + 6^\circ \text{C} + 1 \text{ digit})$	
30.0 to 70.0 K	$\pm(1.0\% \text{ FS} + 14^\circ \text{C} + 1 \text{ digit})$		30.0 to 70.0 K	$\pm(0.5\% \text{ FS} + 3^\circ \text{C} + 1 \text{ digit})$	
70.0 to 170.0 K	$\pm(0.7\% \text{ FS} + 6^\circ \text{C} + 1 \text{ digit})$		70.0 to 170.0 K	$\pm(0.3\% \text{ FS} + 3.6^\circ \text{C} + 1 \text{ digit})$	
170.0 to 270.0 K	$\pm(0.5\% \text{ FS} + 3^\circ \text{C} + 1 \text{ digit})$		170.0 to 280.0 K	$\pm(0.3\% \text{ FS} + 2^\circ \text{C} + 1 \text{ digit})$	
270.0 to 350.0 K	$\pm(0.3\% \text{ FS} + 2^\circ \text{C} + 1 \text{ digit})$		280.0 to 350.0 K	$\pm(0.5\% \text{ FS} + 2^\circ \text{C} + 1 \text{ digit})$	

NOTE: Do not use the above sensors (current/voltage, thermocouple, R.T.D.) for the measurement of power supply line.

NOTE: Unless otherwise specified, the measuring range listed below will be set as the factory default.

Input	Specification/Rating	Measuring Range
Universal input	K thermocouple	0.0 to 800.0°C
Voltage (V)	0 to 10V DC	0.0 to 100.0
Current (mA)	4 to 20mA DC	0.0 to 100.0

Setting of Various Parameters


Display the various parameters, select the desired value through Δ , ∇ keys and confirm through ENT key.

MEASURING RANGE SETTING


Input type and scaling are set according to the sensor connected to this equipment.

By changing these parameters, registered data are initialized.

Example 1) When input is Pt100, 0.0–200.0°C:

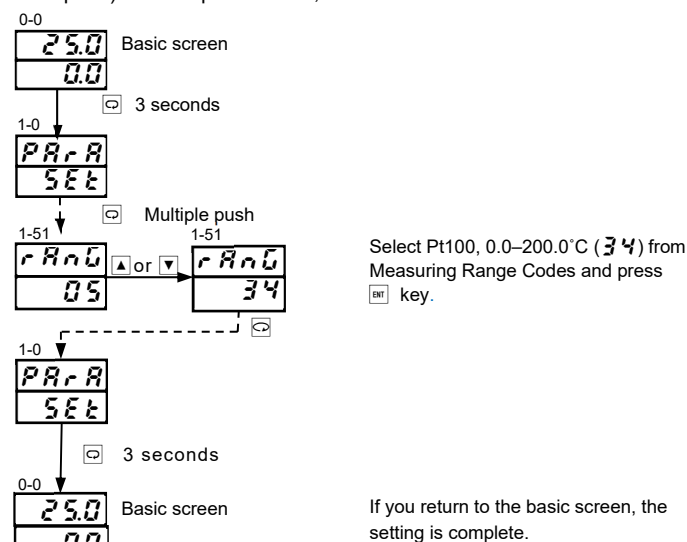



Example 2) When input is 1–5 V DC, and scaling is -5.00–5.00:

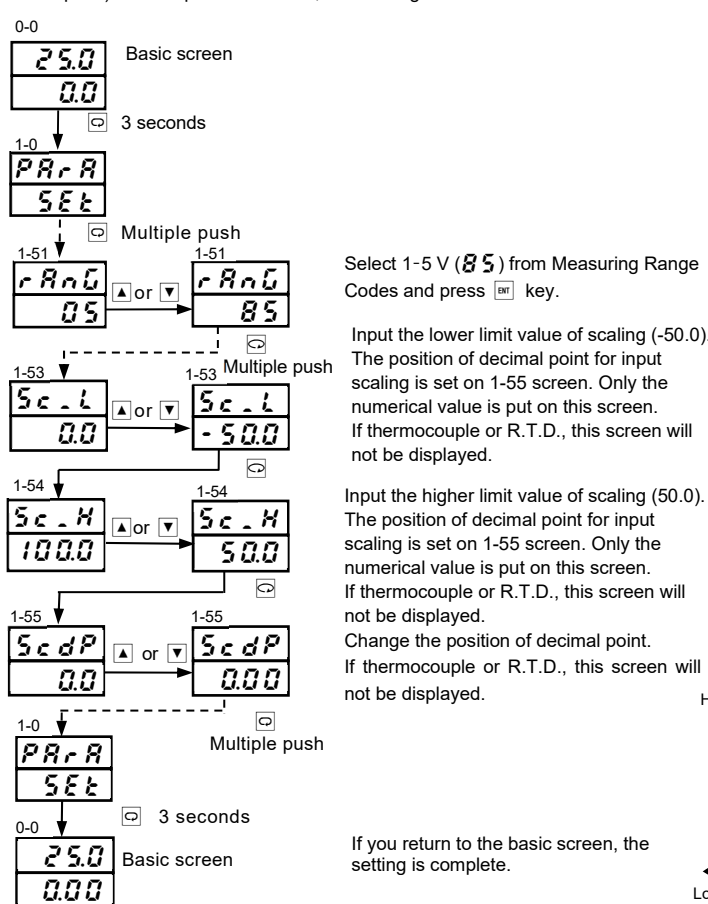


Event Output Setting

This shows event action mode setting and action position setting method.

Example) When operating the higher/lower deviation alarm at $\pm 3^\circ\text{C}$

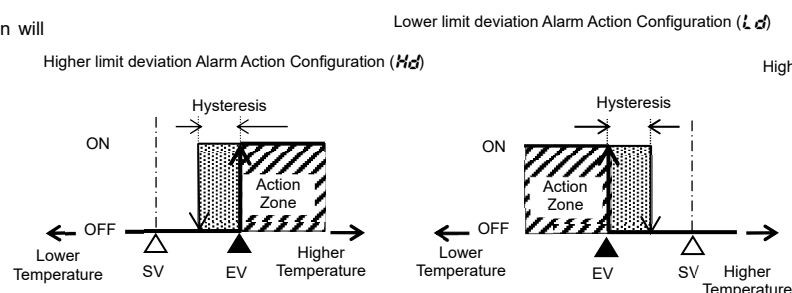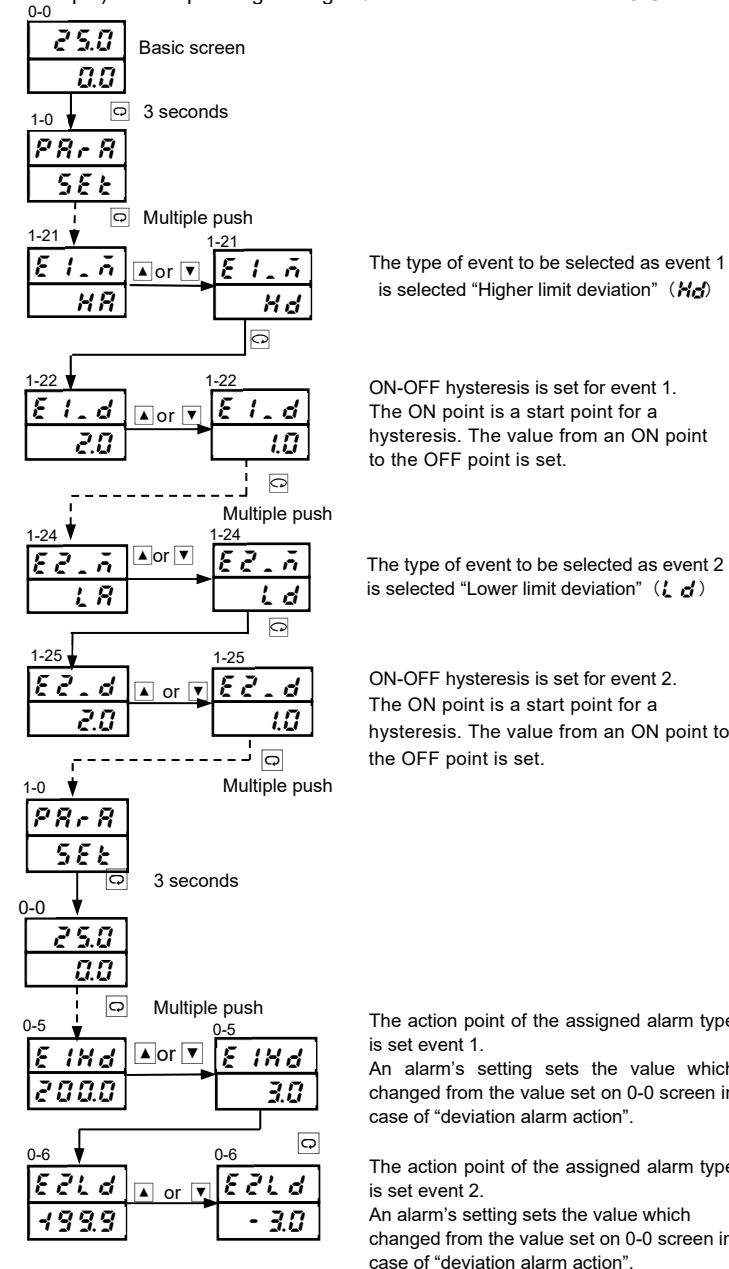


Higher limit deviation Alarm Action Configuration (Hd)

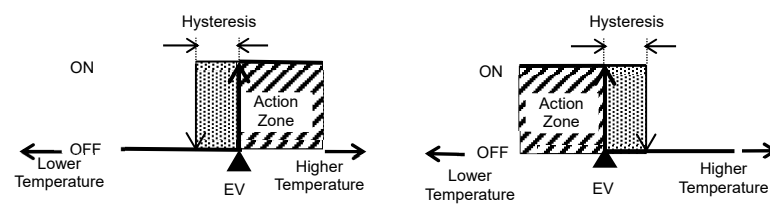

Lower limit absolute value Alarm Action Configuration (LA)

Example) when operating the higher/lower absolute value alarm at 100.0°C

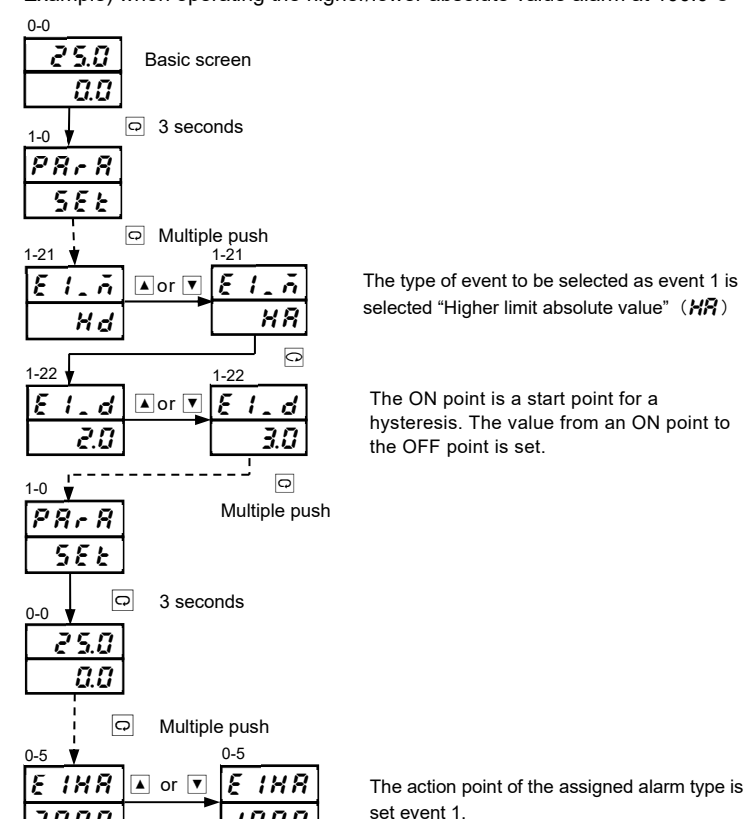

*Table of Event TYPE (Alarm Type) Codes
 (USE IN 1-21 SCREEN AND 1-24 SCREEN)


Code	Type of event	Remarks
OFF	No selection	
Hd	Higher limit deviation	Initial value of event 1
Ld	Lower limit deviation	Initial value of event 2
od	Outside higher/lower limit deviation	
id	Within higher/lower limit deviations	
HA	Higher limit absolute value	
LA	Lower limit absolute value	
So	Scaleover	Standby action is invalid.
Hb	Heater break/loop alarm	Displayed only when the option is added.

OPERATION MODE SETTING

This shows PID control mode setting and ON/OFF (2-position) control mode setting method.


PID control mode

The operation mode already set PID control mode at Factory-set. When using by a PID control mode, please carry out auto-tuning of following procedure.

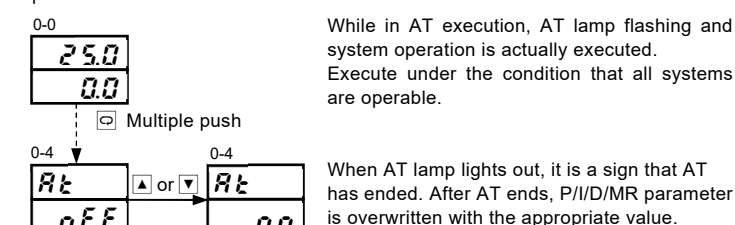


ON/OFF (2-position) control mode

To change to ON-OFF (2-position) action, set to OFF proportional band

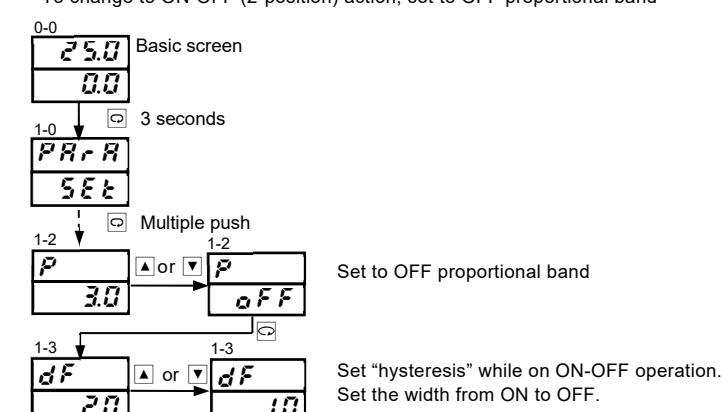

Output characteristics switching

This shows the switching setting method of control output characteristics.

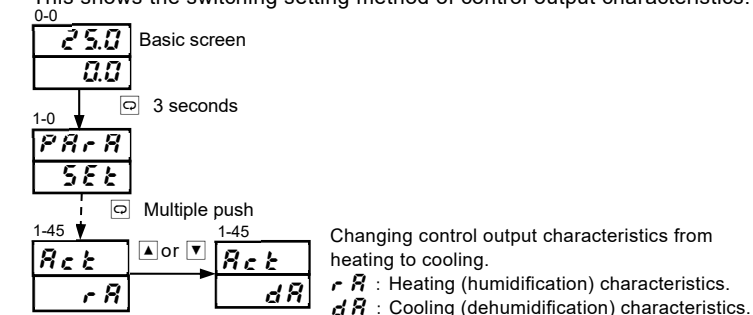

Measured value (PV) correction

This shows the correction method of measured value (PV).

Example) When making a subtraction correction by +1.0°C

